



[Manuals.plus](#) /

› [StarAndDaisy](#) /

› StarAndDaisy EasyGo Baby Stroller (Model JBB X1) Instruction Manual

StarAndDaisy EasyGo

StarAndDaisy EasyGo Baby Stroller (Model JBB X1) Instruction Manual

Your Partner in Safe and Comfortable Journeys

1. INTRODUCTION

Thank you for choosing the StarAndDaisy EasyGo Baby Stroller. This manual provides essential information for the safe assembly, operation, and maintenance of your stroller. Please read it thoroughly before use and retain it for future reference. Ensure all users are familiar with its contents.

2. SAFETY INFORMATION

- Always secure your child with the 5-point safety harness.
- Never leave your child unattended in the stroller.
- Ensure the stroller is fully open and locked before placing a child inside.
- Engage the brakes when the stroller is stationary.
- Do not overload the storage basket or hang bags on the handle, as this may cause instability.
- Avoid placing hot liquids or heavy items in the cup holder.
- Regularly inspect the stroller for loose parts, damaged components, or worn fabric. Discontinue use if any damage is found.
- Keep children away from moving parts during adjustment or folding.
- This stroller is designed for children aged 0-3 years.

3. PACKAGE CONTENTS

Please verify that all components are present before assembly:

- Stroller Frame with Seat
- Convertible Bassinet (if included in your model)
- Canopy
- Front Wheels (2)

- Rear Wheels (2)
- Handlebar
- Bumper Bar / Food Tray
- Instruction Manual



Figure 3.1: StarAndDaisy EasyGo Stroller with convertible bassinet.

4. SETUP GUIDE

4.1 Unfolding the Stroller

1. Place the folded stroller on a flat surface.
2. Release any locking mechanisms that keep the stroller folded.
3. Lift the handlebar upwards until the frame clicks into place, indicating it is fully open. Verify that all locking mechanisms are securely engaged.

4.2 Attaching Wheels

1. Insert the front wheels into the designated slots on the front legs of the stroller until they click securely.
2. Attach the rear wheels to the rear axle by pushing them firmly until they lock into position.

4.3 Attaching Canopy

1. Align the canopy's attachment points with the corresponding slots on the stroller frame near the handlebar.
2. Push firmly until the canopy is securely attached.

4.4 Attaching Bumper Bar / Food Tray

1. Locate the attachment points on the stroller frame for the bumper bar or food tray.
2. Insert the bumper bar/food tray until it clicks into place. Ensure it is firmly secured before use.

Your browser does not support the video tag.

Video 4.1: Demonstration of general stroller assembly and features (StarAndDaisy Meta Luxe Stroller). Features may vary slightly by model.

5. OPERATING INSTRUCTIONS

5.1 Adjusting Seat Recline

The stroller features multiple recline positions for your child's comfort. Locate the recline adjustment mechanism, typically a lever or strap system, behind the seat. Follow the instructions on the mechanism to adjust the seat to the desired angle.

5.2 Adjusting Footrest

The footrest can be adjusted to provide optimal support for your child's legs. Locate the buttons or levers on either side of the footrest. Press them simultaneously and adjust the footrest to the desired height.

5.3 Using the 5-Point Safety Harness

To secure your child, place them in the seat and bring the shoulder straps over their shoulders, the waist straps around their waist, and the crotch strap between their legs. Insert the buckles into the central buckle until they click. Adjust the straps for a snug, secure fit. To release, press the button on the central buckle.

5.4 Adjusting Canopy

The canopy can be extended or retracted to provide shade and protection. Simply pull the canopy forward or push it back to adjust its position. Some models may include a peek-a-boo window for easy viewing of your child.

5.5 Using Brakes

The stroller is equipped with rear wheel brakes. To engage the brakes, press down firmly on the brake pedal located near the rear wheels. Ensure both brakes are fully engaged when the stroller is stationary. To release, lift the brake pedal upwards.

5.6 Reversible Handle (if applicable)

Some models feature a reversible handle, allowing you to switch the direction your child faces. Locate the release buttons on either side of the handlebar. Press them and pivot the handle to the desired position until it locks securely.

Your browser does not support the video tag.

Video 5.1: Demonstration of reversible handle, recline, canopy, and wheel features (StarAndDaisy Luna Luxe Stroller). Features may vary slightly by model.

5.7 Folding the Stroller

The EasyGo stroller features a one-push folding mechanism for convenience. Ensure the seat is in an upright position and the canopy is retracted. Locate the folding mechanism (often a button or lever on the handlebar or seat). Activate the mechanism and follow the stroller's natural folding motion until it is compact and locked. Refer to Figure 5.1 for visual guidance.



Figure 5.1: Step-by-step guide to folding the StarAndDaisy EasyGo Stroller.

6. MAINTENANCE

6.1 Cleaning

- **Fabric Parts:** Wipe clean with a damp cloth and mild soap. Do not use harsh detergents or bleach. Air dry thoroughly.
- **Frame:** Wipe the metal and plastic parts with a soft, damp cloth. Dry immediately to prevent rust.
- **Wheels:** Regularly clean debris from the wheels and axles to ensure smooth operation.

6.2 Storage

Store the stroller in a clean, dry place away from direct sunlight and extreme temperatures. Ensure it is completely dry before storing to prevent mold or mildew.

7. TROUBLESHOOTING

- **Stroller does not unfold/fold smoothly:** Check for any obstructions or ensure all locking mechanisms are properly disengaged/engaged. Ensure the backrest is released before folding.
- **Wheels are stiff/squeaky:** Clean any debris from the wheels and axles. Apply a small amount of silicone-based lubricant if necessary.
- **Brakes are not engaging:** Check for obstructions around the brake mechanism. Ensure the brake pedal is fully depressed.

8. SPECIFICATIONS

Feature	Detail
Brand	StarAndDaisy
Model Name	EasyGo (JBB X1)
Material	Metal, Polyester
Frame Material	Aluminium
Harness Type	5 Point
Item Weight	10 kg
Package Dimensions	115 x 88 x 42 cm
Suitable Age	0-3 Years
Folded Size	32 x 60 x 71 cm
Color	Blue

Easy Go Baby Stroller

Compact, easy to carry, mobile crib

Brand modal number	JBB X1	Suitable age:	0-3 year
Sleep blue width	39cm	Sleeping Blue Length	80cm
Seat off the ground	58cm	Folded size	32x60x71 cm
Cart the weight	15kg	Cart Gross weight	9.9kg

Reminder: Manual measurement, the data may have errors of plus or minus 1-2cm, please



Figure 8.1: Detailed dimensions of the StarAndDaisy EasyGo Stroller.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please contact StarAndDaisy customer service through their official website or the retailer where the product was purchased. Keep your proof of purchase for

warranty claims.

© 2026 StarAndDaisy. All rights reserved.