

[Manuals.plus](#) /

> [Jesebang](#) /

> Jesebang by-02 Wireless Earbuds Instruction Manual

## Jesebang by-02

# Jesebang by-02 Wireless Earbuds Instruction Manual

Model: by-02 | Brand: Jesebang

## INTRODUCTION

---

Thank you for choosing the Jesebang by-02 Wireless Earbuds. These earbuds are designed to provide a high-quality audio experience with advanced features such as Bluetooth 5.2 connectivity, immersive stereo sound, extended battery life, and IP7 waterproofing. This manual will guide you through the setup, operation, and maintenance of your new earbuds to ensure optimal performance and longevity.

# immersive Sound Quality



13mm  
Dynamic Drivers



Distortion  
Factor < 3%



Audio Codec



## Premium HiFi Sound

Featured with advanced technology & powerful bass sound performance each earbud enables you to enjoy crystal clear High stereo sound.



Image: Jesebang by-02 Wireless Earbuds in their charging case.

## WHAT'S IN THE BOX

Upon opening your Jesebang by-02 package, you should find the following items:

- Jesebang by-02 Wireless Earbuds (Left and Right)
- Charging Case
- USB Type-C Charging Cable
- Multiple Sizes of Ear Tips (Small, Medium, Large)
- User Manual

Your browser does not support the video tag.

Video: Unboxing and initial setup of the Jesebang by-02 Wireless Earbuds, demonstrating included accessories and basic functions.

## SETUP

### 1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case. The charging case has a built-in 400mAh battery, providing up to 40 hours of total playtime with multiple charges.

1. Place the earbuds into the charging case. Ensure they are correctly seated; the indicator lights on the earbuds will show charging status.
2. Connect the USB Type-C charging cable to the charging port on the case and plug the other end into a USB power adapter (not included).
3. The LED light display on the charging case will indicate the battery consumption. A full charge for the case takes approximately 1.5 hours.



Image: Close-up of the USB Type-C charging port on the earbud case.

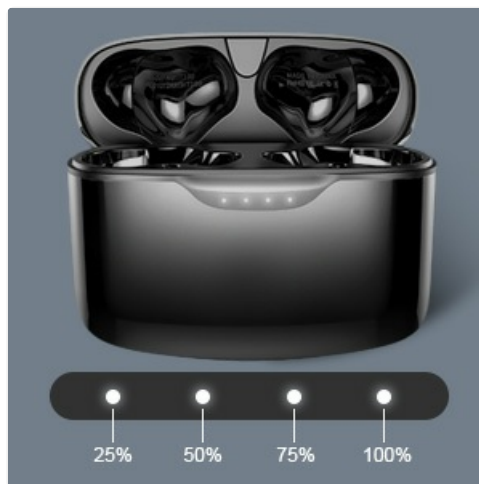


Image: Jesebang by-02 earbuds in their charging case, showing LED battery indicators.

## 2. Bluetooth Pairing

The earbuds feature one-step pairing for convenience.

1. Ensure your device's Bluetooth is turned on.
2. Open the charging case and take out both earbuds. They will automatically power on and enter pairing mode.
3. On your device, search for Bluetooth devices and select **"IT100"** from the list.
4. Once connected, you will hear a confirmation prompt, and the earbuds will be ready for use.
5. For subsequent uses, the earbuds will automatically connect to the last paired device when taken out of the case.



## Ergonomic Design For Extended Wear

Image: A smartphone displaying the Bluetooth pairing screen, showing "IT100" as an available device.

### OPERATING INSTRUCTIONS (TOUCH CONTROLS)

The Jesebang by-02 earbuds feature intuitive touch controls. The touch sensor is located on the outer surface of each earbud.

## Long Battery Life Support Type-C Fast Charge

- 8 Hrs  
 Single Charge Earbud
- 5 Time  
 Charging Times for Earbud
- 40 Hrs  
 Total Time Using in Turn

Image: Diagram illustrating the multifunctional touch controls on the earbuds.

Function	Action
Play/Pause Music	Single tap on either L or R earbud.

Function	Action
Next Track	Double tap on the <b>Right</b> earbud.
Previous Track	Double tap on the <b>Left</b> earbud.
Increase Volume	Press and hold the <b>Right</b> earbud for 2 seconds.
Decrease Volume	Press and hold the <b>Left</b> earbud for 2 seconds.
Answer/Hang Up Call	Single tap on either L or R earbud during an incoming call or active call.
Reject Call	Press and hold either L or R earbud for 2 seconds during an incoming call.
Activate Voice Assistant (Siri, Google Assistant)	Triple tap on either L or R earbud.

## WEARING THE EARBUDS

For optimal sound quality and comfort, ensure a proper fit. The earbuds come with multiple sizes of soft rubber ear tips.

1. Choose the ear tips that provide the best seal and comfort for your ears. A good seal is crucial for bass response and noise isolation.
2. Gently insert the earbud into your ear canal and twist slightly to secure it. The ergonomic design ensures a snug fit for extended wear.



Image: Different sizes of ear tips (Small, Medium, Large) for a customizable fit.

## MAINTENANCE

### Cleaning

Regular cleaning helps maintain sound quality and hygiene.

- Use a soft, dry, lint-free cloth to wipe the earbuds and charging case.
- Gently remove any earwax or debris from the ear tips and speaker mesh using a small brush or cotton swab.
- Do not use abrasive cleaners, alcohol, or chemical sprays.

## Water Resistance (IP7)

The Jesebang by-02 earbuds are IP7 waterproof, meaning they are protected against immersion in water up to 1 meter for up to 30 minutes. This makes them suitable for workouts and outdoor activities, protecting against sweat and rain.

- Ensure the earbuds are completely dry before placing them back into the charging case to prevent damage.
- The charging case is **not** waterproof. Avoid exposing the charging case to water.



Image: Earbuds shown with water splashes, indicating their IP7 waterproof capability.

## TROUBLESHOOTING

---

If you encounter any issues with your Jesebang by-02 earbuds, refer to the following common solutions:

Problem	Solution
Earbuds not pairing with device.	<ul style="list-style-type: none"><li>◦ Ensure earbuds are charged and out of the case.</li><li>◦ Turn off and on your device's Bluetooth.</li><li>◦ Forget "IT100" from your device's Bluetooth list and try pairing again.</li><li>◦ Ensure no other devices are actively connected to the earbuds.</li></ul>
Only one earbud is working.	<ul style="list-style-type: none"><li>◦ Place both earbuds back into the charging case, close the lid, wait a few seconds, then take them out again.</li><li>◦ Ensure both earbuds are charged.</li><li>◦ Try resetting the earbuds (refer to manufacturer's specific reset instructions if available, otherwise re-pair).</li></ul>
Poor sound quality or low volume.	<ul style="list-style-type: none"><li>◦ Adjust the volume on both your device and the earbuds.</li><li>◦ Ensure ear tips provide a good seal in your ear canal. Try different sizes.</li><li>◦ Clean any debris from the earbud speakers.</li><li>◦ Move closer to your connected device to avoid interference.</li></ul>

Problem	Solution
Earbuds not charging.	<ul style="list-style-type: none"> <li>◦ Ensure the charging cable is securely connected to both the case and the power source.</li> <li>◦ Check if the charging case itself has power.</li> <li>◦ Clean the charging contacts on both the earbuds and inside the case.</li> <li>◦ Try a different USB Type-C cable or power adapter.</li> </ul>

## SPECIFICATIONS

Feature	Detail
Model Number	by-02
Bluetooth Version	5.2
Bluetooth Range	10 Meters
Audio Driver Size	13 Millimeters
Audio Latency	60 Milliseconds
Frequency Range	20 Hz - 20,000 Hz
Impedance	32 Ohms
Control Type	Touch Control
Water Resistance Level	IP7 Waterproof
Earbud Battery Life (Single Charge)	8 Hours
Total Playtime with Charging Case	40 Hours
Charging Case Battery Charge Time	1.5 Hours (Type-C)
Noise Control	Sound Isolation (ENC for calls)
Compatible Devices	Cellphones, Laptops (iOS, Android)

## WARRANTY AND SUPPORT

The Jesebang by-02 Wireless Earbuds come with a 2-year warranty. For any product inquiries, technical support, or warranty claims, please contact Jesebang customer service through the retailer where you purchased the product or refer to the contact information provided on the warranty card included in your package. Please retain your proof of purchase for warranty validation.

