

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [YIKHOM](#) /
- › YIKHOM Automatic Liquid Soap Dispenser Model YK102 User Manual

YIKHOM YK102

YIKHOM Automatic Liquid Soap Dispenser Model YK102 User Manual

Model: YK102 | Brand: YIKHOM

INTRODUCTION

Thank you for choosing the YIKHOM Automatic Liquid Soap Dispenser. This manual provides essential information for the safe and efficient use of your new device. Please read it thoroughly before operation and retain it for future reference.



Image: The YIKHOM Automatic Liquid Soap Dispenser in white, showing a hand beneath the sensor receiving a drop of liquid soap.

SAFETY INFORMATION

- Do not immerse the dispenser in water. The device is IPX4 waterproof, meaning it is resistant to splashing water, but not submersion.
- Keep out of reach of children unless supervised.
- Use only the provided USB-C cable for charging.
- Do not use corrosive chemicals to clean the dispenser.
- Avoid direct sunlight exposure for prolonged periods.
- Ensure the liquid used is compatible with automatic dispensers. Thick liquids may require dilution.

PRODUCT COMPONENTS

The YIKHOM Automatic Liquid Soap Dispenser consists of the following main parts:

- **Dispenser Head:** Contains the sensor, nozzle, power button, and volume adjustment buttons.
- **Liquid Reservoir:** The main body that holds the liquid soap.

- **USB-C Charging Port:** Located on the dispenser head for recharging the internal battery.
- **Indicator Lights:** Provide feedback on power status and volume settings.

Exquisite ABS Material

Eco-friendly, Safe, Odorless, Durable.

Smart Infrared Sensor

Touchless, Hygienically.

USB-C Charging Port

Charging 2-3 Hours, Last for 60 day.

Image: A detailed view highlighting the dispenser's ABS material, smart infrared sensor, and USB-C charging port.

SETUP

1. Charging the Dispenser

1. Locate the USB-C charging port on the side of the dispenser head.
2. Connect the provided USB-C cable to the port and the other end to a suitable USB power adapter (not included).
3. The indicator light will show charging status. A full charge typically takes 2-3 hours and can last up to 60 days.



Image: A hand pressing the power button on the dispenser's top panel.

2. Filling the Liquid Reservoir

1. Gently twist the dispenser head counter-clockwise to detach it from the liquid reservoir.



Image: An illustration showing the top part of the dispenser being twisted to separate it from the base.

2. Pour your desired liquid soap, hand sanitizer, facial cleanser, or shampoo into the reservoir. Do not overfill; the maximum capacity is 450mL (15.37 oz).



Image: A hand pouring blue liquid soap into the open reservoir of the dispenser.

3. Align the dispenser head with the reservoir and twist clockwise to secure it.



Image: An illustration showing the top part of the dispenser being twisted to secure it onto the base.

OPERATING INSTRUCTIONS

1. Power On/Off

- To turn on: Press and hold the power button (located on the top panel) for a few seconds until the

indicator light illuminates.

- To turn off: Press and hold the power button for a few seconds until the indicator light turns off.

2. Dispensing Liquid

- Once powered on, place your hand approximately 1-2 inches below the nozzle.
- The infrared motion sensor will detect your hand and dispense liquid automatically within 0.25 seconds.

3. Adjusting Dispensing Volume

The dispenser offers 5 adjustable volume settings to suit your needs.

- Use the small or large water drop buttons on the top panel to cycle through the 5 volume settings.
- The indicator lights will show the current volume level.



Image: A visual representation of the five adjustable dispensing volume levels, from smallest to largest.

MAINTENANCE

- **Cleaning:** Wipe the exterior of the dispenser with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Refilling:** Refer to the "Filling the Liquid Reservoir" section under Setup. Refill when the liquid level is low, visible through the transparent window.
- **Long-term Storage:** If not using for an extended period, empty the reservoir, clean the dispenser, and ensure it is fully charged before storing in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dispenser does not turn on.	Low battery or not charged.	Charge the dispenser using the USB-C cable.

Problem	Possible Cause	Solution
No liquid dispenses.	Reservoir is empty. Liquid is too thick. Sensor is obstructed or dirty. Dispenser is off.	Refill the reservoir. Dilute thick liquids with a small amount of water. Clean the sensor area. Ensure the dispenser is powered on.
Liquid drips after dispensing.	Excess liquid remaining in the nozzle.	This is usually minimal due to the anti-leak design. Ensure the dispenser is on a level surface.
Sensor not responding consistently.	Sensor is dirty. Hand placed too far or too close.	Clean the sensor area. Position hand 1-2 inches below the nozzle.

SPECIFICATIONS

Model Number	YK102
Brand	YIKHOM
Liquid Capacity	450 mL (15.37 oz)
Dimensions (L x W x H)	5" x 3" x 7.8"
Item Weight	15.2 ounces
Material	Acrylonitrile Butadiene Styrene (ABS)
Material Type Free	BPA Free, Lead Free, Nickle Free
Battery	1 Lithium Ion (included)
Charging Time	2-3 hours
Battery Life	Up to 60 days
Waterproof Rating	IPX4
Dispensing Speed	0.25 seconds
Noise Level	Less than 40dB
UPC	734557626290, 797439588734

WARRANTY AND SUPPORT

The YIKHOM Automatic Liquid Soap Dispenser comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use.

For warranty claims, technical support, or any questions regarding your product, please contact YIKHOM customer service. Refer to your purchase platform or the YIKHOM official website for contact details.

Please retain your proof of purchase for warranty validation.

