

ZACME KMA0271

ZACME 7.4QT Household Stand Mixer 800W Instruction Manual

Model: KMA0271

1. INTRODUCTION

Thank you for purchasing the ZACME 7.4QT Household Stand Mixer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read all instructions carefully before first use and retain this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not immerse the mixer base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils, away from beaters during operation to reduce the risk of injury to persons and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Do not let cord contact hot surfaces, including the stove.
- Remove beaters from mixer before washing.

3. PRODUCT OVERVIEW AND COMPONENTS

The ZACME 7.4QT Household Stand Mixer is designed for various kitchen tasks, featuring an 800W DC motor and a large capacity stainless steel bowl.

Main Unit and Accessories

The mixer comes with the main unit, a 7.4-quart stainless steel bowl, and three essential mixing accessories: a dough hook, a wire whisk, and a flat beater.



Image: ZACME 7.4QT Household Stand Mixer in black, shown with the stainless steel bowl and the three primary attachments (dough hook, whisk, beater) displayed separately.

5 PRACTICAL ATTACHMENTS

7.4QT Stainless Steel Bowl



Stainless Steel Bowl



Stand Mixer



Dough Hook



Whisk



Beater


Image: A visual breakdown of the mixer's main components: the stand mixer unit, the 7.4QT stainless steel bowl, dough hook, whisk, and beater.

Key Features

- **High Capacity:** 7.4-quart stainless steel bowl, suitable for mixing up to 3 kg (6.6 lbs) of dough.
- **Powerful Motor:** 800W DC motor for efficient mixing and kneading.
- **Variable 10-Speed Control:** Offers precise speed adjustments for various recipes.
- **Clear LED Display:** Shows operation time and settings, with a countdown timer function.
- **Tilt-Head Design:** Facilitates easy attachment changes and bowl removal.
- **Durable Construction:** Features metal gears and a robust housing.



Height Adjustable

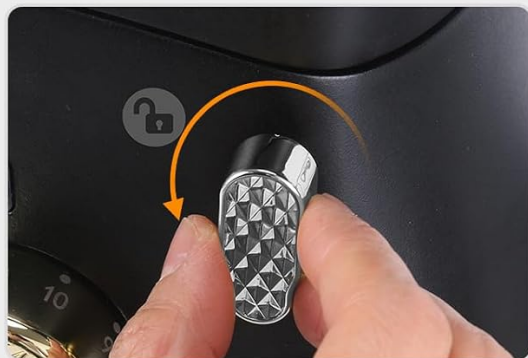

Convenient Tilting Lock



10 Speed Control



Countdown Time Function



7.4QT Stainless Steel Bowl With Double Handles



Strong Suction Chassis

Image: Close-up views illustrating key features: height-adjustable attachment, convenient tilting lock, 10-speed control knob, countdown time function display, 7.4QT stainless steel bowl with double handles, and strong suction chassis.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts listed in Section 3 are present.
2. **Placement:** Place the mixer on a clean, dry, and stable surface. Ensure adequate clearance around the mixer for operation and ventilation. The strong suction chassis helps secure the unit during use.
3. **Clean Before First Use:** Wash the stainless steel bowl, dough hook, whisk, and beater in warm, soapy water, then rinse and dry thoroughly. Wipe the main unit with a damp cloth.
4. **Attach Bowl:** Place the stainless steel bowl onto the base of the mixer and twist clockwise until it locks securely into place.
5. **Attach Accessory:**
 - Ensure the mixer is unplugged.
 - Press the tilt-head release button and lift the motor head.
 - Insert the desired attachment (dough hook, whisk, or beater) onto the attachment shaft, aligning the pin on the shaft with the groove on the attachment. Push up and twist to secure.

- Lower the motor head until it locks into place.

5. OPERATING INSTRUCTIONS

Before operating, ensure the mixer is properly set up and plugged into a suitable power outlet.

Speed Control

The mixer features a variable 10-speed control knob. Turn the knob clockwise to increase speed and counter-clockwise to decrease. Start at a lower speed and gradually increase as needed for your recipe.

- **Speeds 1-3 (Low):** Ideal for kneading heavy doughs with the dough hook.
- **Speeds 4-7 (Medium):** Suitable for mixing batters, creams, and light doughs with the flat beater.
- **Speeds 8-10 (High):** Best for whipping egg whites, cream, and meringues with the wire whisk.

Using Attachments




Whisk

Quickly whip liquids, egg white, cream



Beater

Ideal for mixing salad, creps, mashed potatoes

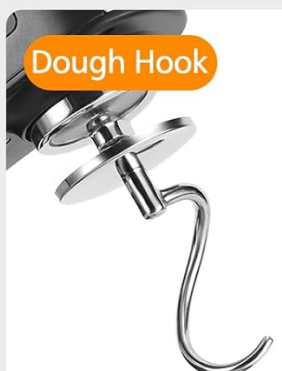

Dough Hook

Perfect ideal for kneading dough



Image: Visual guide for attachment usage: the whisk for whipping liquids like egg whites and cream; the beater for mixing salads, crepes, and mashed potatoes; and the dough hook for kneading dough for pizza, bread, and pasta.

- **Dough Hook:** Use for kneading yeast doughs for bread, pizza, and pasta. Maximum dough capacity is 3 kg

(6.6 lbs).

- **Flat Beater:** Use for mixing cakes, cookies, pastries, frostings, and mashed potatoes.
- **Wire Whisk:** Use for whipping eggs, cream, meringues, and light batters.

Timer Function

The LED display allows you to set a countdown timer for mixing tasks. This feature enables you to perform other tasks while the mixer operates.



Set working time after startup



Automatic time before startup



Image: Diagram showing the LED display with time and speed indicators. Instructions detail how to add/reduce 30 seconds, pause/restart, and set working time after startup or automatic time before startup.

- Use the '+' and '-' buttons to adjust the desired mixing time. Each press adds or reduces 30 seconds.
- The display will show the remaining time during operation.
- Press the pause/restart button to temporarily stop or resume mixing.

Optional Attachments

The ZACME stand mixer supports various expansion accessories (sold separately) such as pasta makers, slicers/shredders, and meat grinders, extending its versatility.

VERSATILE ACCESSORIES



Slicer



Noodle Maker 3in1



Noodle Maker Set



Meat Grinders



Juice Extractor



More



Image: Examples of versatile accessories that can be attached to the mixer, including a slicer, 3-in-1 noodle maker, meat grinder, and juice extractor.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your ZACME stand mixer.

- **Always unplug the mixer** before cleaning or removing attachments.
- **Stainless Steel Bowl and Attachments:** The stainless steel bowl, dough hook, wire whisk, and flat beater are dishwasher safe. Alternatively, wash them in warm, soapy water, rinse thoroughly, and dry immediately.
- **Main Unit:** Wipe the exterior of the mixer base with a damp cloth. Do not immerse the motor base in water or any other liquid.
- **Storage:** Store the mixer and its accessories in a clean, dry place.

7. TROUBLESHOOTING

If you encounter any issues with your ZACME stand mixer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet issue; speed knob not in 'OFF' position before starting.	Ensure the power cord is securely plugged in. Check the power outlet. Turn the speed knob to 'OFF' and then back to the desired speed.
Attachments are difficult to install/remove.	Motor head not fully tilted; attachment not aligned correctly.	Ensure the motor head is fully tilted back and locked. Align the attachment pin with the shaft groove before twisting to secure.
Unusual noise during operation.	Overloading; improper attachment installation.	Reduce the amount of ingredients. Ensure the attachment is correctly installed and locked. If the noise persists, contact customer support.
Mixer vibrates excessively.	Unstable surface; uneven load; suction cups not engaged.	Place the mixer on a flat, stable surface. Ensure ingredients are evenly distributed. Press down on the mixer to engage the suction cups.

For issues not listed here or if problems persist, please contact ZACME customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	ZACME
Model Name	ZACME 7.4QT Household Stand Mixer 800W
Item Model Number	KMA0271
Capacity	7.4 Quarts
Power	800W
Controls Type	Knob + LCD Panel
Product Dimensions	17.7"D x 9.8"W x 14.8"H
Item Weight	26.9 pounds
Noise Level	40 dB
Dishwasher Safe Parts	Bowl and Attachments (non-electric parts)
UPC	784956935042

9. WARRANTY AND SUPPORT

ZACME stands behind the quality of its products.

- **Warranty:** This product comes with a 2-year after-sale service guarantee.
- **Customer Service:** 24-hour customer service is available to effectively resolve any issues to your satisfaction.

For support, please visit the official ZACME store or contact their customer service directly.

[Visit the ZACME Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question