

LOMCA AKB74815301

LOMCA Replacement Remote Control User Manual

MODEL: AKB74815301

1. Introduction

This manual provides instructions for the LOMCA AKB74815301 replacement remote control. This remote is designed to function as a direct replacement for various LG Soundbar models, offering seamless operation without the need for programming or complex setup. Please read this manual carefully to ensure proper use and to maximize your experience with the product.

2. Compatibility

The LOMCA AKB74815301 remote control is compatible with the following LG Soundbar models:

- LAS454B
- SH3K
- LAS485B
- SJ7
- SJ9
- SJ4Y
- SK3D
- SK4D
- SK1
- SH3B
- SPH3B-W
- S45A1-D
- LAS453B
- SPH4B-W
- S55A3-D

This remote control is a direct replacement and does not require any programming or pairing with your soundbar.

3. Setup

3.1 Battery Installation

The remote control requires two (2) 1.5V AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Battery compartment with AAA batteries.

3.2 Initial Use

Once batteries are installed, the remote control is ready for immediate use with your compatible LG Soundbar. No additional setup or programming is required.



Image: Remote control highlighting ease of use and material.

4. Operating Instructions

Point the remote control directly at your LG Soundbar to operate. Ensure there are no obstructions between the remote and the soundbar.



Image: Front view of the remote control.

4.1 Button Functions

- **Power Button** (): Turns the soundbar on or off.
- **VOL + / -**: Adjusts the main volume level of the soundbar.
- **Mute Button** (): Mutes or unmutes the sound.
- **F (Function)**: Cycles through input sources (e.g., Optical, Bluetooth, HDMI ARC).
- **STANDARD**: Activates the standard sound effect mode.
- **VOICE**: Activates the voice enhancement sound effect mode.
- **CINEMA**: Activates the cinema sound effect mode.
- **DRC ON / OFF**: Toggles Dynamic Range Control on or off. DRC compresses the dynamic range of audio, making quiet sounds louder and loud sounds quieter, useful for late-night listening.
- **WOOFER LEVEL + / -**: Adjusts the bass level of the connected subwoofer.
- **AUTO POWER ON / OFF**: Toggles the auto power function, which allows the soundbar to turn on or off automatically with a connected device.

5. Maintenance

5.1 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new 1.5V AAA batteries. Do not mix old and new batteries, or different types of batteries.

5.2 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

6. Troubleshooting

- **Remote not working:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new 1.5V AAA batteries.
 - Ensure there are no obstructions between the remote control and the soundbar's sensor.
 - Confirm that the remote control is pointed directly at the soundbar.
- **Intermittent response:**
 - This may indicate low battery power. Replace the batteries.
 - Ensure you are within the effective operating range (typically up to 40 feet).

7. Specifications

Feature	Detail
Model Number	AKB74815301
Compatible Devices	LG Soundbars (specific models listed in Section 2)
Power Source	2 x 1.5V AAA Batteries (not included)
Material	ABS

Color	Black
Item Weight	1.23 ounces (approximately 35 grams)
Package Dimensions	4.8 x 4.09 x 1.06 inches

8. Warranty and Support

For any issues or questions regarding your LOMCA replacement remote control, please contact the seller or retailer from whom you purchased the product. They can provide assistance with troubleshooting, returns, or replacements according to their policies.