

MEIRUBY MEIRUBY M-15

MEIRUBY M-15 Electric Candle Lighter Instruction Manual

Model: M-15
Brand: MEIRUBY

1. INTRODUCTION

Thank you for choosing the MEIRUBY M-15 Electric Candle Lighter. This innovative device provides a flameless, windproof, and splashproof solution for lighting candles, gas stoves, and other items. Featuring a rechargeable design and advanced safety features, it offers convenience and reliability for both indoor and outdoor use.

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using the lighter.

- Keep out of reach of children. This product is not a toy.
- Do not touch the electric arc. It can cause burns.
- Do not expose the lighter to water, other liquids, or extreme temperatures (above 50°C / 122°F).
- Do not puncture, disassemble, or modify the lighter.
- The igniting spark will automatically stop after 10 seconds of continuous use for safety.
- Ensure the safety lock switch is engaged when not in use to prevent accidental activation.
- Do not use if the lighter is damaged.



Figure 1: Internal safety features of the MEIRUBY M-15 Electric Candle Lighter.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the different parts of your MEIRUBY M-15 Electric Candle Lighter:



Figure 2: Key components of the MEIRUBY M-15 Electric Candle Lighter.

1. **Arc Pulse Ignition:** Generates the flameless electric arc for lighting.
2. **Hanging Hook:** Convenient for storage, keeping the lighter accessible and away from children.
3. **ON/OFF Button (Safety Lock):** Slides to enable or disable the lighter. Must be in the 'ON' position to operate.
4. **Switch Button (Ignition Button):** Press and hold to activate the electric arc when the safety lock is 'ON'.
5. **USB Charging Port:** Used to recharge the internal battery.
6. **LED Battery Indicator:** Four blue LED lights display the current battery level (25%, 50%, 75%, 100%).

4. SETUP: CHARGING YOUR LIGHTER

Your MEIRUBY M-15 Electric Candle Lighter is rechargeable via a standard USB port. It is recommended to fully charge the device before first use.

1. Locate the USB charging port on the side of the lighter.

2. Connect the provided USB charging cable to the lighter's port.
3. Plug the other end of the USB cable into any compatible USB power source (e.g., computer, power bank, wall adapter).
4. The LED battery indicators will light up during charging, showing the progress. All four lights will be solid blue when fully charged.
5. A full charge provides approximately 600 uses.



Figure 3: Charging the MEIRUBY M-15 Electric Candle Lighter.

5. OPERATING INSTRUCTIONS

Follow these steps to safely operate your electric candle lighter:

1. **Unlock the Lighter:** Slide the ON/OFF button (safety lock) to the 'ON' position. The LED battery indicators will illuminate.
2. **Activate the Arc:** Press and hold the Switch Button (Ignition Button). An electric arc will appear at the tip.

3. **Light the Item:** Carefully bring the electric arc close to the wick of a candle or other ignitable material until it lights.
4. **Deactivate:** Release the Switch Button to turn off the arc. The arc will automatically shut off after 10 seconds of continuous use.
5. **Lock for Storage:** Slide the ON/OFF button (safety lock) to the 'OFF' position when you are finished using the lighter to prevent accidental activation.



Figure 4: Using the MEIRUBY M-15 Electric Candle Lighter to light a candle.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the lighter clean. Do not use abrasive cleaners or immerse in water.
- **Storage:** Store the lighter in a cool, dry place, away from direct sunlight and heat sources. Ensure the safety lock is in the 'OFF' position.
- **Battery Care:** To prolong battery life, avoid completely draining the battery frequently. Recharge when the LED indicator shows low battery.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lighter does not activate.	Battery is low or depleted.	Recharge the lighter using the provided USB cable.
	Safety lock is in the 'OFF' position.	Slide the ON/OFF button to the 'ON' position.
	Ignition button not pressed correctly.	Ensure the ignition button is pressed and held firmly.
Arc stops after a short period.	Automatic safety shut-off engaged.	This is a normal safety feature. Release the button and press again if further use is needed.
Lighter is not charging.	USB cable or power source issue.	Try a different USB cable or power source. Ensure the cable is securely connected.

8. SPECIFICATIONS

Brand: MEIRUBY
Model Number: MEIRUBY M-15
Color: Black
Material: Aluminum
Item Weight: 60 Grams
Fuel Type: Electric
Product Dimensions: 8.3"L x 2.2"W x 0.65"Th
UPC: 738508626919

9. WARRANTY AND SUPPORT

MEIRUBY is committed to providing quality products and customer satisfaction. Your MEIRUBY M-15 Electric Candle Lighter comes with a 30-day refund/replacement return policy.

For any issues or inquiries, please do not hesitate to contact MEIRUBY's customer service. We offer 24-hour friendly service to assist you.

Contact Information: Please refer to your purchase documentation or the seller's contact details on the platform where you purchased the product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question