

[Manuals.plus](#) /

› [Monster](#) /

› Monster Rocker 270 Sport Portable Wireless Speaker User Manual

Monster Rocker 270 Sport

Monster Rocker 270 Sport

Portable Indoor/Outdoor Wireless Speaker

Model: Rocker 270 Sport

INTRODUCTION

The Monster Rocker 270 Sport is a powerful and versatile portable wireless speaker designed for both indoor and outdoor use. Featuring 60 watts of power and up to 24 hours of playtime, it delivers superb audio through its 270-degree sound system, which includes a 5-inch front-mounted subwoofer, a 2-inch front-mounted mid/high-range speaker, and two 2-inch side-mounted mid/high-range speakers. Its IPX4 weather-resistant exterior ensures durability in various conditions. The speaker also supports True Wireless System (TWS) pairing for an enhanced stereo experience.

SETUP

Unboxing and Initial Charge

Carefully remove the speaker and all accessories from the packaging. Before first use, fully charge the speaker to ensure optimal battery performance. Connect the power cable to the speaker's input power port and plug it into a standard electrical outlet. The charging indicator will provide status.



Image: Rear view of the Monster Rocker 270 Sport, highlighting the power input and the main power switch.

Powering On/Off

Locate the main power switch on the rear panel of the speaker. Flip the switch to the 'ON' position to power on the device. To power off, flip the switch back to the 'OFF' position.

OPERATING

Control Panel Overview



Image: Detailed view of the Monster Rocker 270 Sport's control panel, showing the various inputs, buttons, and knobs.

- **GAIN Knob:** Adjusts the input sensitivity for microphone/guitar.
- **MIC/GUITAR Input:** 1/4-inch jack for connecting a microphone or guitar.
- **AUX IN:** 3.5mm auxiliary input for wired audio devices.
- **USB:** USB port for media playback or charging external devices (5V/1A output).
- **SOURCE Button:** Toggles between Bluetooth, AUX, and USB input modes.

- **TWS Button:** Initiates True Wireless System pairing with another Rocker 270 Sport speaker.
- **Volume/Track Control Knob:** Rotates to adjust volume; presses to skip tracks (in Bluetooth/USB mode).

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (press the SOURCE button until the Bluetooth indicator lights up).
2. On your smartphone, tablet, or laptop, enable Bluetooth and search for available devices.
3. Select "Monster Rocker 270 Sport" from the list of devices.
4. Once paired, the Bluetooth indicator will remain solid, and you will hear an audible confirmation.

True Wireless System (TWS) Pairing

TWS allows you to connect two Monster Rocker 270 Sport speakers for a stereo sound experience.

1. Ensure both Rocker 270 Sport speakers are powered on and in Bluetooth mode, but not yet paired to any device.
2. On one speaker (this will be the primary speaker), press and hold the TWS button until you hear a pairing tone.
3. The primary speaker will automatically search for and connect to the secondary speaker.
4. Once connected, you will hear a confirmation tone, and the TWS indicator on both speakers will light up.
5. Now, pair your Bluetooth device to the primary speaker as described in the "Bluetooth Pairing" section. Audio will play through both speakers in stereo.

Using AUX Input

Connect an audio device (e.g., MP3 player, CD player) to the AUX IN port using a 3.5mm audio cable. Press the SOURCE button until the AUX indicator lights up. Audio will now play through the speaker.

Using USB Input

Insert a USB flash drive containing audio files into the USB port. Press the SOURCE button until the USB indicator lights up. The speaker will automatically begin playing compatible audio files from the USB drive.

App Control

The Monster Rocker 270 Sport can be controlled via a dedicated mobile application. Download the official Monster Rocker app from your device's app store. Follow the in-app instructions to connect and control your speaker, including volume, source selection, and potentially EQ settings.

MAINTENANCE

Cleaning

Wipe the speaker's exterior with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish. Ensure all ports are dry before use.

Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to charge the battery to approximately 50% before long-term storage to preserve battery health.

Battery Care

To maximize battery lifespan, avoid fully discharging the speaker frequently. Recharge the speaker when the battery low indicator appears. Do not expose the battery to excessive heat or cold.

Water Resistance

The Rocker 270 Sport has an IPX4 water-resistant rating, meaning it is protected against splashing water from any direction. It is *not* waterproof and should not be submerged in water or exposed to heavy jets of water. Ensure all port covers are securely closed when using the speaker outdoors or near water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted. Power switch is off.	Charge the speaker. Ensure the power switch on the rear is in the 'ON' position.
No sound from speaker.	Volume is too low. Incorrect source selected. Device not connected.	Increase speaker and source device volume. Press SOURCE button to select correct input. Ensure Bluetooth device is paired or AUX/USB is properly connected.
Bluetooth pairing fails.	Speaker not in pairing mode. Device too far. Interference.	Ensure speaker is in Bluetooth pairing mode. Move device closer to speaker (within 10 meters). Turn off other Bluetooth devices. Forget speaker from device's Bluetooth list and re-pair.
TWS pairing fails.	Speakers too far apart. One speaker already paired to a device.	Ensure both speakers are within close proximity. Disconnect any Bluetooth devices from both speakers before initiating TWS pairing.

SPECIFICATIONS

Feature	Detail
Model Name	Rocker 270 Sport
Brand	Monster
Speaker Type	Outdoor, Subwoofer
Speaker Maximum Output Power	60 Watts
Audio Driver Size	5 Inches (Subwoofer), 2 Inches (Mid/High Range)
Connectivity Technology	Bluetooth
Bluetooth Range	10 Meters (33 feet)
Power Source	Battery Powered
Battery Playtime	Up to 24 Hours
Water Resistance Level	IPX4 (Water Resistant)
Material	Plastic

Feature	Detail
Item Weight	8.48 pounds
Package Dimensions	13.9 x 12 x 8.8 inches
Control Method	App, On-device controls
UPC	656942751694

WARRANTY & SUPPORT

Limited Warranty

This product comes with a limited warranty. Please refer to the warranty card included in your original packaging for specific terms and conditions, including coverage duration and limitations. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Monster customer support. Contact information can typically be found on the manufacturer's official website or on the product packaging.

