

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Possini Euro Design](#) /

› [Possini Euro Design Ackerly Outdoor Wall Light Fixture \(Model 570F1\) Instruction Manual](#)

Possini Euro Design 570F1

Possini Euro Design Ackerly Outdoor Wall Light Fixture (Model 570F1) Instruction Manual

Model: 570F1 | Brand: Possini Euro Design

IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before beginning assembly and installation. Failure to do so could lead to fire, electric shock, or other injuries. Keep these instructions for future reference.

- **WARNING:** To avoid electric shock, ensure power is turned off at the main circuit breaker or fuse box before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring installations.
- This fixture is designed for outdoor use and is weatherproof. However, ensure all connections are properly sealed to prevent water intrusion.
- Handle glass components with care to prevent breakage and injury.
- Use only the specified bulb type and wattage. Do not exceed the maximum wattage.

PACKAGE CONTENTS

Carefully unpack the fixture and check that all parts are included. If any parts are missing or damaged, do not attempt to assemble or install the product. Contact customer service for assistance.

- Light Fixture Assembly
- Mounting Plate
- Mounting Screws
- Wire Nuts
- Glass Panels (pre-installed)
- Instruction Manual



Image: Overview of the Ackerly Outdoor Wall Light Fixture.

SPECIFICATIONS

Brand	Possini Euro Design
Model Number	570F1
Dimensions (H x W x D)	14" H x 5.5" W x 7.75" D (Extends 7 3/4" from wall)
Backplate Dimensions	6" H x 4.5" W
Weight	3.58 lbs
Material	Steel construction, Clear Glass shade
Finish	Textured Black
Bulb Type	Standard-medium base (E26) Type A (not included)
Max Wattage	60 Watts
Voltage	120 Volts
Indoor/Outdoor Usage	Outdoor (Weatherproof)

Extends 7 3/4"



Image: Detailed dimensions of the light fixture.

INSTALLATION INSTRUCTIONS

Before you begin, ensure the power is turned off at the circuit breaker. This fixture requires basic electrical wiring knowledge. If you are unsure, consult a qualified electrician.

Tools Required (Not Included):

- Phillips head screwdriver
- Flathead screwdriver
- Wire strippers
- Electrical tape
- Safety glasses

Step-by-Step Installation:

- 1. Prepare the Installation Area:** Turn off the power to the junction box at the circuit breaker. Ensure the wall surface is clean, dry, and structurally sound to support the fixture.
- 2. Attach Mounting Plate:** Secure the mounting plate to the junction box using the provided mounting screws. Ensure the plate is level and firmly attached.
- 3. Wire Connections:**
 - Connect the **black wire** from the fixture to the **black (hot) wire** from the junction box using a wire nut.
 - Connect the **white wire** from the fixture to the **white (neutral) wire** from the junction box using a wire nut.
 - Connect the **ground wire** from the fixture (usually bare copper or green) to the **ground wire** from the junction box and the ground screw on the mounting plate.
 - Ensure all wire nuts are securely tightened and wrap connections with electrical tape for added safety.
- 4. Mount the Fixture:** Carefully align the fixture with the mounting plate and secure it using the provided screws. Ensure the fixture is flush against the wall and stable.
- 5. Install Bulb:** Insert one standard-medium base (E26) Type A bulb (max 60W, not included) into the socket. Do not overtighten.



Image: The Ackerly fixture installed on an exterior wall, demonstrating its appearance.



Image: Close-up view of the bulb socket, showing where to insert the E26 bulb.

OPERATING INSTRUCTIONS

Once the fixture is securely installed and the bulb is in place, restore power at the circuit breaker. The light fixture will operate via your existing wall switch or connected control method (e.g., app, push button, if integrated into your home system).

- Ensure the bulb is correctly seated in the socket.
- Turn on the wall switch connected to the fixture to illuminate the light.
- Turn off the wall switch to extinguish the light.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your light fixture.

- **Cleaning:** To clean the fixture, turn off the power and allow it to cool. Wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish or glass.
- **Bulb Replacement:** Turn off the power at the circuit breaker and allow the bulb to cool completely. Carefully unscrew the old bulb and replace it with a new E26 base, Type A bulb (max 60W).
- **Inspection:** Periodically inspect the fixture for any signs of wear, damage, or loose connections. Address any issues promptly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power to the fixture. Bulb is loose or faulty. Incorrect wiring.	Check circuit breaker and wall switch. Tighten or replace the bulb. Verify wiring connections (consult electrician if needed).
Light flickers.	Loose bulb. Loose wiring connection. Faulty bulb.	Tighten the bulb. Check wiring connections (power off first). Replace the bulb.
Fixture is not stable.	Mounting screws are loose. Mounting plate not securely attached.	Tighten fixture screws. Ensure mounting plate is firmly secured to the junction box.

WARRANTY AND SUPPORT

This Possini Euro Design product is manufactured with quality materials and craftsmanship. For specific warranty details or technical support, please refer to the warranty card included with your purchase or visit the official Possini Euro Design website.

For further assistance, you may contact the manufacturer, Lamps Plus, directly.

Manufacturer: Lamps Plus

Website: www.lampsplus.com

