

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [JMEXSUSS](#) /

› [JMEXSUSS 600 LED 168FT Color Changing Christmas Lights Instruction Manual](#)

JMEXSUSS ESX-S-0600

JMEXSUSS 600 LED 168FT Color Changing Christmas Lights

INSTRUCTION MANUAL - MODEL: ESX-S-0600

1. Introduction

Thank you for choosing JMEXSUSS Christmas Lights. These 168ft color-changing string lights feature 600 bright LEDs, perfect for decorating Christmas trees up to 7.5ft tall, or for various indoor and outdoor festive occasions. Designed for durability and ease of use, they come with multiple lighting modes, dimmable brightness, and a convenient remote control.



Image: JMEXSUSS Christmas Lights in a living room setting, showcasing adjustable brightness levels.

2. Package Contents

Please ensure all items are present in your package:

- 1 x 600 LED Color Changing Christmas String Lights with reel
- 1 x UL Plug
- 1 x Remote Controller
- 1 x Instructions (this manual)
- 1 x After-Sales Service Card



Image: A comparison of JMEXSUSS lights on a storage reel versus generic lights, emphasizing features and ease of storage.

3. Setup

The lights come on a convenient storage reel, making setup and takedown easy and preventing tangles. Unroll the lights carefully to avoid damage.

3.1 Connecting the Lights

1. Ensure the power adapter (UL Plug) is securely connected to the string lights.
2. Plug the UL Plug into a standard electrical outlet.
3. For outdoor use, ensure the connection points are secure and protected from direct water exposure, although the lights are waterproof (IPX4 rated).

3.2 Placement

These lights are suitable for both indoor and outdoor use. The clear wire design blends seamlessly with various backgrounds, especially lighter surfaces or snow. For darker backgrounds like green Christmas trees, the clear wire may be slightly visible.



Outdoor

Indoor



Image: Various indoor and outdoor settings demonstrating the versatility of JMEXSUSS Christmas lights.

4. Operating Instructions

Your JMEXSUSS Christmas Lights can be controlled using the included wireless remote controller or the button on the UL Plug.

4.1 Remote Control Functions

- **ON/OFF:** Power the lights on or off.
- **TIMER:** Activate the timer function (e.g., 6H on, 18H off).
- **1-11:** Select from 11 different lighting modes.
- **DIM+/DIM-:** Adjust brightness levels (100%, 75%, 50%, 25%).

4.2 Lighting Modes

The lights feature 11 updated lighting modes, including:

- White Steady On
- Multicolor Steady On
- Twinkle

- Chasing
- Slow Fade
- Combination
- Sequential
- Waves
- Slo-Glo
- Flash
- Voice Control (reacts to sound)

4.3 Brightness Adjustment

Adjust the light intensity to one of four levels: 100%, 75%, 50%, or 25% using the DIM+/DIM- buttons on the remote.



POWERFUL AND MULTIFUNCTION REMOTE CONTROL

Use the smart remote control to turn on/off, change the color, dim the light, set the timer.

Image: Remote control demonstrating various functions for the Christmas lights.

4.4 Video Demonstration: Modes and Outdoor Use

Your browser does not support the video tag.

Video: Demonstrates various lighting modes and the lights' suitability for outdoor Halloween decoration.

5. Maintenance

To ensure the longevity of your JMEXSUSS Christmas Lights:

- Always unplug the lights before cleaning or storing.
- Wipe lights gently with a soft, dry cloth. Do not use harsh chemicals.
- When storing, carefully re-wrap the lights onto the provided reel to prevent tangling and damage. Store in a cool, dry place.
- Regularly inspect the wire and bulbs for any signs of damage. Do not use if damaged.

5.1 Video Demonstration: Product Features and Installation Tips

Your browser does not support the video tag.

Video: Provides an in-depth look at the product's features and offers tips for installation and use.

6. Troubleshooting

If your lights are not functioning as expected, please refer to the following common issues and solutions:

- **Lights not turning on:** Ensure the UL Plug is securely connected to both the lights and the power outlet. Check if the outlet is functional.
- **Remote not working:** Ensure there are no obstructions between the remote and the plug. Check the remote's battery.
- **Some LEDs are out:** While rare with LED technology, if individual bulbs are damaged, the rest of the string should remain lit. If a section is out, check for loose connections or damage to the wire in that section.
- **Lights are tangled:** Use the provided storage reel to carefully untangle the lights.

6.1 Video Demonstration: Length and Coverage

Your browser does not support the video tag.

Video: Illustrates the extensive length of the lights and their ability to cover large areas.

7. Specifications

Feature	Detail
Brand	JMEXSUSS
Model Number	ESX-S-0600
Total Length	168 Feet
Number of LEDs	600
Light Color	Multicolor, White (White to Multicolor)
Indoor/Outdoor Usage	Outdoor

Power Source	Corded Electric
Special Feature	Corded
Controller Type	Remote Control, Voice Control
Number of Lighting Modes	11
Brightness Levels	4 (100%, 75%, 50%, 25%)
Ingress Protection Code Rating	IPX4 (Waterproof)
Material	Plastic
Item Weight	2.16 pounds

8. Warranty and Support

Your JMEXSUSS Christmas Lights come with a 12-Months After-Sales Service. If you encounter any problems or have questions, please feel free to contact us. We are always here to assist you within 24 hours. For further assistance, please refer to the contact information provided on your After-Sales Service Card.