



Manuals.plus /

- › POLICE /
- › POLICE Personal Safety Alarm Keychain AF-2004W Instruction Manual

## POLICE AF-2004W

# POLICE Personal Safety Alarm Keychain AF-2004W Instruction Manual

Model: AF-2004W

## PRODUCT OVERVIEW

---

The POLICE Personal Safety Alarm Keychain is a compact, rechargeable device designed for personal security. It features a loud 130dB emergency alarm, an LED flashlight with a strobe mode, and a durable, portable design for easy carrying.



Image Description: The POLICE Personal Safety Alarm Keychain in white, shown alongside a gold-colored metal keychain clip, highlighting its compact design.

## WHAT'S INCLUDED

- Personal Safety Alarm
- Carabiner Keychain Clip
- USB Charging Cord

## SPECIFICATIONS

<b>Control Method</b>	Touch
<b>Noise Level</b>	130 Decibels
<b>Mounting Type</b>	Keychain Mount
<b>Maximum Sound Range</b>	100 Feet (approx. 30 meters)
<b>Item Weight</b>	1.44 ounces
<b>Product Dimensions</b>	3.9"L x 1.22"W x 0.53"H
<b>Battery Cell Type</b>	Lithium-Ion
<b>IP Rating</b>	IPX4 (Splash Resistant)
<b>LED Intensity</b>	90 Lumens
<b>LED Lighting Duration</b>	Up to 6 hours
<b>Standby Time</b>	Up to 12 months

## SETUP

### Initial Charge

Before first use, fully charge the personal safety alarm to ensure optimal performance.

1. Locate the charging port on the device.
2. Connect the provided USB charging cord to the alarm and a compatible USB power source (e.g., computer, wall adapter).
3. The charging indicator light will illuminate. Charge until the light indicates a full charge (typically a change in color or turning off).

# LOW BATTERY REMINDER



Image Description: The personal safety alarm is shown connected to a USB charging cable, illustrating its built-in rechargeable battery feature.

## Attaching the Carabiner

Attach the included carabiner clip to the alarm's top loop for convenient carrying on keys, bags, or clothing.



**WEIGHT**  
0.1oz



Metal Keychain  
Clip



Carabiner



USB  
Charging Cord

## ALARM



Sound Volume



Sound Range



Continuous Siren

130 dB

600ft  
130m

60  
mins

## FLASHLIGHT



LED Intensity

90  
lumens



LED Lighting

6  
hours

## DURABILITY



Standby Time

12  
months



IP Rating

IPX4

## BATTERY



**Built-in  
Rechargeable**



Image Description: The personal safety alarm is shown attached to both a handbag and a backpack via its carabiner clip, demonstrating its portability.

## OPERATING INSTRUCTIONS

### Activating the Emergency Alarm

To activate the 130dB emergency alarm and flashing strobe light:

- Pull the top pin (the loop part) completely out of the device.
- The alarm will sound loudly, and the strobe light will flash simultaneously.



Image Description: A hand demonstrates pulling the top pin from the personal safety alarm, illustrating the activation method for the alarm and strobe light.

## Deactivating the Emergency Alarm

To stop the alarm, reinsert the top pin firmly back into the device.

## Using the LED Flashlight

The device includes an LED flashlight with a steady and strobe mode.

- Press the small button on the side of the alarm once for a steady flashlight.
- Press the button again to activate the strobe light mode.
- Press a third time to turn off the flashlight.

# BUILT-IN RECHARGEABLE BATTERY



Image Description: The personal safety alarm is shown emitting a bright LED light, demonstrating its flashlight function in a dark environment.

Your browser does not support the video tag.

Video Description: This video demonstrates the operation of the POLICE Personal Safety Alarm Keychain, including how to activate the alarm by pulling the pin and how to use the LED flashlight and strobe functions.

## MAINTENANCE

### Recharging the Battery

The alarm features an internal rechargeable battery. Regular charging is essential for reliable operation.

- When the battery is low, the device will provide a warning (e.g., an indicator light or audible signal).
- Connect the device to a USB power source using the provided charging cord.
- Ensure the device is fully charged regularly to maintain optimal performance and standby time.

## EMERGENCY USE



Image Description: The personal safety alarm is depicted with a low battery reminder, showing a red battery icon and text indicating an audible warning.

## Cleaning

Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.

## TROUBLESHOOTING

### Alarm Not Activating

- Ensure the pull pin is fully removed from the device.
- Check the battery level; recharge if necessary.

### Flashlight Not Working

- Press the side button firmly.
- Check the battery level; recharge if necessary.

### Low Battery Warning Not Appearing

- If the device is not used frequently, charge it periodically (e.g., monthly) to ensure the battery remains adequately powered.

## SAFETY INFORMATION

- The alarm emits a very loud sound. Avoid prolonged exposure to prevent potential hearing damage.

- Do not aim the strobe light directly into eyes for extended periods.
- Keep out of reach of small children.
- This device is intended as a deterrent and should not replace other safety precautions.
- Do not attempt to disassemble or modify the device.

## **WARRANTY AND SUPPORT**

---

For warranty information or technical support, please refer to the manufacturer's official website or contact customer service directly.

Manufacturer: POLICE

UPC: 860006187163