

IBELL SM1301

iBELL SM1301 3-in-1 Sandwich Maker User Manual

Model: SM1301 | Brand: IBELL

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface during operation.

2. PRODUCT OVERVIEW

The iBELL SM1301 is a versatile 3-in-1 sandwich maker designed for preparing sandwiches, waffles, and grilled items. It features detachable non-stick plates for easy cleaning and a compact design for convenient storage.

Key Features:

- **3-in-1 Functionality:** Includes interchangeable plates for toast, waffle, and grill.
- **Detachable Non-Stick Plates:** Ensures easy food release and simplifies cleaning. Dishwasher safe.
- **750 Watt Power:** Provides efficient heating for quick cooking.
- **Shock Proof Body:** Designed for user safety.
- **Grip Handle:** For secure handling and portability.
- **Indicator Lights:** Power and ready lights for operational status.
- **Compact Design:** Measures 24 x 24 x 10 cm, suitable for various kitchen spaces.

Components:

- Main Unit
- Toast Plates (2 pieces)
- Waffle Plates (2 pieces)
- Grill Plates (2 pieces)
- Grip Handle



The iBELL SM1301 3-in-1 Sandwich Maker main unit in black and silver finish.

3 in 1 SANDWICH MAKER



Toast



Waffle



Grill



The three sets of detachable plates: toast, waffle, and grill, shown with examples of food made with each.

Handle Locking Function



A close-up view of the handle locking mechanism, ensuring secure closure during cooking.

Just Press button & Change grill plates



Illustration showing the button to press for easily changing the cooking plates.

Largest Size in the Category



Diagram illustrating the dimensions of the sandwich maker: 24 cm length, 24 cm width, and 10 cm height.

Product Demonstration Video:

Your browser does not support the video tag.

This video demonstrates the iBELL SM1301 3-in-1 Sandwich Maker's features, including its detachable plates for toast, waffle, and grill, and the ease of use for preparing various meals.

3. SETUP

- 1. Unpacking:** Carefully remove the appliance and all accessories from the packaging. Retain the packaging for future storage or transport.
- 2. Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash the detachable cooking plates with warm, soapy water, rinse thoroughly, and dry completely.
- 3. Plate Installation:** Ensure the appliance is unplugged and cool. Select the desired cooking plates (toast, waffle, or grill). Align the plates with the slots on the upper and lower heating elements and press them down until they click into place. Ensure both plates are securely fastened.
- 4. Placement:** Place the sandwich maker on a clean, dry, stable, and heat-resistant surface, away from walls or

other appliances to allow for proper ventilation.

4. OPERATING INSTRUCTIONS

General Operation:

- 1. Preheating:** Close the sandwich maker and plug it into a 220-volt electrical outlet. The red power indicator light will illuminate. Allow the appliance to preheat for approximately 3-5 minutes. The green 'ready' indicator light will turn on when the desired cooking temperature is reached.
- 2. Loading Food:** Once the green light illuminates, carefully open the sandwich maker using the cool-touch handle. Place your food (sandwiches, waffle batter, or grill items) onto the lower cooking plate. Do not overfill.
- 3. Cooking:** Close the lid and gently press down the handle until it locks. The green light may turn off during cooking as the appliance maintains temperature.
- 4. Checking Food:** Periodically check the food for desired doneness. Cooking times will vary based on ingredients and personal preference.
- 5. Removing Food:** Once cooked, open the lid and carefully remove the food using a heat-resistant plastic or wooden utensil. Avoid using metal utensils, which can damage the non-stick coating.
- 6. Finishing:** After use, unplug the appliance from the outlet and allow it to cool completely before cleaning.

Specific Plate Usage:

- **Toast Plates:** Ideal for making sealed sandwiches. Place two slices of bread with filling in the center of each plate. Close and cook until golden brown and crispy.
- **Waffle Plates:** Use for preparing waffles. Pour appropriate amount of waffle batter onto the preheated lower plate. Close and cook until waffles are golden brown and cooked through.
- **Grill Plates:** Suitable for grilling various items like paneer, vegetables, or small cuts of meat. Place items on the preheated lower plate. Close and grill until cooked to your preference.

5. CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure the longevity and optimal performance of your iBELL SM1301 sandwich maker.

- 1. Always Unplug and Cool:** Before cleaning, always unplug the appliance and allow it to cool down completely.
- 2. Removing Plates:** Press the plate release buttons to detach the cooking plates.
- 3. Cleaning Plates:** The detachable non-stick plates can be washed by hand with warm, soapy water and a soft sponge. They are also dishwasher safe. Ensure no abrasive cleaners or scouring pads are used, as these can damage the non-stick coating. Rinse and dry thoroughly.
- 4. Cleaning Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or immerse the main unit in water or any other liquid.
- 5. Storage:** Once clean and dry, reattach the plates or store them separately. Store the appliance in a dry, cool place. The compact design allows for vertical storage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the appliance is securely plugged into a working 220-volt outlet. Check the power switch.
Food is not cooking evenly.	Insufficient preheating; uneven food distribution.	Allow the appliance to fully preheat until the green 'ready' light illuminates. Distribute food evenly on the plates.
Food sticks to the plates.	Plates not properly seasoned; food not fully cooked.	Ensure plates are clean. Lightly brush plates with cooking oil or butter before each use. Allow food to cook completely before attempting to remove.
Smoke or unusual odor during first use.	Protective coating burning off.	This is normal for first use. Ensure adequate ventilation. If smoke persists after initial uses, discontinue use and contact customer service.

7. SPECIFICATIONS

Feature	Detail
Model Number	IBL SM 1301EZ
Power Consumption	750 Watts
Voltage	220 Volts
Dimensions (LxWxH)	24 x 24 x 10 Centimeters
Item Weight	2 kg 320 g
Plate Type	Detachable Non-Stick (Toast, Waffle, Grill)
Body Material	Shock Proof Body
Included Components	Detachable Plates, Grip Handle
Country of Origin	India

8. WARRANTY AND SUPPORT

Your iBELL SM1301 3-in-1 Sandwich Maker comes with a standard warranty and additional support options:

- **Standard Warranty:** 1 Year standard warranty.
- **Additional Warranty:** An additional 1 Year warranty is available upon free registration. Registration must be completed within 30 days from the date of purchase.
- **Customer Support:** For warranty claims, technical assistance, or any product-related queries, please contact iBELL customer service at **1800-2020-260** or email **connect@ibellstore.com**.

Manufacturer: Innovative Technologies, iBELL Fida's Building, Thottumugham P.O, Aluva, Kerala - 683105.

