

## DASH DEC005BK & DBBM450GBBK08

# Dash Rapid Egg Cooker & Deluxe Egg Bite Maker Instruction Manual

Models: DEC005BK & DBBM450GBBK08

## INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, maintenance, and troubleshooting of your Dash Rapid Egg Cooker (DEC005BK) and Dash Deluxe Sous Vide Style Egg Bite Maker (DBBM450GBBK08). Please read all instructions thoroughly before first use to ensure proper functionality and to prevent damage.

The Dash Rapid Egg Cooker allows you to prepare soft, medium, or hard-boiled eggs, poached eggs, scrambled eggs, and individual omelets quickly. The Dash Deluxe Egg Bite Maker is designed for creating flavorful egg bites with ease, perfect for healthy snacks or meal prep.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.

## PRODUCT COMPONENTS



**Dash Rapid Egg Cooker:** Features a clear lid, egg tray, poaching tray, and a black base with power button.



**Dash Deluxe Egg Bite Maker:** Compact black appliance with a hinged lid and indicator light.

### Rapid Egg Cooker (DEC005BK)

- **Main Unit:** Base with heating plate and power button.
- **Egg Tray:** Holds up to 6 eggs for boiling.
- **Poaching Tray:** For poaching up to 2 eggs or making individual omelets.
- **Measuring Cup:** With markings for water levels (soft, medium, hard-boiled, poached, omelet). Includes an egg piercer on the bottom.
- **Lid:** Transparent lid with a handle.

### Deluxe Egg Bite Maker (DBBM450GBBK08)

- **Main Unit:** Base with heating plates and indicator light.
- **Silicone Molds:** Four mini silicone cups for egg bites.
- **Deluxe Silicone Cup:** One large silicone cup, ideal for egg sandwiches.

## SETUP AND FIRST USE

---

### Rapid Egg Cooker

1. Unpack all components and remove any packaging materials.
2. Wash the Lid, Egg Tray, Poaching Tray, and Measuring Cup in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the Heating Plate of the Main Unit with a damp cloth. Do not immerse the Main Unit in water.
4. Place the Main Unit on a stable, heat-resistant surface near an electrical outlet.

### Deluxe Egg Bite Maker

1. Unpack all components and remove any packaging materials.
2. Wash the Silicone Molds and Deluxe Silicone Cup in warm, soapy water. Rinse thoroughly and dry.
3. Wipe the interior and exterior surfaces of the Main Unit with a damp cloth. Do not immerse the Main Unit in water.
4. Place the Main Unit on a stable, heat-resistant surface near an electrical outlet.

## OPERATING INSTRUCTIONS

---

### Rapid Egg Cooker (DEC005BK)

Always use the provided Measuring Cup to add the correct amount of water to the Heating Plate. The water level determines the cooking consistency.

### Hard, Medium, or Soft Boiled Eggs

1. Fill the Measuring Cup with cold water to the desired line (Hard, Medium, or Soft). Pour the water onto the Heating Plate.
2. Using the egg piercer on the bottom of the Measuring Cup, carefully pierce the large end of each egg. This prevents cracking during cooking.
3. Place the Egg Tray onto the Main Unit. Place up to 6 pierced eggs, large-end up, into the indentations on the Egg Tray.
4. Cover with the Lid.
5. Plug the power cord into an electrical outlet. Press the Power Button. The indicator light will illuminate.
6. When the water has evaporated and the eggs are cooked, the indicator light will turn off and the appliance will automatically shut off.
7. Carefully remove the Lid and Egg Tray using oven mitts. Immediately rinse eggs under cold water or place in an ice bath to stop the cooking process and prevent a green ring around the yolk.



The Rapid Egg Cooker can cook up to 6 eggs at once.

### Poached Eggs or Omelets

1. Fill the Measuring Cup with cold water to the "Poached" or "Omelet" line. Pour the water onto the Heating Plate.
2. Lightly grease the Poaching Tray with cooking spray or butter.
3. For Poached Eggs: Crack up to 2 eggs directly into the indentations of the Poaching Tray.
4. For Omelets: Whisk up to 2 eggs with desired ingredients (cheese, vegetables, etc.) and pour into the Poaching Tray.
5. Place the Poaching Tray onto the Main Unit.
6. Cover with the Lid.
7. Plug the power cord into an electrical outlet. Press the Power Button. The indicator light will illuminate.
8. When the water has evaporated and the eggs are cooked, the indicator light will turn off and the appliance will automatically shut off.
9. Carefully remove the Lid and Poaching Tray using oven mitts. Use a non-abrasive utensil to remove the cooked eggs/omelets.



# FAST EASY BREAKFAST

Omelettes, hard-boiled,  
soft-boiled, and poached  
eggs, *your way!*



The poaching tray allows for easy preparation of omelets or poached eggs.

## Deluxe Egg Bite Maker (DBBM450GBBK08)

The Egg Bite Maker is designed for quick and easy preparation of egg bites.

### Making Egg Bites

1. Plug the Egg Bite Maker into an electrical outlet. The indicator light will illuminate, indicating the unit is preheating.
2. While preheating, whisk eggs with desired ingredients (e.g., cheese, vegetables, cooked meats).
3. Once the indicator light turns off, the unit is preheated and ready for use.
4. Place the desired Silicone Molds (four mini or one large) into the heating wells.
5. Pour the egg mixture into the silicone molds, filling them to just below the rim.
6. Close the lid. The indicator light will turn on during cooking.
7. Cook for approximately 6-10 minutes, or until egg bites are set to your preference. Cooking time may vary based on ingredients and desired consistency.
8. Once cooked, carefully open the lid and remove the silicone molds using oven mitts.
9. Allow to cool slightly, then gently push the egg bites out of the silicone molds.

# FAST PORTABLE BREAKFAST in four easy steps!



The process for making egg bites is simple: prepare ingredients, pour into molds, cook, and enjoy.

## MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and optimal performance of your appliances.

- Always unplug both appliances from the power outlet and allow them to cool completely before cleaning.
- **Rapid Egg Cooker:**
  - The Lid, Egg Tray, Poaching Tray, and Measuring Cup are top-rack dishwasher safe or can be washed by hand with warm, soapy water.
  - To clean the Heating Plate, wipe with a damp cloth. For stubborn mineral deposits, add a small amount of white vinegar to the heating plate and let it sit for 5-10 minutes, then wipe clean. Do not use abrasive cleaners or scouring pads.
  - Never immerse the Main Unit (base) in water or any other liquid.
- **Deluxe Egg Bite Maker:**
  - The Silicone Molds and Deluxe Silicone Cup are dishwasher safe or can be washed by hand with warm, soapy water.
  - Wipe the interior and exterior surfaces of the Main Unit with a damp cloth. For baked-on

residue, use a non-abrasive sponge.

- Never immerse the Main Unit (base) in water or any other liquid.
- Store both appliances in a clean, dry place when not in use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
<b>Rapid Egg Cooker:</b> Eggs are undercooked/overcooked.	Incorrect water amount; lid not properly sealed; eggs not pierced.	Ensure correct water level using the Measuring Cup. Check lid is securely in place. Always pierce eggs before boiling.
<b>Rapid Egg Cooker:</b> Appliance does not turn on.	Not plugged in; power button not pressed.	Ensure the unit is securely plugged into a working outlet. Press the Power Button firmly.
<b>Rapid Egg Cooker:</b> White residue on heating plate.	Mineral deposits from water.	Clean with a damp cloth and a small amount of white vinegar.
<b>Egg Bite Maker:</b> Egg bites stick to molds.	Molds not properly cleaned; overfilling.	Ensure molds are clean. Do not overfill molds; fill just below the rim.
<b>Egg Bite Maker:</b> Unit not heating.	Not plugged in; power issue.	Ensure the unit is securely plugged into a working outlet. Check household circuit breaker.

## SPECIFICATIONS

- **Brand:** DASH
- **Models:** DEC005BK (Rapid Egg Cooker), DBBM450GBBK08 (Deluxe Egg Bite Maker)
- **Color:** Black
- **Material:** Silicone (molds), Plastic (egg cooker components)
- **Rapid Egg Cooker Capacity:** 6 eggs (boiled), 2 eggs (poached/omelet)
- **Deluxe Egg Bite Maker Capacity:** 4 mini egg bites, 1 large egg bite
- **Power:** Electric
- **Item Weight (Combined):** Approximately 2.5 lbs (1 lb for egg cooker, 1.5 lbs for egg bite maker)
- **ASIN:** B09XRM1FGG
- **Date First Available:** April 12, 2022

## WARRANTY AND SUPPORT







DASH products are manufactured to high quality standards. For information regarding warranty coverage, product registration, or customer support, please refer to the official DASH website or contact their customer service department.

You can also find additional resources and product information on the official DASH store page:

[Visit the Official DASH Store](#)

[Download User Guide \(PDF\)](#)

## Related Documents - DEC005BK & DBBM450GBBK08

 <p><b>DASH</b> RAPID EGG COOKER Instruction Manual   Recipe Guide</p>	<p><a href="#">Dash Rapid Egg Cooker DEC005: Instruction Manual and Recipe Guide</a></p> <p>Comprehensive instruction manual and recipe guide for the Dash Rapid Egg Cooker (Model DEC005), featuring safety instructions, parts identification, usage guides, cleaning tips, troubleshooting, and a variety of egg recipes.</p>												
 <p><b>DASH</b> DELUXE EGG COOKER Instruction Manual   Recipe Guide</p>	<p><a href="#">Dash Deluxe Egg Cooker Instruction Manual and Recipe Guide</a></p> <p>Comprehensive guide for the Dash Deluxe Egg Cooker, including important safeguards, parts and features, operating instructions, troubleshooting, and a variety of recipes.</p>												
 <p><b>DASH</b> PEEPS® RAPID EGG COOKER Instruction Manual   Recipe Guide</p>	<p><a href="#">Dash PEEPS Rapid Egg Cooker Instruction Manual and Recipe Guide</a></p> <p>Comprehensive guide for the Dash PEEPS Rapid Egg Cooker, including setup, usage instructions, safety precautions, troubleshooting, and a variety of recipes for boiled eggs, deviled eggs, egg salad, frittatas, and more.</p>												
 <p><b>DASH</b> RAPID EGG COOKER One Touch Cooking   6 Egg Capacity   340 Watts</p>	<p><a href="#">Dash Rapid Egg Cooker DEC005: User Manual, Safety, and Recipes</a></p> <p>Comprehensive guide for the Dash Rapid Egg Cooker (Model DEC005). Includes safety instructions, parts identification, usage guides for boiling, poaching, and omelets, cleaning tips, troubleshooting, and a variety of delicious egg recipes.</p>												
 <p><b>DASH</b> RAPID EGG COOKER GET COOKING</p> <table><tr><th>STYLE</th><th># OF EGGS</th><th>TIME</th></tr><tr><td>Soft-Boiled</td><td>1-2</td><td>4-6</td></tr><tr><td>Medium Egg</td><td>1-2</td><td>4-6</td></tr><tr><td>Hard-Boiled</td><td>1-2</td><td>12</td></tr></table>	STYLE	# OF EGGS	TIME	Soft-Boiled	1-2	4-6	Medium Egg	1-2	4-6	Hard-Boiled	1-2	12	<p><a href="#">Dash Rapid Egg Cooker: Quick Start Guide and Instructions</a></p> <p>Learn how to use your Dash Rapid Egg Cooker for perfect hard-boiled, poached, and omelette-style eggs. Includes cooking times, cleaning instructions, and auto-shutoff features.</p>
STYLE	# OF EGGS	TIME											
Soft-Boiled	1-2	4-6											
Medium Egg	1-2	4-6											
Hard-Boiled	1-2	12											
 <p><b>DASH</b> ULTIMATE EXPRESS EGG COOKER Instruction Manual   Recipe Guide</p>	<p><a href="#">Dash Ultimate Express Egg Cooker: Instruction Manual &amp; Recipe Guide</a></p> <p>Comprehensive guide for the Dash Ultimate Express Egg Cooker (Model K89204), including important safeguards, usage instructions, cleaning tips, troubleshooting, and a variety of delicious egg recipes.</p>												