

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Peg Perego](#) /

› [Peg Perego Siesta High Chair and Recliner Instruction Manual](#)

Peg Perego IMSIESNA03WD53

Peg Perego Siesta High Chair and Recliner Instruction Manual

Model: IMSIESNA03WD53

INTRODUCTION

This manual provides essential instructions for the safe and proper use, assembly, operation, and maintenance of your Peg Perego Siesta High Chair and Recliner. Please read this manual thoroughly before first use and retain it for future reference.

The Peg Perego Siesta is a versatile, multi-functional high chair designed to accommodate your child from birth through their toddler years. It functions as both a comfortable recliner for infants and a high chair for feeding and play, featuring adjustable recline and height positions, a removable tray, and mar-resistant caster wheels for mobility.



Image: The Peg Perego Siesta High Chair in Wonder Grey, showcasing its design and functionality as a combined high chair and recliner.

SAFETY INFORMATION

Always prioritize your child's safety. Follow these guidelines:

- Never leave your child unattended in the high chair.
- Always use the 5-point safety harness and passive restraint bar.
- Ensure the high chair is fully assembled and all locking mechanisms are engaged before placing a child in it.
- Do not use the high chair if any parts are broken, torn, or missing.
- Keep children away from moving parts during adjustment.
- Maximum weight recommendation: 45 pounds.

SETUP AND ASSEMBLY

The Peg Perego Siesta High Chair comes largely pre-assembled. Initial setup primarily involves unfolding the unit and attaching the tray.

1. Unfolding the High Chair:

Carefully unfold the high chair frame until it locks into its open position. Ensure all structural components are securely extended.



SUPER COMPACT FOLD

Folded: 11.66 x 33.66 in, Unfolded: 29.16 x 23.5 x 41.16 in

Image: The high chair shown in its compact folded state and fully unfolded for use. This demonstrates the space-saving design and readiness for operation.

2. Attaching the Tray:

Align the tray with the armrests and push it firmly into place until it clicks. The tray is designed to be secure. If the armrests appear slightly warped, as can occur during shipping, store the tray in place for one to two weeks to allow the arms to correct their alignment. This will facilitate easier tray attachment and removal.

MUST-HAVE FEATURES

TRUE Recline

5 Position Comfort Recline
For Infants and Toddlers



Mesh Storage Net
Storage Net On Seat Back
for Babies Belongings

Height Adjustable

9 Height Positions. Sit Baby At
The Table, All The Way To The
Floor.

Safety

5-Point Safety Harness & Passive
Restraint Bar Attached to Seat

DOUBLE TRAY

Double Tray for Easier Cleaning.
Top Tray is Dishwasher Safe

Adjustable Foot Rest

3 Position Foot Rest

Mar-Resistant Caster Wheels

Take Baby Room to Room With You.
No Need to Buy Extra Furniture.



Image: A detailed diagram highlighting key features such as the double tray, 5-point safety harness, and adjustable footrest, indicating their positions on the high chair.

3. Caster Wheel Installation (if not pre-installed):

Ensure the mar-resistant caster wheels are securely attached to the base of the high chair. These wheels feature a "Stop and Go" lock system for safety. Engage the "Stop" position when the high chair is stationary.

OPERATING INSTRUCTIONS

The Peg Perego Siesta offers multiple adjustments to adapt to your child's needs.

Recline Positions

The seat offers 5 recline positions, allowing use as a comfortable recliner for newborns and infants, or an upright high chair for older babies and toddlers.

- To adjust the recline, locate the recline lever, typically on the back of the seat.
- Press the lever and adjust the seat to the desired position. Ensure it locks securely.
- The lay-flat position is suitable for newborns.



5 RECLINING SEAT POSITIONS

Easily Adjusts From Upright To Flat Position With An Adjustable Footrest For Extra Comfort For Baby

Image: An orange Peg Perego Siesta high chair illustrating its five distinct recline positions, from fully upright to a flat infant recliner.

Height Adjustment

The high chair features 9 height positions, enabling it to fit various table heights or to be used as a floor-level toddler seat.

- Locate the height adjustment levers, usually on the sides of the frame.
- Press the levers and raise or lower the seat to the desired height. Release the levers to lock the position.
- Lowering the seat to its lowest position converts it into a toddler seat.



9 HEIGHT POSITIONS

Fits Standard Height Tables - Simply Lower Seat To The Lowest Position So Baby Can Join Family Anywhere

Image: A side profile of the high chair showing the range of its 9 height adjustments, from a standard high chair height to a lower, floor-level position.

Tray Usage

The Siesta includes a double tray system for convenience.

- To attach the tray, align it with the armrests and push until it clicks into place.
- To remove the tray, locate the release mechanism (often a lever or buttons on the underside or sides of the tray) and pull the tray away.
- The top tray is removable for easy cleaning and is dishwasher safe.

Safety Harness

Always secure your child with the 5-point safety harness and the passive restraint bar.

- Place your child in the seat.
- Fasten the shoulder straps, waist straps, and crotch strap. Adjust the straps for a snug, secure fit without being too tight.
- The T-bar (passive restraint bar) is attached to the seat and provides additional security, even when the tray is removed.

Caster Wheels

The mar-resistant caster wheels allow for easy movement of the high chair. They are equipped with a "Stop and Go" locking system.

- To move the high chair, ensure the wheels are in the "Go" position.
- To keep the high chair stationary, engage the "Stop" position on the wheels. Always lock the wheels when the child is in the high chair.

MAINTENANCE AND CLEANING

Regular cleaning ensures hygiene and extends the life of your high chair.

- **Seat Fabric:** The Prima Classe fabric is stain-resistant and durable. It can be easily wiped clean with a damp cloth. For tougher stains, use a mild soap solution and wipe thoroughly.
- **Tray:** The top tray is removable and dishwasher safe for convenient cleaning after messy mealtimes. The lower tray and other plastic parts can be wiped clean with a damp cloth.
- **Frame:** Wipe the frame with a damp cloth and mild soap as needed.
- **Harness:** The safety harness straps can be removed for cleaning. Hand wash with mild soap and water, then air dry completely before reattaching.
- **Storage:** When not in use, the high chair folds compactly for storage. Store in a dry place away from direct sunlight.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Peg Perego Siesta High Chair.

Tray Difficult to Attach or Remove

Issue: The tray does not slide easily into place or is hard to remove, or the armrests appear warped.

Solution: This can sometimes occur due to how the frame is shipped or stored. To resolve this, attach the tray and leave it in place for one to two weeks. The pressure from the tray will help the armrests gradually correct their alignment, making future attachment and removal smoother.

High Chair Does Not Fold or Unfold Smoothly

Issue: The folding or unfolding mechanism feels stiff or gets stuck.

Solution: Ensure all locking mechanisms (e.g., recline, height adjustment) are disengaged before attempting to fold or unfold. Check for any obstructions in the folding joints. Apply a small amount of silicone-based lubricant to moving parts if necessary, avoiding contact with fabric or child-accessible areas.

Wheels Not Rolling or Locking Properly

Issue: Caster wheels are difficult to roll or the "Stop and Go" lock is not engaging.

Solution: Check for debris (food, hair, lint) caught in the wheel mechanisms. Clean the wheels thoroughly. Ensure the lock lever is fully engaged or disengaged. If a wheel is damaged, contact customer support for replacement parts.

SPECIFICATIONS

Feature	Detail
Model Number	IMSIESNA03WD53

Product Dimensions (Unfolded)	29.75"D x 23.75"W x 41.5"H
Product Dimensions (Folded)	11.66"D x 33.66"W (approximate)
Item Weight	24 pounds
Maximum Weight Recommendation	45 Pounds
Material Type	Leather (100% Polyurethane)
Recline Positions	5
Height Positions	9
Portability	Yes (with caster wheels)



Image: The Peg Perego Siesta high chair with its height, width, and depth dimensions clearly marked for reference.

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the official Peg Perego website or the documentation included with your purchase. Peg Perego offers protection plans for extended coverage.

- **Protection Plans:** Optional 2-Year and 3-Year Protection Plans are available for purchase.
- **Official User Manual:** A comprehensive user manual in PDF format is available for download.
[Download User Manual \(PDF\)](#)
- **Instructions for Use:** Additional instructions for use are also available.[Download Instructions for Use \(PDF\)](#)
- **Customer Service:** For further assistance, contact Peg Perego customer service. Refer to the product packaging or official website for contact details.

ADDITIONAL INFORMATION

No official product videos from the seller were found that met the embedding criteria (creator_type: "Seller" and not a "preview" video unless genuinely useful). Please refer to the manufacturer's website for any available video resources.