

OMAIC 1312a

Universal Replacement Infrared Remote Control for Samsung Smart TVs

Model: 1312a

Brand: OMAIC

INTRODUCTION

This manual provides comprehensive instructions for the OMAIC Universal Replacement Infrared Remote Control, designed for seamless operation with a wide range of Samsung Smart TVs. This remote offers a straightforward, no-setup-required experience, allowing you to control your television with ease.

COMPATIBILITY

The OMAIC Universal Replacement Remote is compatible with a broad spectrum of Samsung TV models, including LED, LCD, HD, UHD, 4K, QLED, and Smart TVs. It serves as a direct replacement for various Samsung remote models.

Compatible Samsung TV Series:

- 6 series, 7 series, 8 series
- KU6290, KU6270, KU7000, RU7100
- Q60T, TU8000, TU8200, TU8300, TU850D, TU9000
- Q70T, Q80T, Q90T, Q800T, Q900TS, Q950TS
- LST7, LS05, LS03, RU8000
- Q50, Q60, Q70, Q80, Q90, Q900
- NU8000, NU8500, MU8000, Q6F, Q7F, Q7C, Q8F, Q9F
- N5300, NU6900, NU7100, NU7300
- MU630, MU650, MU700, MU800, MU850, MU6300, MU6500, MU7000, MU7500, MU8000, MU9000 Series

Replaces Samsung Remote Models:

- BN59-01298H, BN59-01298E, BN59-01298A
- BN59-01241A, BN59-01259A, BN59-01312G
- BN59-01330A, BN59-01329A, BN59-01292A

- BN59-01266A, BN59-01312A, BN59-01310A
- BN59-01259E, BN59-01293A, BN59-01199F



ONE IS MORE

Compatible with All Samsung TV

LED TV/LCD TV/ HD TV/ UHD TV
4K TV/ QLED TV / Smart TV



Note this remote out of Voice function

Image: The OMAIC remote shown alongside various Samsung TV models, illustrating its broad compatibility. Note that this remote does not include voice function.

FEATURES

- **No Programming Required:** The remote works immediately upon battery insertion, requiring no complex setup or pairing.
- **Infrared Technology:** Utilizes infrared signals for reliable communication with your TV.
- **Fast Response & Precise Control:** Designed for quick and accurate command execution, effective up to 8 meters (26 feet).
- **Durable Construction:** Made from ABS material with soft silicone buttons, tested for 5,000-8,000 clicks per button.
- **Integrated Shortcut Buttons:** Features dedicated buttons for popular streaming services like Netflix, Prime Video,

and Hulu for quick access.

- **Smart Chip:** Incorporates an upgraded smart chip for enhanced performance.



Image: A visual representation highlighting the remote's dimensions (6.3 inches length, 1.38 inches width), ABS material, soft silicone buttons, and upgraded smart chip.



Fast response. Precise control
Up to 8m/26ft

Image: The remote being used, demonstrating its fast response and precise control from a distance, with icons for Netflix, Prime Video, and Hulu.

SETUP

Installing Batteries:

The remote control requires two (2) AA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote.
2. Slide the back cover downwards to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the back cover upwards until it clicks into place, securing the batteries.

Installing Batteries (Batteries are not included)

- 1 Follow the direction of the picture, slide the back cover to open the battery compartment of the remote
- 2 Insert two AA batteries
- 3 Fasten the back cover of the battery at the very front
- 4 Replace the battery compartment cover



Image: A four-step visual guide demonstrating how to open the battery compartment, insert two AA batteries, and close the cover.

Once batteries are installed, the remote is ready for use with your compatible Samsung TV without any further programming.

OPERATING INSTRUCTIONS

Familiarize yourself with the functions of each button on your OMAIC Universal Remote Control:



Image: A detailed diagram illustrating the layout of the remote control and the function of each button.

Power Button: Press to turn the TV on or off.

Color / Number Button (123): Each press of this button alternates between displaying the colored buttons window and the virtual numeric pad on your TV screen.

Menu Button: Accesses the TV's main menu.

Ambient Mode Button: In TV mode, press this button to enter Ambient Mode. If the TV is completely turned off, pressing this button will turn the TV on directly into Ambient Mode.

Select Button (Center of Directional Pad): Selects or runs a focused item. When pressed while watching content, detailed program information appears.

Directional Pad (Up/Down/Left/Right): Moves the focus and changes values seen on the TV's menu.

Return Button: Returns to the previous menu. When pressed for 1 second or more, the running function is terminated. When pressed while you are watching a program, the previous channel appears.

Play/Pause Button: When pressed, the playback controls appear. Use this button to control the media content that is playing.

- Smart Hub Button:** Returns to the Home Screen.
- VOL (Volume) Button:** Move the button up or down to adjust the volume. To mute the sound, press the button. When pressed for 1 second or more, the Accessibility Shortcuts menu appears.
- CH (Channel) Button:** Move the button up or down to change the channel. To see the Guide screen, press the button.
- Shortcut Buttons (Netflix, Prime Video, Hulu):** Launches the app indicated by the button.

Your browser does not support the video tag.

Video: An official product video demonstrating the OMAIC Universal Replacement Remote for Samsung Smart TVs, highlighting its compatibility and ease of use with shortcut buttons for popular streaming services.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or aerosols.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Damage:** Do not drop the remote or expose it to water or excessive moisture. Keep it away from pets and young children to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote not responding.	◦ Batteries: Check if batteries are inserted correctly (+/- alignment). Replace with new AA batteries if they are old or depleted. ◦ Line of Sight: Ensure there is a clear line of sight between the remote's infrared emitter and the TV's IR receiver. Remove any obstructions. ◦ Distance: Make sure you are within the effective operating range (up to 8 meters / 26 feet).
Buttons require excessive force or are inconsistent.	◦ Battery Level: Low battery power can cause inconsistent button response. Replace batteries. ◦ Physical Damage: Inspect buttons for any physical damage or debris.
Remote does not control TV.	◦ Compatibility: Verify that your Samsung TV model is listed in the compatibility section of this manual. ◦ TV IR Receiver: Ensure the TV's infrared receiver is not blocked or damaged.

SPECIFICATIONS

- **Model Number:** 1312a
- **Product Dimensions:** 6.3 x 1.38 x 0.01 inches (16 x 3.5 x 0.025 cm)
- **Item Weight:** 0.634 ounces (18 grams)

- **Power Source:** 2 x AA batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Max Number of Supported Devices:** 1 (Television)
- **Color:** Black
- **Manufacturer:** OMAIC
- **Special Feature:** Universal compatibility with specified Samsung TV models

WARRANTY AND SUPPORT

OMAIC is committed to providing high-quality replacement remote controls and excellent customer service. For any questions regarding your OMAIC Universal Replacement Remote Control, including compatibility, operation, or troubleshooting, please contact our customer support team.

We aim to respond to all inquiries within 12 hours on working days. Please refer to your purchase documentation or the seller's information for specific warranty details and contact methods.

For further assistance, you may visit the official OMAIC store on Amazon: [OMAIC Store](#).

© 2025 OMAIC. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question