

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rilyson](#) /

› [Rilyson Patio Side Table with 2-Tier Storage Shelf, Model B09XTMP24P Instruction Manual](#)

Rilyson B09XTMP24P

Rilyson Patio Side Table Instruction Manual

Model: B09XTMP24P

INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your Rilyson Patio Side Table. Please read this manual thoroughly before assembly and use to ensure proper function and safety.



Figure 1: Rilyson Patio Side Table (Illustrative Diagram)

SAFETY INFORMATION

For your safety and to prevent damage to the product, observe the following guidelines:

- Always assemble the table according to the provided instructions.
- Ensure the table is stable and properly placed on a flat, level surface to prevent tipping.
- Keep fingers and other body parts clear of pinch points during assembly.
- Do not exceed the recommended weight capacity for the table surfaces.
- Avoid placing hot items directly on the wicker surface; use coasters or protective mats.

PACKAGE CONTENTS

Before beginning assembly, verify that all components and tools are present. If any parts are missing or damaged, contact customer support.

- Table Top Frame
- Four Leg Pieces
- Lower Storage Shelf Panel
- Assembly Hardware (screws, washers, nuts)
- Assembly Tools (wrench, screwdriver)
- Instruction Manual (this document)



Figure 2: Example of table components and hardware. Actual parts may vary slightly.

SETUP AND ASSEMBLY

Assembly is designed to be straightforward and can typically be completed by one person. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Legs to Top Frame:** Identify the table top frame and the four leg pieces. Securely attach each leg to the designated points on the underside of the top frame using the provided hardware (screws, washers, nuts). Do not fully tighten screws yet.
3. **Install Lower Shelf:** Position the lower storage shelf between the legs. Align the holes on the shelf with the attachment points on the legs. Secure with the remaining hardware.
4. **Tighten All Hardware:** Once all components are loosely assembled, place the table upright on a level surface. Gently press down on the table to ensure it sits evenly, then progressively tighten all screws and bolts until secure. Avoid over-tightening.
5. **Verify Stability:** Check the table for stability. If any wobbling occurs, loosen the screws slightly, adjust the table on a flat surface, and re-tighten. The adjustable footcaps can also be used for minor leveling.



Figure 3: Table dimensions for placement planning.



Figure 4: Adjustable footcap detail for stability.

OPERATION

The Rilyson Patio Side Table is designed for outdoor use, providing a convenient surface and storage.

- **Placement:** Position the table on a flat, stable surface on your patio, deck, porch, balcony, or garden.
- **Weight Capacity:** Avoid placing excessively heavy items on the table top or lower shelf to prevent damage or instability.
- **Storage:** Utilize the lower shelf for storing smaller outdoor items such as books, magazines, or decorative accents.



Figure 5: The side table in an outdoor patio environment.

CARE AND MAINTENANCE

Regular care will help maintain the appearance and longevity of your patio table.

- **Cleaning:** Wipe the wicker and frame surfaces with a soft cloth dampened with mild soap and water. Rinse thoroughly with clean water and dry completely to prevent water spots or residue buildup.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong detergents, as these can damage the wicker and frame finish.
- **Seasonal Storage:** During prolonged periods of non-use or harsh weather conditions (e.g., heavy snow, extreme cold), it is recommended to cover the table or store it indoors to protect it from the elements.
- **Inspection:** Periodically check all hardware connections and tighten if necessary to ensure continued stability.

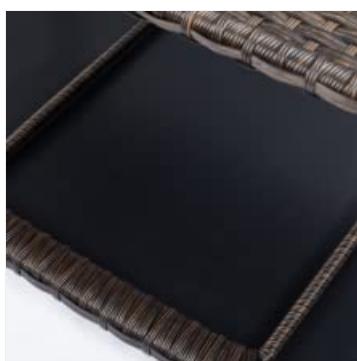


Figure 6: Detail of the waterproof PP board for support.

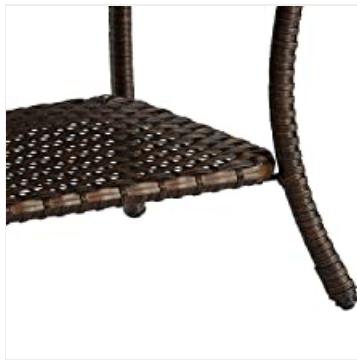


Figure 7: Detail of the wicker lower shelf for storage.

TROUBLESHOOTING

Refer to this section for solutions to common issues.

Problem	Possible Cause	Solution
Table is wobbly after assembly.	Hardware not fully tightened or uneven surface.	Place the table on a flat surface. Loosen all screws slightly, press down on the table to settle, then re-tighten. Adjust the footcaps if necessary.
Difficulty aligning screw holes during assembly.	Parts are not correctly oriented or screws are tightened prematurely.	Ensure all parts are oriented as shown in the assembly diagrams. Do not fully tighten any screws until all components are loosely assembled.
Wicker appears discolored or damaged.	Prolonged exposure to harsh weather or improper cleaning.	Ensure regular cleaning and proper storage during off-season. Contact customer support if damage is significant.

SPECIFICATIONS

Brand	Rilyson
Model	B09XTMP24P
Product Dimensions (D x W x H)	23.5" x 23.5" x 21.5"
Color	Brown/Wicker Top
Shape	Square
Material Type	Alloy Steel, Polypropylene, Rattan
Frame Material	Metal (Powder Coated)
Top Material	Rattan
Number of Tiers	2
Indoor/Outdoor Usage	Outdoor
Assembly Required	Yes (Tools included)

WARRANTY INFORMATION

For specific warranty details regarding your Rilysen Patio Side Table, please refer to the documentation included with your purchase or contact Rilysen customer support directly. Protection plans may also be available for purchase separately.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Rilysen customer support:

- **Manufacturer:** Rilysen
- **Website:** [Visit the Rilysen Store on Amazon](#) (for general product information)
- For direct support, please refer to the contact information provided on your product packaging or purchase receipt.