

FLEXISPOT EN1

# FLEXISPOT EN1 Electric Standing Desk User Manual

Model: EN1 (EC1S4830N)

		<a href="#">Introduction</a>	<a href="#">Safety Information</a>	<a href="#">Package</a>			
<a href="#">Contents</a>	<a href="#">Assembly</a>	<a href="#">Operation</a>	<a href="#">Maintenance</a>	<a href="#">Troubleshooting</a>	<a href="#">Specifications</a>	<a href="#">Warranty &amp; Support</a>	

## 1. INTRODUCTION

Thank you for choosing the FLEXISPOT EN1 Electric Standing Desk. This manual provides essential information for the safe and efficient use of your new adjustable desk. Please read these instructions carefully before assembly and operation to ensure proper functionality and longevity of the product.



Image: The FLEXISPOT EN1 Electric Standing Desk featuring a mahogany desktop and silver frame, set up with a laptop, external monitor, keyboard, mouse, and a cup of coffee. Headphones hang from the side.

## 2. SAFETY INFORMATION

### Important Safety Precautions:

- Before assembly, ensure all necessary tools are available and instructions are fully understood.
- The maximum weight capacity for this product is **176 lbs (80 kg)**. Do not exceed this limit to prevent instability or damage.
- After assembly, verify the desk is stable and does not wobble. Adjust stabilizing foot pads if necessary.
- Do not operate the desk without properly securing the desk frame and top. Improper assembly can lead to injury or product damage.
- Always unplug the desk from the power source when not in use or during maintenance.
- This product is intended for adult use and is not suitable as a toy for children.

## 3. PACKAGE CONTENTS

The FLEXISPOT EN1 Electric Standing Desk is typically shipped in two packages: one for the desktop and

one for the desk frame. Please verify all components are present before beginning assembly.

- One-piece desktop (Mahogany, 48x30 inches)
- Electric lifting frame (Silver)
- Control panel with memory presets
- Power adapter and cables
- Assembly tools
- Detailed instruction manual



Image: An illustration depicting two separate packages, one labeled 'Desktop' and the other 'Desk Frame,' highlighting that components may arrive in multiple shipments.

## 4. ASSEMBLY INSTRUCTIONS

Assembly of the FLEXISPOT EN1 desk is designed to be straightforward. All necessary tools and detailed instructions are included in the package. For visual guidance, a detailed installation video is available on the official FLEXISPOT product page or support channels.

1. Unpack all components and verify against the package contents list.
2. Assemble the desk frame according to the provided instructions, ensuring all screws are tightened securely.
3. Attach the one-piece desktop to the assembled frame.
4. Connect the control panel and power cables as indicated in the manual.
5. Place the desk in its desired location and adjust the leveling feet for stability.

*It is recommended to have two people for assembly to ensure safety and ease of handling, especially when attaching the desktop.*

## DUAL-STAGE LEGS

Continuous height adjustment  
from 28.1"-45.7"



Image: A technical diagram showing the desktop dimensions (48"x30") and the adjustable height range of the desk frame (28.1"-45.7").

## 5. OPERATING INSTRUCTIONS

### 5.1. Height Adjustment

The FLEXISPOT EN1 desk features a smooth electric lift system for easy height adjustment. The desk can be adjusted from 28.1 inches to 45.7 inches (excluding the 1-inch desktop thickness). The motor operates quietly, with noise levels below 50 dB.

- Use the **Up** and **Down** buttons on the control panel to manually adjust the desk height.

### 5.2. Memory Presets

The control panel includes four memory preset buttons, allowing you to save and recall your preferred sitting and standing heights instantly.

1. Adjust the desk to your desired height using the Up/Down buttons.



2. Press the '**M**' button (or similar memory set button, if applicable) followed by one of the numbered preset buttons (**1, 2, 3, or 4**) to save the current height.
3. To recall a saved height, simply press the corresponding numbered preset button.



Image: A detailed view of the desk's programmable control panel, highlighting the LED display, Up/Down adjustment buttons, and four numbered memory preset buttons.

## 6. MAINTENANCE

To ensure the longevity and appearance of your FLEXISPOT EN1 desk, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the desktop and frame with a damp cloth. Avoid harsh chemicals or abrasive cleaners that could damage the finish.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Cable Management:** Ensure power cables are not pinched or tangled during height adjustments.

## 7. TROUBLESHOOTING

If you encounter any issues with your FLEXISPOT EN1 desk, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Desk does not move.	Power cable disconnected, motor overload, or control panel issue.	<p>Check if the power cable is securely plugged into both the desk and the wall outlet.</p> <p>Unplug the desk for 10 minutes, then plug it back in to reset the motor.</p> <p>Ensure the weight on the desk does not exceed 176 lbs.</p>
Desk moves unevenly or makes unusual noises.	Uneven load, loose connections, or obstruction.	<p>Distribute weight evenly across the desktop.</p> <p>Check all assembly screws for tightness.</p> <p>Inspect for any obstructions under or around the desk legs.</p>
Memory presets are not working.	Presets not saved correctly or temporary glitch.	<p>Re-save the memory presets following the instructions in Section 5.2.</p> <p>Perform a power cycle (unplug and replug) to reset the control panel.</p>

If these steps do not resolve the issue, please contact FLEXISPOT customer support for further assistance.

## 8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	FLEXISPOT
Model Number	EC1S4830N
Desktop Dimensions (D x W)	30"D x 48"W
Adjustable Height Range	28.1" - 45.7" (without 1" desktop thickness)
Desktop Thickness	1 inch
Color	Mahogany Top, Silver Frame
Base Material	Alloy Steel
Top Material Type	Engineered Wood
Maximum Weight Capacity	176 lbs (80 kg)
Lifting Mechanism	Electric
Noise Level	Below 50 dB

Assembly Required	Yes (2 people recommended)
Included Components	Desk Organizer
Product Care	Wipe with Damp Cloth



Image: An illustration detailing the overall dimensions of the desk: 47.6 inches height, 30 inches depth, and 48 inches width.

## 9. WARRANTY & CUSTOMER SUPPORT

### 9.1. Warranty Information

 
 
 

The FLEXISPOT EN1 Electric Standing Desk comes with a**Full Warranty**. For specific terms and conditions, please refer to the warranty card included with your product or visit the official FLEXISPOT website.

### 9.2. Customer Support


Should you have any questions during assembly, operation, or require technical assistance, please do not hesitate to contact FLEXISPOT customer support. Contact information can typically be found on the product packaging, the official FLEXISPOT website, or through your retailer.

For additional resources and product information, visit the official FLEXISPOT store:[FLEXISPOT Amazon Store](#)

## Related Documents

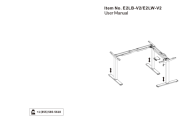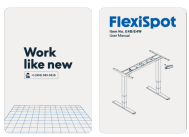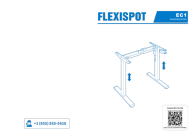	<a href="#">FlexiSpot E2LB-V2/E2LW-V2 Electric Height-Adjustable Desk User Manual</a> User manual for the FlexiSpot E2LB-V2 and E2LW-V2 electric height-adjustable desks, covering assembly, operation, technical specifications, and troubleshooting.
	<a href="#">FlexiSpot E4B/E4W Electric Standing Desk User Manual</a> Comprehensive user manual for the FlexiSpot E4B/E4W electric standing desk, covering specifications, assembly instructions, keypad operation, troubleshooting, and warranty information.
	<a href="#">FlexiSpot EC1 Electric Height Adjustable Standing Desk Assembly Guide</a> This assembly guide provides step-by-step instructions for setting up the FlexiSpot EC1 electric height-adjustable standing desk. It includes specifications, parts list, assembly procedures, keypad operation, troubleshooting tips, and warranty information.
	<a href="#">FlexiSpot E7QB Standing Desk User Manual</a> Comprehensive user manual for the FlexiSpot E7QB standing desk, covering components, installation, usage, troubleshooting, and warranty information.

 Documents - FLEXISPOT – EN1

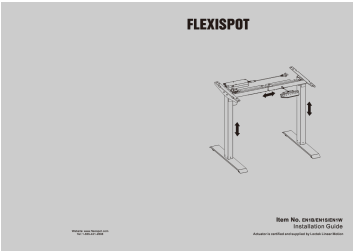


[pdf] User Manual

en1b en1s en1w manual Administrator flexispot media productattach e n

...

 
lang: score:23 filesize: 5.12 M page\_count: 6 document date: 2020-06-29

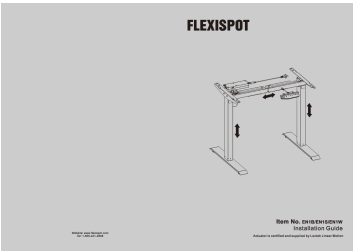

[FlexiSpot EN1B/EN1S/EN1W Height Adjustable Desk Installation Guide](#)

Comprehensive installation guide for FlexiSpot EN1B, EN1S, and EN1W electric height-adjustable desk frames. Includes specifications, parts list, step-by-step assembly instructions, operation guide, troubleshooting, and warranty information.

 lang: score:19 filesize: 5.17 M page\_count: 6 document date: 2020-06-29

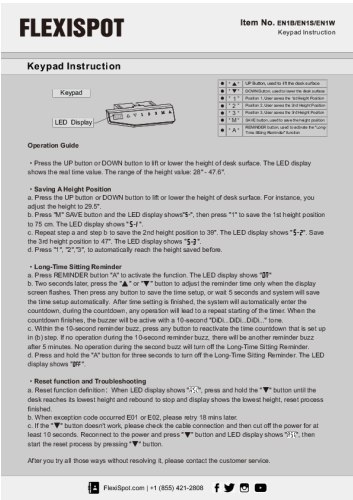

[FlexiSpot EN1B/EN1S/EN1W Keypad Instruction Manual](#)

Comprehensive guide for operating and troubleshooting the FlexiSpot EN1B/EN1S/EN1W standing desk keypad, including height adjustment, memory presets, and long-time sitting reminders.

lang:en score:14 filesize: 471.71 K page\_count: 2 document date: 2020-07-23



