

TEAC PD-301-X

TEAC PD-301-X CD Player / FM Tuner Instruction Manual

Model: PD-301-X

1. INTRODUCTION

The TEAC PD-301-X is a compact, high-quality CD player featuring a slot-in disc loading mechanism. It is designed to integrate seamlessly into various audio setups, offering both CD playback and an integrated FM tuner. Additionally, it supports USB memory playback, providing versatile audio source options.

Key Features:

- Slot-in type CD player for convenient disc loading.
- Integrated wide FM compatible tuner for radio reception.
- USB memory playback function for digital audio files.
- Multiple audio outputs including RCA, Coaxial, and Optical.

2. SETUP

2.1 Unpacking and Contents

Carefully remove all components from the packaging. Ensure the following items are present:

- TEAC PD-301-X CD Player Unit
- Power Cord
- Remote Control
- FM Antenna

2.2 Placement

Place the unit on a stable, level surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.

2.3 Connections

Connect the TEAC PD-301-X to your audio system using the appropriate cables. The unit offers RCA (analog), Coaxial (digital), and Optical (digital) output options.

1. **Power Connection:** Connect the supplied power cord to the DC IN 12V port on the rear of the unit and then to a suitable power outlet.
2. **Audio Output:**
 - For analog connection, use RCA cables to connect the "LINE OUT" ports (L/R) to the corresponding analog input on your amplifier or receiver.
 - For digital connection, use either a Coaxial cable to connect the "COAXIAL" port or an Optical cable to connect the "OPTICAL" port to a digital input on your DAC or amplifier.
3. **FM Antenna:** Connect an FM antenna (75Ω) to the "FM 75Ω" terminal on the rear panel for radio reception.



Figure 2.3.1: Rear panel connections of the TEAC PD-301-X. This image displays the FM 75Ω antenna input, Coaxial and Optical digital outputs, RCA analog line outputs (L/R), and the DC 12V power input.

3. OPERATING INSTRUCTIONS

3.1 Front Panel Overview



Figure 3.1.1: Front panel of the TEAC PD-301-X. Key elements include the power button, USB-A port, disc slot, display screen, and control buttons for playback, track navigation, and source selection.

3.2 Basic CD Playback

1. **Power On:** Press the power button (usually located on the left side of the front panel) to turn on the unit.
2. **Insert CD:** Gently insert a CD into the slot-in disc loading mechanism. The unit will automatically pull the disc in.
3. **Playback:** The unit may begin playback automatically. If not, press the Play/Pause button (▶/⏸) on the front panel or remote control.
4. **Track Navigation:** Use the Skip Forward (▶▶) and Skip Backward (◀◀) buttons to navigate between tracks.

- 5. **Stop:** Press the Stop (■) button to stop playback.
- 6. **Eject:** Press the Eject (▲) button to eject the CD.

3.3 USB Memory Playback

- 1. **Insert USB:** Insert a USB memory stick into the USB-A port on the front panel.
- 2. **Select Source:** Press the "SOURCE" button on the front panel or remote control until "USB" is selected on the display.
- 3. **Playback:** Use the playback controls (Play/Pause, Skip, Stop) to manage audio files on the USB device.

3.4 FM Tuner Operation

- 1. **Select Source:** Press the "SOURCE" button until "FM" is selected.
- 2. **Tune Stations:** Use the tuning buttons (often combined with track navigation buttons) to scan for FM radio stations. Refer to the detailed manual for specific tuning and preset saving instructions.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your TEAC PD-301-X.

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the unit. Do not use liquid cleaners, aerosols, or abrasive chemicals, as they may damage the finish.
- **Disc Handling:** Always handle CDs by their edges. Avoid touching the playing surface. Store discs in their cases to prevent scratches and dust accumulation.
- **Ventilation:** Ensure that the ventilation openings on the unit are not blocked. Proper airflow prevents overheating.
- **Power Off:** When not in use for extended periods, disconnect the power cord from the wall outlet.

5. TROUBLESHOOTING

If you encounter issues with your TEAC PD-301-X, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
No power	Power cord not connected properly; Power outlet not active.	Ensure power cord is securely connected. Check if the power outlet is working by plugging in another device.
No sound	Audio cables not connected; Incorrect input selected on amplifier; Volume too low.	Verify audio cable connections. Select the correct input on your amplifier/receiver. Increase volume.
CD does not play or skips	Disc is dirty or scratched; Disc inserted incorrectly; Unit lens is dirty.	Clean the CD with a soft, lint-free cloth. Ensure the disc is inserted correctly. Try a different CD. If issues persist, consider a CD lens cleaner.
Poor FM reception	Antenna not connected or poorly positioned; Weak signal.	Ensure FM antenna is connected securely. Adjust antenna position for better reception.
USB playback issues	Unsupported file format; USB drive not formatted correctly; USB drive corrupted.	Ensure audio files are in a supported format (e.g., MP3, WMA, WAV). Check USB drive formatting (FAT32 is common). Try a different USB drive.

If the problem persists after trying these solutions, please contact TEAC customer support or a qualified service technician.

6. SPECIFICATIONS

Feature	Detail
Brand	TEAC
Model Name	PD-301-X
Item Model Number	PD-301-X/S
Product Dimensions	9.13 x 8.46 x 2.4 inches
Item Weight	4.62 pounds
Color	Silver <i>(Note: Product title mentions Black, but specifications list Silver. This manual refers to the Silver model.)</i>
Connectivity Technology	RCA, Coaxial, Optical
Included Components	CD Player, Power Cord
Date First Available	April 28, 2022

7. WARRANTY AND SUPPORT


TEAC products are manufactured to high-quality standards. For information regarding warranty coverage, service, or technical support, please refer to the warranty card included with your product or visit the official TEAC website.


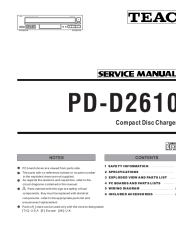



Manufacturer: TEAC

Website: www.teac.com

© 2024 TEAC Corporation. All rights reserved.

Related Documents - PD-301-X

	<p>TEAC PD-507T CD Transport Owner's Manual</p> <p>Official owner's manual for the TEAC PD-507T CD Transport, providing setup, operation, safety instructions, and specifications.</p>
---	--

 <p>TEAC SERVICE MANUAL PD-H500i Compact Disc Player</p>	<p>TEAC PD-H500i Compact Disc Player Service Manual</p> <p>Comprehensive service manual for the TEAC PD-H500i Compact Disc Player, detailing specifications, IC pin functions, block diagrams, wiring diagrams, schematic diagrams, printed circuit boards, mechanism assembly, exploded views, and parts lists.</p>
 <p>TEAC SERVICE MANUAL PD-D2610 Compact Disc Charger</p>	<p>TEAC PD-D2610 Service Manual: Specifications, Parts, and Schematics</p> <p>Comprehensive service manual for the TEAC PD-D2610 Compact Disc Charger, including safety information, technical specifications, exploded views, parts lists, wiring diagrams, and schematics.</p>
 <p>TEAC SERVICE MANUAL PD-H570 Compact Disc Player</p>	<p>TEAC PD-H570 Compact Disc Player Service Manual</p> <p>Comprehensive service manual for the TEAC PD-H570 Compact Disc Player, providing detailed technical information including specifications, IC pin functions, wiring diagrams, block diagrams, schematic diagrams, printed circuit board layouts, exploded views, and parts lists for maintenance and repair.</p>
 <p>TEAC PD-505T CD Transport</p> <p>OWNER'S MANUAL MODE D'EMPLOI MANUAL DEL USUARIO</p>	<p>TEAC PD-505T CD Transport Owner's Manual</p> <p>Discover how to get the best performance from your TEAC PD-505T CD Transport with this detailed owner's manual. Covers setup, operation, safety, troubleshooting, and specifications.</p>
 <p>TEAC SERVICE MANUAL PD-H500C Compact Disc Player</p>	<p>TEAC PD-H500C Compact Disc Player Service Manual</p> <p>Detailed service manual for the TEAC PD-H500C Compact Disc Player, including specifications, component lists, exploded views, block diagrams, and schematic diagrams.</p>