



Manuals.plus /

› Transwon /

› Transwon Kids Case for Maxwest Nitro 8 / XMobile X8A Tablet Instruction Manual

Transwon Nitro 8 / X8A

Transwon Kids Case for Maxwest Nitro 8 / XMobile X8A Tablet Instruction Manual

Model: Nitro 8 / X8A

INTRODUCTION

This manual provides comprehensive instructions for the Transwon Kids Case, designed specifically for the Maxwest Nitro 8 Tablet and XMobile X8A Tablet. It details the installation process, proper usage of its features, maintenance guidelines, and product specifications to ensure optimal protection and functionality for your device.

SETUP: INSTALLING YOUR TABLET CASE

Follow these steps to correctly install your tablet into the Transwon silicone case:

1. Ensure your tablet is clean and free of any debris.
2. Gently stretch the silicone case around the edges of your Maxwest Nitro 8 or XMobile X8A Tablet.
3. Press firmly around all sides to ensure the tablet is securely seated within the case. Verify that all ports, buttons, and camera cutouts align correctly.



Image showing the Transwon Kids Case in blue, designed to fit the Maxwest Nitro 8 and XMobile X8A tablets. The case provides full access to all tablet features.

OPERATING: USING THE KICKSTAND FEATURE

The Transwon Kids Case includes a foldable kickstand for convenient hands-free viewing. This feature allows you to prop up your tablet at an optimal angle for various activities.

1. To deploy the kickstand, locate the foldable stand on the back of the case.
2. Gently pull the stand outwards until it locks into an upright position, forming a stable triangular support.
3. Place your tablet on a flat surface to utilize the stand for viewing videos, typing, or other activities.
4. To fold the kickstand back, gently push it until it lies flat against the case, ensuring it is fully retracted.

This image demonstrates the proper way to engage the kickstand for stable tablet support (left, marked with a green check) and an incorrect, unstable method (right, marked with a red 'X'). Ensure the kickstand is fully extended and locked for optimal stability.

MAINTENANCE: CLEANING YOUR CASE

The premium silicone material of your Transwon case is designed for durability and easy cleaning. Regular cleaning will help maintain its appearance and hygiene.

1. Remove your tablet from the case before cleaning to prevent any moisture damage to your device.
2. Wash the silicone case directly with water. A mild soap can be used if necessary for stubborn dirt.
3. Rinse the case thoroughly to remove all soap residue.
4. Allow the case to air dry completely before re-installing your tablet to ensure no moisture is trapped.

TROUBLESHOOTING: COMMON QUESTIONS

- **Case does not fit my tablet:** This case is specifically designed for the **Maxwest Nitro 8 Tablet** and **XMobile X8A Tablet**. It is not compatible with other models, including the Maxwest Astro 8R. Please verify your tablet model number before purchase and installation.
- **Kickstand is unstable:** Ensure the kickstand is fully extended and locked into its designated position. Refer to the "Operating: Using the Kickstand Feature" section for correct usage and visual guidance.
- **Access to ports/buttons is blocked:** Double-check that the tablet is correctly seated within the case and that all cutouts align perfectly. If not, remove and carefully re-install the tablet, ensuring proper alignment.

SPECIFICATIONS

Feature	Detail
Brand	Transwon
Compatible Devices	MAXWEST NITRO 8 Tablet (NOT for Astro 8R), XMobile X8A Tablet
Material	Silicone Rubber
Form Factor	Case
Shell Type	Hybrid
Item Weight	5.9 ounces
Package Dimensions	10 x 7.64 x 1.02 inches

SUPPORT

For further assistance or inquiries regarding your Transwon Kids Case, please refer to the seller's contact information on the product purchase page. When contacting support, please ensure you have your product model (Maxwest Nitro 8 / XMobile X8A) ready for efficient service.