

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [wogree](#) /

› [Wogree 2.1ch Soundbar User Manual](#)

wogree S66

Wogree 2.1ch Soundbar User Manual

Model: S66

INTRODUCTION

Thank you for purchasing the Wogree 2.1ch Soundbar with Built-in Subwoofer. This manual provides essential information for setting up, operating, and maintaining your new soundbar. Please read it thoroughly before use to ensure optimal performance and safety.

IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, fire, or damage to the unit, please observe the following safety precautions:

- Do not expose this appliance to dripping or splashing.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- Ensure proper ventilation. Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

PACKAGE CONTENTS

Please check that all items listed below are included in your package:

- Wogree 2.1ch Soundbar (Model S66)
- Remote Control
- Optical Cable
- Stereo RCA to 3.5mm Audio Cable
- Power Adapter

- Mount Screws (for wall mounting)
- User Manual (this document)

What's In the Box:



User Manual



Optical Cable



Mount Screws



Stereo RCA to 3.5mm Audio Cable



Power Adapter



Remote Control

Image: All items included in the Wogree Soundbar package.

PRODUCT OVERVIEW

The Wogree 2.1ch Soundbar is designed to enhance your home audio experience with clear sound and deep bass. It features a compact design suitable for various TV sizes and multiple connectivity options.



Image: Front view of the Wogree Soundbar with its remote control.

Key Features:

- 2.1 Channel Audio:** Delivers clear sound with integrated bass.
- Built-in Subwoofer:** Provides enhanced bass performance without a separate unit.
- 80W Output:** Powerful audio for an immersive experience.
- Compact 24-inch Design:** Fits easily in front of most TVs.
- Multiple Inputs:** Supports Bluetooth, TV-ARC (HDMI), Optical, AUX, Line-in, and USB.
- Multiple EQ Modes:** Optimized sound profiles for Music, Movie, Dialogue, and 3D audio.



Image: Left: Internal speaker configuration. Right: Visual representation of sound modes.

SETUP

Follow these steps to set up your Wogree Soundbar:

1. Placement

Place the soundbar on a stable, flat surface directly in front of your TV, or mount it on the wall below your TV using the provided screws. Ensure there are no obstructions in front of the soundbar to allow for optimal sound projection.

24 Inches is Great for Almost All-size TVs



Image: Soundbar positioned below a television.

2. Connecting to Power

1. Connect the power adapter to the DC 18V input port on the back of the soundbar.
2. Plug the other end of the power adapter into a wall outlet.

3. Audio Connections

Choose one of the following connection methods based on your TV's available ports:

Compatible with All Your Devices



AUX



Optical



USB



Bluetooth



TV-ARC



Image: Available input ports on the back of the soundbar.

- **HDMI (TV ARC):**

- a. Connect an HDMI cable (not included) from the TV ARC port on the soundbar to the HDMI ARC port on your TV.
- b. Ensure your TV's audio output is set to HDMI ARC or external speakers. This connection allows your TV remote to control the soundbar volume and power.

- **Optical:**

- a. Connect the provided Optical cable from the OPTICAL port on the soundbar to the Optical Out port on your TV.
- b. Set your TV's audio output to "Optical" and ensure the digital audio format is set to "PCM" (Pulse Code Modulation).

- **AUX / Line-in:**

- a. Connect the provided Stereo RCA to 3.5mm Audio Cable from the LINE IN (AUX L/R) ports on the soundbar to the corresponding audio output ports on your TV or other audio device.
- b. Alternatively, use a 3.5mm to 3.5mm audio cable (not included) to connect to the AUX port.

- **Bluetooth:**

- Power on the soundbar. Press the "Input" button on the remote or the soundbar to select Bluetooth mode (indicated by a blue LED).
- Enable Bluetooth on your device (smartphone, tablet, etc.) and search for "Wogree S66". Select it to pair.
- Once paired, the blue LED will stop flashing and remain solid.



Image: Bluetooth connection setup.

- **USB:**

- Insert a USB flash drive (FAT32 format, max 32GB) into the USB port on the soundbar.
- The soundbar will automatically switch to USB mode and begin playing compatible audio files.

OPERATING INSTRUCTIONS

Your Wogree Soundbar can be controlled using the included remote control or the physical buttons on the unit.

Remote Control Functions:



Image: Remote control and physical buttons.

- **Power Button:** Turns the soundbar On/Off.
- **Input Button:** Cycles through input modes (Bluetooth, TV-ARC, Optical, AUX, USB).
- **VOL+/-:** Adjusts the main volume.
- **TR+/-:** Adjusts treble levels.
- **BA+/-:** Adjusts bass levels.
- **Mute Button:** Mutes or unmutes the sound.

- **Play/Pause:** Plays or pauses audio (Bluetooth/USB mode).
- **Previous/Next:** Skips to the previous or next track (Bluetooth/USB mode).
- **EQ Modes (Music, Movie, Dialog, 3D):** Selects preset equalizer modes for optimized sound.

Physical Buttons:

On the side of the soundbar, you will find basic controls:

- **Power Button:** Short press to change input, long press to power On/Off.
- **Volume +/-:** Adjusts the volume.

MAINTENANCE

Proper care will ensure the longevity of your soundbar:

- **Cleaning:** Use a soft, dry cloth to clean the surface of the soundbar. Do not use liquid cleaners or aerosol sprays.
- **Ventilation:** Keep the ventilation openings clear of dust and debris.
- **Storage:** If storing the soundbar for an extended period, unplug it from the power outlet and store it in a cool, dry place.
- **Avoid Moisture:** Do not expose the soundbar to water or excessive humidity.

TROUBLESHOOTING

If you encounter issues with your soundbar, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound from soundbar.	Soundbar not powered on. Incorrect input selected. Cables not connected properly. TV audio output settings incorrect. Soundbar is muted.	Ensure soundbar is powered on. Press the "Input" button to select the correct source. Check all audio cables are securely connected. Verify TV audio output is set to external speakers/PCM (for Optical). Press the Mute button on the remote.
Bluetooth pairing issues.	Soundbar not in pairing mode. Device too far from soundbar. Interference from other devices.	Ensure soundbar is in Bluetooth mode (blue LED flashing). Move your device closer to the soundbar. Turn off other Bluetooth devices nearby. Try unpairing and re-pairing the device.
Remote control not working.	Batteries are dead or inserted incorrectly. Obstruction between remote and soundbar. Remote is too far.	Replace batteries and check polarity. Remove any obstructions. Ensure you are within range and pointing the remote at the soundbar's sensor.

SPECIFICATIONS

Feature	Detail
Model Number	S66
Speaker Type	Surround Sound (2.1 Channel)

Feature	Detail
Speaker Maximum Output Power	80 Watts
Product Dimensions	3"D x 24"W x 3"H
Item Weight	5.3 Pounds
Connectivity Technology	Wired (TV-ARC, Optical, AUX, USB), Wireless (Bluetooth)
Bluetooth Version	5.0 (implied from A+ content image)
Control Method	Remote Control, Physical Buttons
Special Features	Bass Boost, Hi Res Audio, LED Light, USB Port, Built-in DSP, 4 EQ Modes

WARRANTY AND SUPPORT

The Wogree 2.1ch Soundbar comes with a Full Warranty. For detailed warranty information, please refer to the warranty card included in your package or contact Wogree customer support.

If you require technical assistance or have questions about your product, please visit the official Wogree store or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official website.

Wogree Brand Store: [Visit Wogree Store on Amazon](#)