



[Manuals.plus](#) /

> [SMAEL](#) /

> SMAEL Model 8053 Men's Dual Display Sports Watch Instruction Manual

## SMAEL 8053

# SMAEL Model 8053 Men's Dual Display Sports Watch Instruction Manual

Model: 8053

## INTRODUCTION

---

Thank you for choosing the SMAEL Model 8053 Men's Dual Display Sports Watch. This watch combines a classic analog display with a modern digital interface, offering multiple functions including time, date, alarm, stopwatch, and LED backlight. Designed for durability and water resistance, it is suitable for various outdoor activities. Please read this manual carefully to understand the watch's features and ensure proper operation and maintenance.



Image: Front view of the SMAEL Model 8053 watch, showcasing its yellow and black design with both analog hands and a digital display.

## WATCH COMPONENTS AND BUTTONS

---

Familiarize yourself with the watch's buttons and their functions:

- **LIGHT Button (Top Left):** Activates the LED backlight.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch).
- **START Button (Top Right):** Used to start/stop the stopwatch, adjust settings.
- **RESET Button (Bottom Right):** Used to reset the stopwatch, adjust settings.
- **Crown (Right Side):** Used to set the analog time.

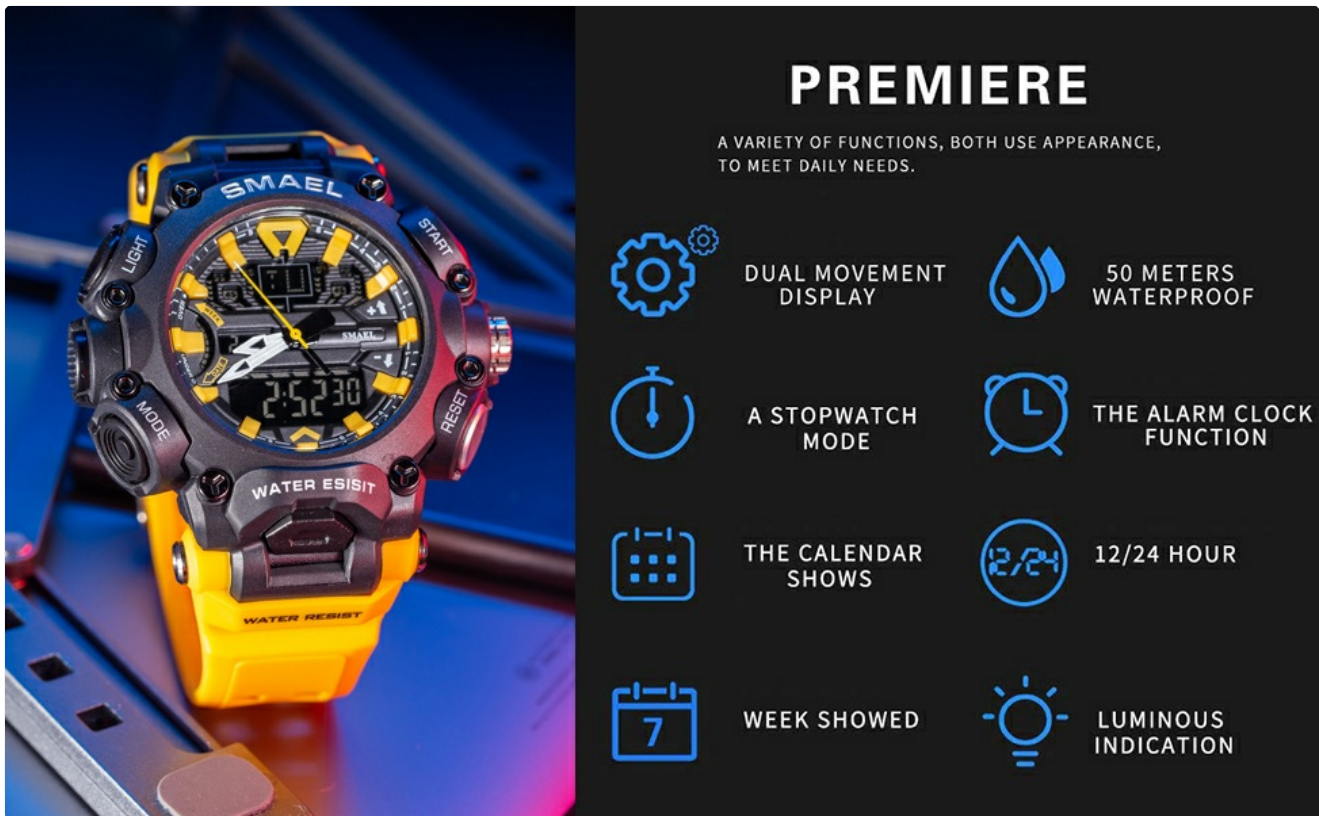


Image: Diagram illustrating the location and labels of the LIGHT, MODE, START, RESET buttons, and the crown on the SMAEL watch.

## OPERATING INSTRUCTIONS

### 1. Setting Analog Time

1. Pull out the crown on the right side of the watch.
2. Rotate the crown to adjust the analog hands to the desired time.
3. Push the crown back in to start the analog movement.

### 2. Setting Digital Time and Date

1. From the normal time display, press the **MODE** button repeatedly until the seconds start flashing. This indicates you are in setting mode.
2. Press the **RESET** button to cycle through the settings: Seconds → Hour → Minute → Month → Date → Day of Week.
3. Use the **START** button to increase the flashing value. Hold the **START** button to advance rapidly.
4. Once all settings are adjusted, press the **MODE** button to exit the setting mode and return to the normal time display.
5. To switch between 12-hour and 24-hour format, press the **RESET** button while the hour is flashing during time setting.

### 3. Using the Alarm Function

1. From the normal time display, press the **MODE** button once to enter the Alarm mode. The alarm time will be displayed.
2. Press the **RESET** button to select the hour or minute to be set (the selected value will flash).
3. Use the **START** button to adjust the flashing hour or minute.
4. Press the **MODE** button to confirm the alarm time and exit setting mode.
5. To turn the alarm ON/OFF, press the **START** button while in Alarm mode (without any value flashing). An alarm icon will appear/disappear.
6. When the alarm sounds, press any button to stop it.

### 4. Using the Stopwatch

1. From the normal time display, press the **MODE** button twice to enter the Stopwatch mode. The display will show "00:00:00".
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to "00:00:00" while it is paused.
5. To resume timing after pausing, press the **START** button.
6. To exit Stopwatch mode, press the **MODE** button.

## 5. Using the LED Backlight

- Press the **LIGHT** button (top left) to illuminate the digital display for a few seconds.



Image: The SMAEL watch digital display illuminated by its LED backlight, showing clear visibility in low light conditions.

## FEATURES

---

The SMAEL Model 8053 watch is equipped with several features for enhanced functionality and durability:

- **Dual Time Display:** Features both analog and digital time displays.
- **Water Resistance:** Rated for 5 ATM (50 meters), suitable for handwashing, rain, and cold baths. Not recommended for swimming or diving.
- **LED Backlight:** Provides illumination for the digital display in low-light conditions.
- **Stopwatch:** Accurate timing function for various activities.
- **Alarm Clock:** Daily alarm function.
- **Date and Week Display:** Shows the current date and day of the week.
- **Shock Resistant:** Designed to withstand impacts.
- **12/24 Hour Format:** User-selectable time display format.
- **Durable Construction:** Features a reinforced resin band and acrylic crystal glass window.



Image: Graphic highlighting key features of the SMAEL watch, including dual movement display, 50m waterproof, stopwatch, alarm, calendar, 12/24 hour, week display, and luminous indication.

## MAINTENANCE

---

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth to remove dirt and sweat. For stubborn dirt, a slightly damp cloth can be used, followed by drying.
- **Water Resistance:** While water resistant, avoid pressing buttons underwater or exposing the watch to hot water, steam, or harsh chemicals, as this can compromise the seals.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for prolonged periods, as this can affect battery life and accuracy.
- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, and cosmetics, which can damage the case, band, or seals.
- **Battery Replacement:** The watch uses 2 LR44 batteries. When the display dims or functions become erratic, it's time to replace the batteries. It is recommended to have battery replacement performed by a qualified watch technician to ensure water resistance is maintained.

# SMAEL

**Model:** 8053

**Style:** Men's digital watch

**Movement:** Quartz Movement

**Case Material:** Rubber

**Function:** LED Backlight, Stopwatch, Alarm clock, Waterproof, Calendar

**Clasp Type:** Buckle

**Weight:** 76g

**Dial Window Material:** Acrylic

**Band Material:** Rubber Strap

**Waterproof:** 5ATM



Image: Graphic illustrating the 50M water resistance of the SMAEL watch, indicating suitability for washing face, handwashing, cold bath, and rain, but not for swimming.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the LR44 batteries.
Analog hands are not moving.	Crown is pulled out; separate analog battery depleted.	Push the crown back in; replace the analog movement battery (if separate).
Time is inaccurate.	Incorrect setting; strong magnetic field exposure.	Re-set the time; keep away from strong magnets.
Water inside the watch.	Water resistance compromised (e.g., buttons pressed underwater, exposure to hot water).	Immediately take the watch to a professional for inspection and repair to prevent further damage.

## SPECIFICATIONS

Feature	Detail
Model Number	8053
Movement Type	Quartz (Analog) and Digital
Case Material	Rubber
Strap Material	Rubber

Feature	Detail
Mirror Material	Acrylic
Water Resistance	5 ATM (50 meters)
Case Diameter	59mm
Case Thickness	18mm
Band Width	22mm
Overall Length	260mm
Weight	76g
Batteries Required	2 x LR44



Image: Graphic detailing the product parameters of the SMAEL watch, including dimensions, materials, and movement type.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase for any warranty claims.