

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LEGO](#) /

› [LEGO Friends Emma's Art School House Set 41711 Instruction Manual](#)

LEGO 41711

LEGO Friends Emma's Art School House Set 41711 Instruction Manual

Your Guide to Creative Building and Play

INTRODUCTION

Welcome to the world of LEGO Friends Emma's Art School House Set 41711. This comprehensive instruction manual will guide you through the assembly, operation, and care of your new creative building toy. Designed for aspiring artists aged 8 and up, this set offers a vibrant three-story art school experience with various creative studios and interactive features.

PRODUCT OVERVIEW

The LEGO Friends Emma's Art School House Set 41711 is an 844-piece building toy that brings a bustling art school to life. The set features a detailed three-story building with dedicated spaces for ceramics, fashion design, 3D printing, and photography. It includes three LEGO Friends mini-dolls: Emma, Professor Beatrice, and Felix, along with numerous accessories to enhance imaginative play.



Figure 1: The complete LEGO Friends Emma's Art School House Set 41711.

Key features of the set include:

- A three-story art school building with distinct creative classrooms and studios.
- Interactive elements such as a spinning pottery wheel, a camera with two interchangeable lenses, and a posable mannequin.
- Customizable exterior with included LEGO DOTS tiles.
- Three mini-doll figures: Emma, Professor Beatrice, and Felix.
- Various art accessories including painting canvases, art brushes, spray paint cans, and cotton spools.



Figure 2: Interior view showcasing various art activities within the school.

This set encourages imaginative role-play and provides a rewarding building challenge.

Video 1: A brief overview of the LEGO Friends Emma's Art School 41711 Building Toy Set, highlighting its main features and design.

SETUP

Before you begin assembly, ensure you have a clean, flat surface to work on. This set contains 844 pieces, so organizing them by color or type can be helpful.

Assembly Steps:

- Unpack Components:** Carefully open the box and remove all plastic bags containing LEGO bricks.
- Locate Instruction Booklets:** The set includes detailed, step-by-step pictorial instructions. Follow these carefully for optimal assembly.
- Digital Instructions:** For an interactive building experience, download the free LEGO Building Instructions app. This app allows you to view your model in 3D, rotate it, and zoom in during the build process.

4. **Follow Sequential Steps:** Each bag of bricks corresponds to a specific section of the build. Open bags only as instructed to avoid mixing pieces.
5. **Connect Pieces Firmly:** Ensure all bricks are pressed firmly together to create a stable structure.



Figure 3: Children engaged in the assembly process of the Art School set.

OPERATING INSTRUCTIONS

Once assembled, the Emma's Art School House offers a variety of interactive play opportunities:

- **Pottery Wheel:** Turn the handle to make the pottery wheel spin, allowing mini-dolls to 'create' ceramic pieces.
- **Fashion Studio:** Use the posable mannequin to display different fashion designs.
- **3D Printer:** Engage in pretend 3D printing activities within the dedicated studio.
- **Photography Studio:** Utilize the camera with its two lenses and the backdrop for photo shoots.
- **Customization:** Personalize the exterior of the art school using the included LEGO DOTS tiles to create unique patterns and designs.



Figure 4: The spinning pottery wheel in action.



Figure 5: Customize your art school with LEGO DOTS tiles.

MAINTENANCE

To ensure the longevity and cleanliness of your LEGO Friends set, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to gently wipe dust from the bricks. For deeper cleaning, wash LEGO bricks by hand using lukewarm water (up to 40°C / 104°F) and a mild detergent. Rinse thoroughly and air dry. Do not use hot water, dishwashers, or washing machines, as this can damage the bricks.
- **Storage:** Store your LEGO set in a cool, dry place away from direct sunlight to prevent discoloration and warping. Keep small pieces in a container to avoid loss.
- **Handling:** Handle the assembled model with care to prevent pieces from detaching.

TROUBLESHOOTING

If you encounter any issues during assembly or play, consider the following:

- **Missing Pieces:** If you find a piece is missing, first double-check all packaging and the surrounding area. If still missing, contact LEGO Customer Service directly through their official website for replacement parts.
- **Difficulty Assembling:** Refer back to the instruction manual or the LEGO Building Instructions app. Ensure you are using the correct pieces for each step and that they are oriented correctly.
- **Loose Connections:** Press pieces firmly together until you feel a secure connection.

SPECIFICATIONS

Feature	Detail
Product Name	LEGO Friends Emma's Art School House Set
Model Number	41711
Number of Pieces	844
Recommended Age	8 years and up
Product Dimensions	18.9 x 11.1 x 2.4 inches
Item Weight	2.47 pounds
Manufacturer	LEGO
Release Date	August 1, 2022

WARRANTY AND SUPPORT

LEGO products are designed for durability and quality. For specific warranty information regarding your LEGO set, please refer to the official LEGO website or contact LEGO Customer Service. They can assist with product inquiries, missing parts, or any other support needs.

LEGO Customer Service: Visit www.lego.com/service for assistance.