

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KECAG](#) /

› [KECAG 10.1 Inch Digital Picture Frame User Manual \(Model KECAG-CA-001\)](#)

## KECAG KECAG-CA-001

# KECAG 10.1 Inch Digital Picture Frame User Manual

Model: KECAG-CA-001

## 1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your KECAG 10.1 Inch Digital Picture Frame. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience. Keep this manual for future reference.

## 2. PRODUCT OVERVIEW

### 2.1 Key Features

- 10.1 Inch 1080P HD IPS Screen:** Features a 1920x1080 resolution with a 180° wide-angle IPS display for clear viewing from various angles.
- Multimedia Playback:** Supports photo slideshows, video playback, and music playback.
- Motion Sensor:** Automatically turns the frame on/off based on detected movement to conserve energy.
- Timing On/Off Function:** Allows scheduled power on and off times.
- Versatile Media Support:** Compatible with SD cards and USB flash drives.
- User-Friendly Interface:** Simple main menu for easy navigation.
- Remote Control:** Provides convenient operation from a distance.
- Additional Functions:** Includes calendar and alarm features.

### 2.2 Package Contents

- KECAG 10.1 Inch Digital Picture Frame
- 32GB USB Flash Drive
- Remote Control
- Power Adapter
- User Manual



Figure 2.2.1: The KECAG 10.1 Inch Digital Picture Frame displaying a family photo, accompanied by its remote control.

### 3. SETUP

#### 3.1 Power Connection

1. Locate the power adapter included in the package.
2. Connect the small end of the power adapter cable to the DC IN port on the back of the digital picture frame.
3. Plug the other end of the power adapter into a standard electrical outlet.
4. The frame will automatically power on or enter standby mode.

#### 3.2 Inserting Media (USB Drive or SD Card)

The digital picture frame supports both USB flash drives and SD cards for media playback.

1. Identify the USB port and SD card slot on the side or back of the frame.
2. For a USB drive: Carefully insert the USB flash drive into the USB port.
3. For an SD card: Insert the SD card into the SD card slot with the metal contacts facing down, until it clicks into place.
4. Ensure the media is inserted correctly to avoid damage.



Figure 3.2.1: Illustrated steps for connecting media (USB/SD card) and power to the digital picture frame.

### 3.3 Initial Power On and Language Settings

1. Once powered on, the frame may display a language selection screen.
2. Use the remote control's navigation buttons (Up/Down/Left/Right) to select your preferred language.
3. Press the **ENTER** button to confirm your selection.

## 4. OPERATING INSTRUCTIONS

### 4.1 Remote Control Functions

The remote control allows for convenient navigation and setting adjustments. Ensure the remote is aligned with the infrared sensor on the frame during use.

- **MENU:** Access the main menu or return to the previous menu.
- **PHOTO:** Directly enter photo playback mode.
- **MUSIC:** Directly enter music playback mode.
- **MOVIE:** Directly enter video playback mode.
- **EXIT:** Exit current function or menu.
- **ENTER:** Confirm selection or play/pause media.
- **SETUP:** Access system settings.
- **Navigation Buttons (Up/Down/Left/Right):** Navigate through menus and options.
- **VOL+/VOL-:** Adjust volume during video or music playback.

### 4.2 Main Menu Navigation

From the main menu, you can select different functions:

- **Picture:** View photos in a slideshow.
- **Music:** Play audio files.
- **Movie:** Play video files.
- **Calendar:** Display calendar and set alarms.
- **Settings:** Configure device preferences.

# Slideshow with BGM & Image Rotation



Figure 4.2.1: The digital picture frame's interface showing options for Calendar, Photo/Video, and Music playback.

## 4.3 Photo Playback

1. From the main menu, select **Picture** or press the **PHOTO** button on the remote.
2. The frame will automatically start a slideshow of photos found on the inserted media.
3. **Playback Order:** In settings, you can choose between Shuffle, Sequential, or Repeat All.
4. **Transition Effects:** Select from various effects like Up/Down, Mosaic, Left/Right, or Random.
5. **Image Preview:** Access a thumbnail view of your photos.
6. **Image Rotation:** Adjust the orientation of images (vertical/horizontal).
7. **Screen Brightness:** Adjust the display brightness in the settings menu.

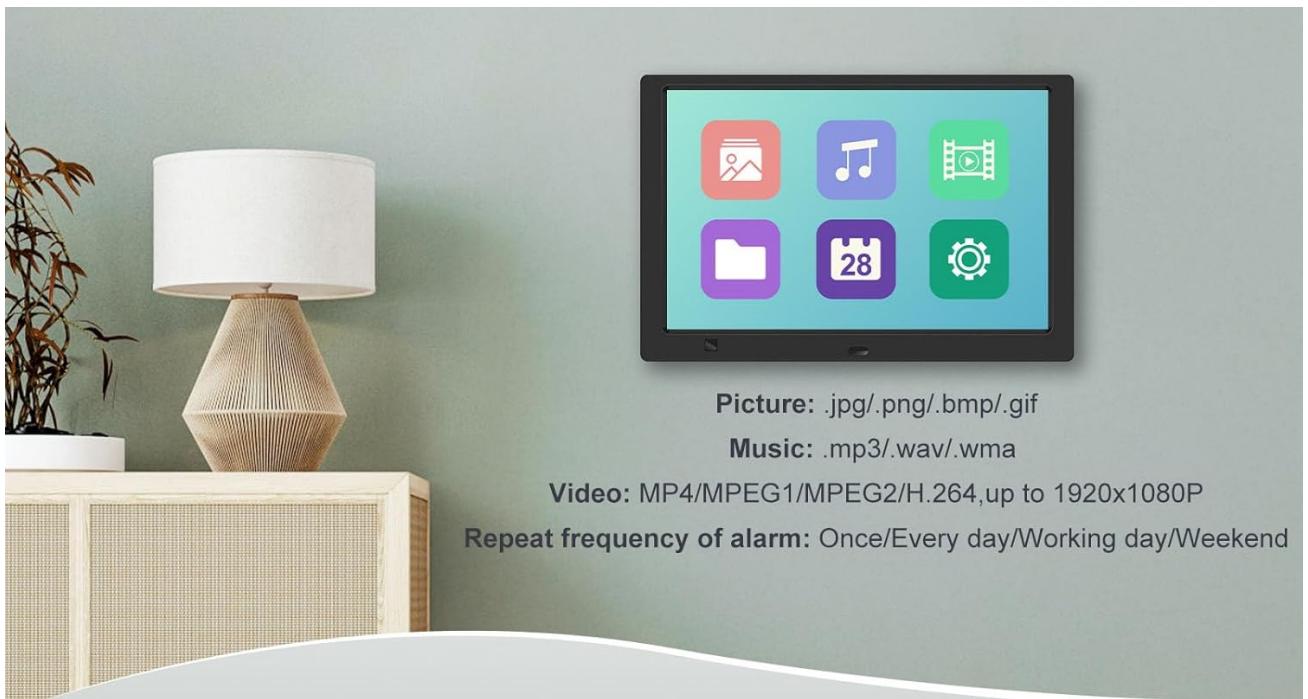


Figure 4.3.1: The digital picture frame displaying a photo slideshow with background music and various image transition options.



Figure 4.3.2: Visual representation of slideshow and image preview options, including settings for playback order, display scale, picture rotation, time window, and screen brightness adjustment.

## 4.4 Video and Music Playback

1. From the main menu, select **Movie** or **Music**, or use the corresponding buttons on the remote.
2. Navigate to the desired file using the remote control and press **ENTER** to play.
3. Supported video formats: MP4/MPEG1/MPEG2/H.264 up to 1920x1080.
4. Supported music formats: MP3/WAV/WMA.

## 4.5 Motion Sensor Function

The motion sensor helps save energy by automatically turning the frame on or off.

1. To enable/disable the motion sensor, go to the **Settings** menu.
2. Select the motion sensor option and toggle it On or Off.
3. When enabled, the frame will power on when movement is detected and turn off after a period of inactivity.

## 4.6 Timing On/Off Function

Set specific times for the frame to automatically power on and off.

1. Access the **Settings** menu.
2. Locate the Timing On/Off function.
3. Set your desired power-on time and power-off time. You can also configure this for specific days (e.g., weekdays, weekends, every day).

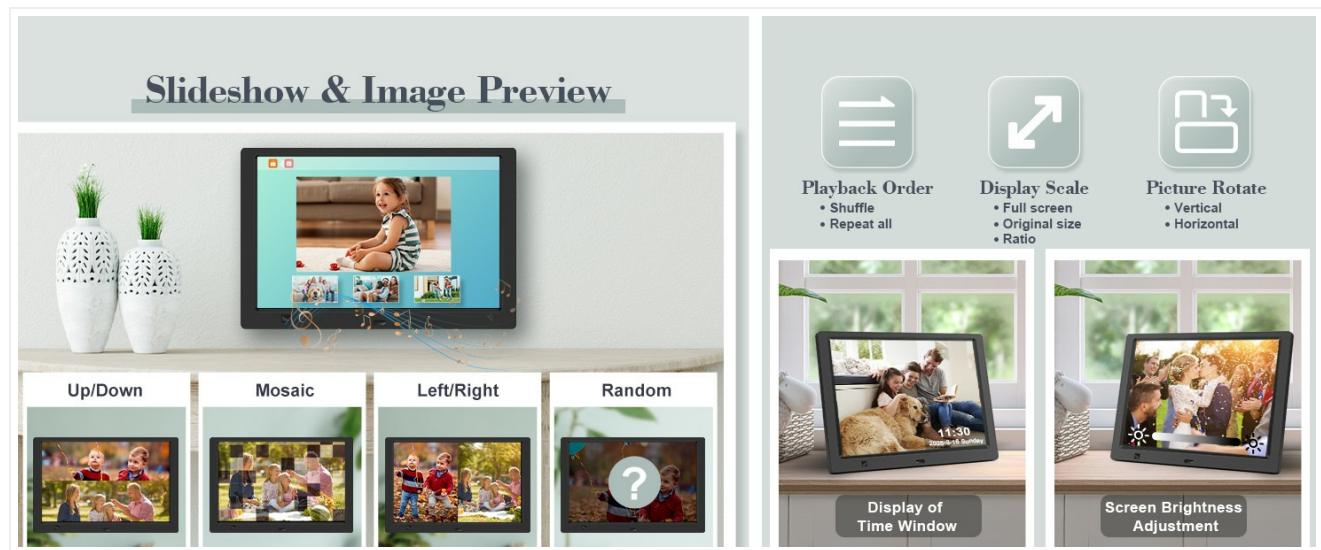


Figure 4.6.1: Demonstrates the smart motion sensor turning on the frame when movement is detected and the timing on/off function for scheduled operation.

## 5. MAINTENANCE

### 5.1 Cleaning the Screen

To clean the screen, gently wipe it with a soft, dry, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid using harsh chemicals or abrasive materials.

### 5.2 General Care

- Keep the frame away from direct sunlight, heat sources, and excessive moisture.
- Avoid dropping the device or subjecting it to strong impacts.
- Do not attempt to disassemble the frame; this will void the warranty.
- Ensure proper ventilation around the device.

## 6. TROUBLESHOOTING

If you encounter issues with your digital picture frame, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely connected to the frame and a working electrical outlet. Try a different outlet.
No photos/videos/music displayed.	No media inserted, media not recognized, or unsupported file format.	Ensure a USB drive or SD card is properly inserted. Check if files are in supported formats (JPG/PNG/BMP/GIF for photos; MP4/MPEG1/MPEG2/H.264 for video; MP3/WAV/WMA for music). Try reformatting the media (backup data first).
Remote control not working.	Battery depleted, remote not aimed correctly, or sensor obstructed.	Replace the remote control battery. Ensure the remote is pointed directly at the frame's infrared sensor. Remove any obstructions between the remote and the frame.
Screen is blank or frozen.	Temporary software glitch.	Unplug the power adapter, wait 10 seconds, then plug it back in to restart the frame.

## 7. SPECIFICATIONS

Feature	Specification
Screen Size	10.1 Inches
Resolution	1920 x 1080 (1080p HD IPS)
Aspect Ratio	16:9
Viewing Angle	180°
Compatible Devices	SD Card, USB Drive
Supported Photo Formats	JPG, PNG, BMP, GIF
Supported Video Formats	MP4, MPEG1, MPEG2, H.264 (up to 1920x1080)
Supported Music Formats	MP3, WAV, WMA
Motion Sensor	Yes
Item Model Number	KECAG-CA-001
Product Dimensions	6.4 x 9.7 x 0.99 inches
Item Weight	1.59 pounds
Batteries (Remote)	1 Lithium Metal battery (included)


Feature	Specification
Manufacturer	KECAG

## 8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product packaging. KECAG provides 24-hour customer service to assist with any issues or questions you may have regarding your digital picture frame. Please contact customer support for assistance.

### Related Documents - KECAG-CA-001

 <p>FCC RADIO TEST REPORT FCC ID: 2ABME-KECAG-CD</p> <p>Product: CD PLAYER FCC ID: 2ABME Model Name: KC-808 Serial Number: KC-808-001, KC-808-002, KC-808-003 Report ID: 2ABME-KC-808 Prepared for: Shenzhen POCE Technology Co., Ltd. Address: 10th Floor, Building 1, Shenzhen Technology Park, Shenzhen, China</p> <p>Prepared by: Shenzhen POCE Technology Co., Ltd. Address: 10th Floor, Building 1, Shenzhen Technology Park, Shenzhen, China</p>	<p><a href="#">FCC Radio Test Report for KECAG CD Player Models KC-808, KC-606, KC-607, KC-608, KC-688, KC-809</a></p> <p>This document presents the official FCC Radio Test Report for KECAG CD Player models, including KC-808, KC-606, KC-607, KC-608, KC-688, and KC-809. Prepared by Shenzhen POCE Technology Co., Ltd., this report details the compliance of the equipment under test (EUT) with FCC Part 15.247 requirements, covering various emission and performance tests.</p>
 <p>EN CD Player USER MANUAL-EN</p> <p><b>Notice!</b> Please remove the protect paper from the CD Please remove the protect paper from the CD Please remove the protect paper from the CD Please remove the protect paper from the CD KC-806 CE FC RoHS</p>	<p><a href="#">KC-806 CD Player User Manual</a></p> <p>User manual for the KC-806 CD Player, detailing its features, specifications, operation, and troubleshooting.</p>
 <p>SONICblue Rio Riot USER'S GUIDE</p>	<p><a href="#">SONICblue Rio Riot Digital Audio Player User Guide</a></p> <p>Comprehensive user guide for the SONICblue Rio Riot digital audio player, covering setup, music management, playback, organization, radio features, advanced settings, troubleshooting, and warranty information.</p>
 <p>Cafe CAFE PRIMO CAPPUCCINO SYSTEMS TROUBLESHOOTING GUIDE</p>	<p><a href="#">Curtis Cafe Primo Cappuccino Systems Troubleshooting Guide</a></p> <p>A comprehensive troubleshooting guide for Wilbur Curtis Cafe Primo Cappuccino Systems, detailing solutions for power, heating, tank filling, and dispensing issues, along with a parts identification list.</p>
 <p>we are rewind WE-001 QUICK START GUIDE WE-001 SONICBLUE WE ARE REWIND WE ARE REWIND WE ARE REWIND</p>	<p><a href="#">WE-001 Quick Start Guide - We Are Rewind Portable Cassette Player</a></p> <p>Get started with your We Are Rewind WE-001 portable cassette player. This guide covers essential safety instructions, battery charging, cassette playback and recording, and connecting wireless headphones.</p>

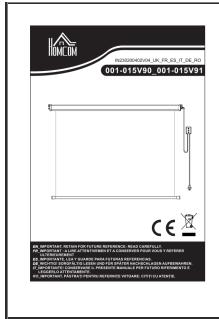

## [HOMCOM Electric Projection Screen User Manual](#)

Comprehensive user manual for the HOMCOM electric projection screen, covering technical specifications, product parameters, safety instructions, installation guides, operation procedures, and troubleshooting tips. Includes multilingual support and contact information.