

[Manuals.plus](#) /

› [Lilienthal Berlin](#) /

› Lilienthal Berlin Chronograph Limited Edition Meteorite III Watch User Manual

Lilienthal Berlin CHRONOGRAPH LIMITED EDITION METEORITE 3

Lilienthal Berlin Chronograph Limited Edition Meteorite III Watch User Manual

INTRODUCTION

Congratulations on your purchase of the Lilienthal Berlin Chronograph Limited Edition Meteorite III watch. This timepiece combines sophisticated design with precision engineering, featuring a unique meteorite inlay and a robust construction. This manual provides essential information for the proper setup, operation, maintenance, and care of your watch to ensure its longevity and optimal performance.



Image: The Lilienthal Berlin Chronograph Limited Edition Meteorite III watch, showcasing its dark blue dial, sub-dials, and metal bracelet.

Your watch is a limited edition, one of only 3333 pieces, and comes with a certificate of authenticity and an engraved edition number, highlighting its exclusivity.

SETUP

Setting the Time and Date

1. **Pull out the crown:** Gently pull the crown (the knob on the side of the watch) to position 2 for setting the date, or position 3 for setting the time.
2. **Set the date:** In position 2, turn the crown clockwise or counter-clockwise until the correct date appears in the date window.
3. **Set the time:** In position 3, turn the crown to move the hour and minute hands to the desired time. Ensure you differentiate between AM and PM if your watch has a 24-hour indicator or if setting the date.

4. **Push in the crown:** Once the time and date are set, push the crown back into position 1 (normal operating position) to start the watch.



Image: A detailed view of the watch dial, illustrating the main hands, sub-dials, and the date display at 6 o'clock.

Adjusting the Metal Bracelet

The watch features a flexible metal bracelet with a quick-release mechanism for easy adjustment or replacement. If the bracelet needs resizing, it is recommended to visit a professional jeweler or watchmaker. The quick-release pins allow for simple removal and attachment of the bracelet without special tools.

OPERATING THE CHRONOGRAPH

Your Lilienthal Berlin watch is equipped with a chronograph function, allowing you to measure elapsed time.

1. **Start:** Press the upper pusher (button) to start the chronograph. The central second hand will begin to move, along with the minute and hour sub-dials.
2. **Stop:** Press the upper pusher again to stop the chronograph. The elapsed time will be indicated by the central second hand and the sub-dials.
3. **Reset:** After stopping the chronograph, press the lower pusher to reset all chronograph hands to their zero positions. The central second hand, minute sub-dial, and hour sub-dial will return to zero.



Image: The watch dial with its Superluminova hands and markers glowing, demonstrating visibility in low light conditions.

Sub-dial Functions

- The sub-dial at 9 o'clock typically measures chronograph minutes.
- The sub-dial at 3 o'clock typically measures chronograph seconds.
- The date window is located at 6 o'clock.

MAINTENANCE

Cleaning

To maintain the appearance of your watch, regularly wipe the case and bracelet with a soft, dry cloth. For more thorough cleaning, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials, which can damage the watch's finish.

Water Resistance

Your watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or prolonged water immersion. Always ensure the crown is fully pushed in before any contact with water. Avoid operating the pushers or crown while the watch is wet.

Battery Replacement

The watch is powered by a battery. When the battery runs low, the second hand may start to jump in 2 or 4-second intervals as an End-of-Life (EOL) indicator. It is recommended to have the battery replaced by a qualified watchmaker to ensure the water resistance is maintained and to prevent damage to the movement.

Storage

When not wearing your watch, store it in a cool, dry place, away from direct sunlight and extreme temperatures. The original packaging or a watch box is ideal for protection.

TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Chronograph hands not resetting to zero:** If the chronograph hands do not align perfectly to zero after resetting, they may need calibration. This can often be done by pulling the crown to position 3 (time setting) and using the pushers to adjust the chronograph hands back to zero. Refer to the movement's specific instructions or consult a watchmaker if issues persist.
- **Date not changing:** Ensure the time is set correctly, especially distinguishing between AM and PM. The date typically changes around midnight.
- **Condensation under the crystal:** This indicates a potential breach in water resistance. Have the watch inspected by a professional immediately to prevent damage to the movement.

SPECIFICATIONS

Model Name	Chronograph Limited Edition Meteorite 3
Movement Type	Ronda Quartz Chronograph
Case Material	316L Stainless Steel
Case Diameter	42.5 Millimeters
Case Thickness	10.30 Millimeters
Dial Window Material	Sapphire Coated Mineral Glass
Band Material	Stainless Steel

Band Width	20 Millimeters
Water Resistance	50 Meters (5 ATM)
Power Source	Battery Powered (1 battery included)
Special Features	Chronograph, Meteorite Inlay, Superluminova



Image: The engraved case back of the watch, detailing its origin, movement, water resistance, and limited edition number.

WARRANTY AND SUPPORT

Manufacturer's Warranty

Your Lilienthal Berlin Chronograph Limited Edition Meteorite III watch is covered by a manufacturer's warranty. Please

refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. The warranty typically covers manufacturing defects under normal use.

Customer Support

For any questions, service requests, or technical support regarding your watch, please contact Lilienthal Berlin customer service. Contact information can usually be found on the official Lilienthal Berlin website or in the documentation provided with your watch. When contacting support, please have your model number (CHRONOGRAPH LIMITED EDITION METEORITE 3) and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question