

[Manuals.plus](#) /

› [YUSWKO](#) /

› YUSWKO Rechargeable Milk Frother Instruction Manual

YUSWKO milkfrother2023new

YUSWKO Rechargeable Milk Frother Instruction Manual

Model: milkfrother2023new

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your YUSWKO Rechargeable Milk Frother. This versatile handheld electric whisk is designed to create creamy foam for various beverages and mix powdered ingredients. Its portable and easy-to-use design makes it a convenient tool for your kitchen.

WHAT'S IN THE BOX

Your YUSWKO Milk Frother package includes the following components:

- Frother Body (Main Unit)
- USB Charging Cable
- Hook Whisk (for mixing powders)
- Spring Whisk (for milk frothing)
- Balloon Whisk (for beating eggs, cream)
- User Manual



Image showing the YUSWKO milk frother main unit, three interchangeable whisk heads (spring, hook, and balloon), and the USB charging cable.

SETUP

Charging the Frother

The frother features a USB charging design. Before first use, ensure the device is fully charged.

1. Locate the USB charging port on the frother body.
2. Connect the provided USB charging cable to the frother and a compatible USB power source (e.g., wall adapter, computer, power bank).
3. The indicator light will show the battery level (low, medium, full). Charge until the indicator shows full.



Image illustrating the USB-C charging port on the frother handle, with a charging cable connected and indicator lights showing charging status.

Attaching Whisk Heads

The frother comes with three detachable whisk heads for different uses.

1. Select the desired whisk head (Spring, Hook, or Balloon).
2. Align the whisk head with the connector on the frother body.
3. Gently push and twist until it clicks securely into place.
4. To remove, pull and twist in the opposite direction.

3 REPLACEABLE VERSATILE WHISKS



Special note: The size of this whisk allows an error range of $\pm 2''$, and dimensional deviations within this range are normal.



Image displaying the three interchangeable whisk heads: spring whisk, hook whisk, and balloon whisk, along with their approximate lengths.

OPERATING INSTRUCTIONS

General Operation

The frother has three speed settings (Low, Mid, High) for optimal results.

1. Ensure the desired whisk head is securely attached.
2. Immerse the whisk head into the liquid or mixture.
3. Press the corresponding speed button (Low, Mid, High) on the frother body to start.
4. For frothing milk, move the frother gently up and down and in circles to create foam.
5. Press the button again to stop.

UPDATED 3-GEAR

whisking speeds



Image showing the frother with its three speed buttons (Low, Mid, High) and examples of frothed beverages.

Tips for Best Results

- For milk frothing, use a cylindrical container with a diameter of approximately 90-100mm and a height of at least 110mm.
- Do not fill the container more than 1/3 full of milk to prevent overflow.
- Keep the whisking head at least 10mm from the container wall and 5mm from the bottom for efficient frothing.
- When inserting or removing the whisking rod from liquid, ensure the frother is turned off to prevent splashing.



Diagram illustrating recommended container dimensions and liquid levels for optimal frothing, along with whisk placement guidelines.

MAINTENANCE

Cleaning

Proper cleaning ensures longevity and hygiene.

- Always detach the whisk head from the frother body before cleaning.
- Hand wash the whisk heads with warm, soapy water. Rinse thoroughly.
- Wipe the frother body with a damp cloth.
- **Do not immerse the frother body in water.**



CLEAN AND STORE EASILY



NOTE

Do not immerse the milk frother body in water

Image demonstrating how to clean the whisk head under running water, with a warning not to immerse the main frother body.

TROUBLESHOOTING

If you encounter any issues with your YUSWKO Milk Frother, please refer to the following common solutions:

- **Frother not turning on:** Ensure the frother is fully charged. Check the battery indicator lights.
- **Weak frothing/mixing:** Ensure the whisk head is securely attached. Try a higher speed setting. Ensure the liquid level is appropriate (not too full).
- **Excessive splashing:** Use a taller, narrower container. Ensure the whisk head is fully immersed before starting. Try a lower speed setting.

For further assistance, please contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	YUSWKO
Model Name	Milk Frother
Power Source	Battery Powered (Rechargeable)
Battery Capacity	1500mAh
Material	Acrylonitrile Butadiene Styrene (ABS), Stainless Steel
Product Dimensions	1.2"W x 6.7"H
Item Weight	8.1 Ounces
Number of Settings	3 (Low, Mid, High)
Included Components	Frother Body, Charging Cable, Hook Whisk, Spring Whisk, Balloon Whisk, User Manual



Image showing the YUSWKO milk frother with its various components, including the main unit, whisk attachments, and charging cable.

WARRANTY AND SUPPORT

YUSWKO offers comprehensive support for your product:

- **1-Year Replacement Warranty:** Enjoy a 1-year replacement policy for any manufacturing defects.
- **30-Day Return Policy:** A 30-day return policy is available if you are unsatisfied with the product.
- **Customer Service:** For any inquiries or issues, please contact our customer service team. We are committed to providing satisfactory solutions.



Image detailing the service guarantee, including 24-hour after-sales service, 12-month free replacement, 30-day return policy, and lifetime support.

OFFICIAL PRODUCT VIDEOS

Watch this official video for demonstrations and tips on using your YUSWKO Milk Frother.

Your browser does not support the video tag.

Video demonstrating the YUSWKO milk frother's use for mixing eggs, highlighting its effectiveness for various kitchen tasks.

For more information, visit the [YUSWKO Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question