

Reland Sun 708310950779

RELAND SUN Smart Portable Two-Way Anti-Lost Device User Manual

Model: 708310950779

INTRODUCTION

The Reland Sun Smart Portable Two-Way Anti-Lost Device is designed to help you keep track of your valuable items. This compact and lightweight tracker connects to your smartphone via Bluetooth, allowing you to locate misplaced items or receive alerts if they move out of range. It features a two-way anti-lost function, meaning you can use your phone to find the device, and use the device to find your phone.

PRODUCT OVERVIEW

The device is a small, key-fob-like tracker. It typically includes a button for interaction and an LED indicator. Its primary function is to establish a Bluetooth connection with a paired smartphone.

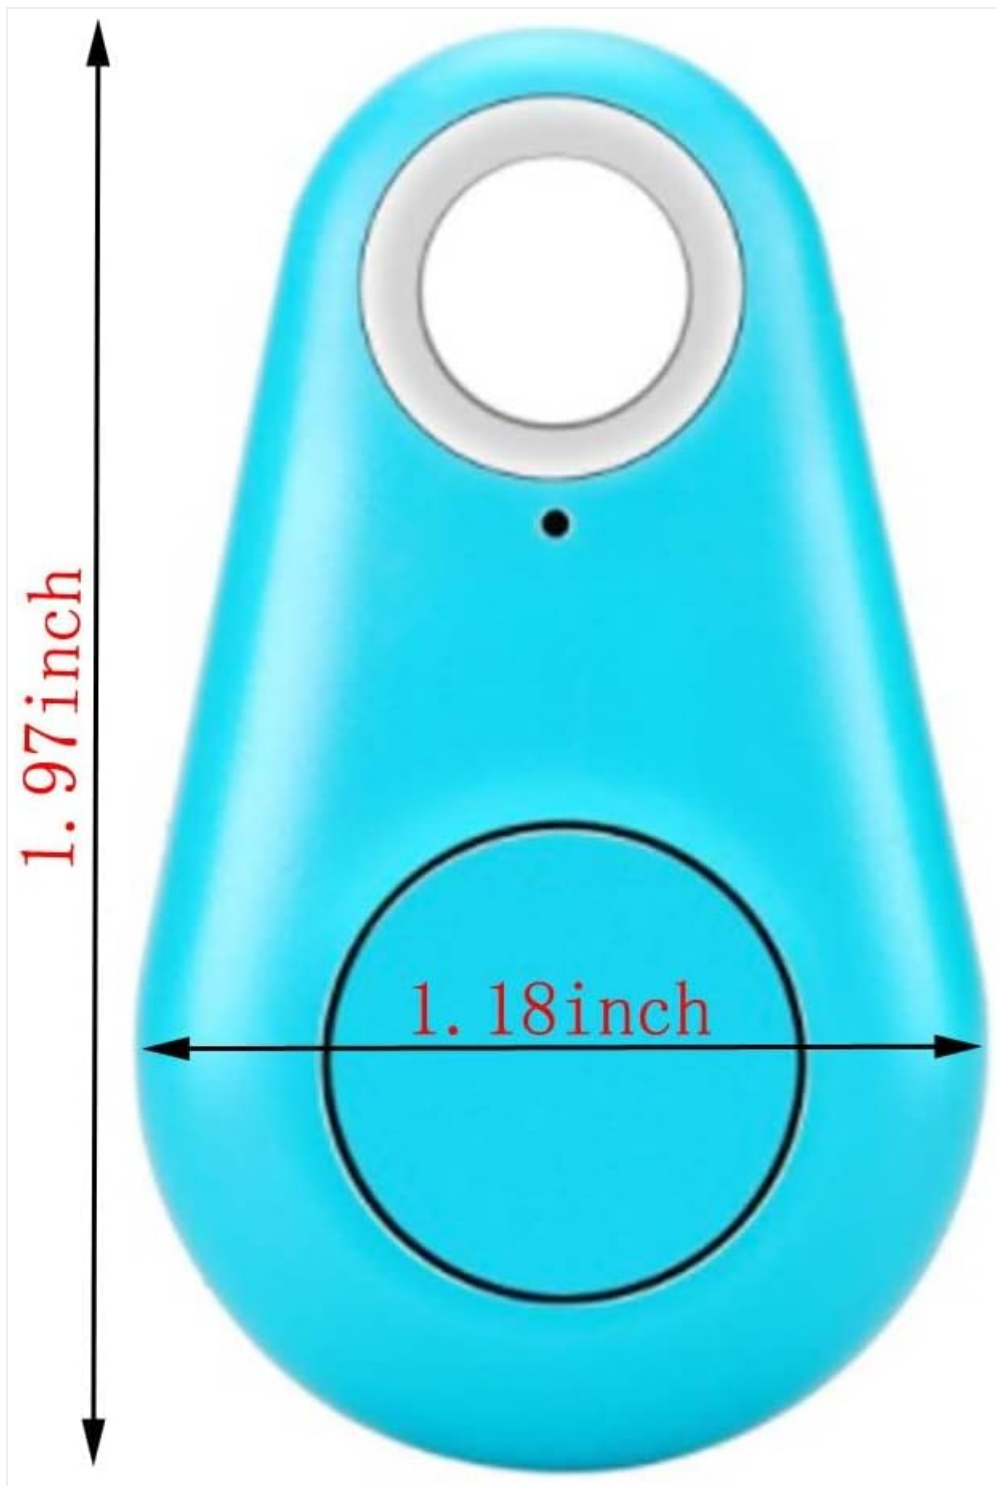


Figure 1: Front view of the Reland Sun Smart Portable Anti-Lost Device. The device is sky blue with a central button and a small indicator light.

Package Contents

- 1 x Reland Sun Smart Portable Two-Way Anti-Lost Device (Sky Blue)
- 1 x User Manual (this document)
- 1 x CR2032 Battery (pre-installed or included separately)

SETUP

1. Battery Installation/Activation

The device typically comes with a CR2032 battery either pre-installed or included. If pre-installed, there might be a plastic

pull-tab to remove to activate the battery. If not, open the device casing (usually by gently prying it open with a small tool or fingernail at a designated notch) and insert the CR2032 battery with the positive (+) side facing up. Once the battery is correctly installed, the device may emit a short beep or an LED light may flash, indicating it is powered on.

2. App Download and Installation

To use the anti-lost device, you need to download the companion application on your smartphone. Search for "iSearching" or "FindElfi" (or similar, check product packaging for exact app name) in your device's app store (Google Play Store for Android or Apple App Store for iOS). Download and install the application.

3. Device Pairing

1. Ensure your smartphone's Bluetooth is turned on.
2. Open the installed anti-lost app.
3. Follow the in-app instructions to add a new device. This usually involves pressing and holding the button on the anti-lost device until it beeps or flashes rapidly, indicating it's in pairing mode.
4. Select the device from the list of available Bluetooth devices in the app.
5. Once paired, the app will confirm the connection, and the device may beep or flash differently.

You can now attach the anti-lost device to items you wish to track, such as keys, wallets, or bags.

OPERATING INSTRUCTIONS

1. Finding Your Item (Using Phone to Find Device)

If you've misplaced an item with the anti-lost device attached:

- Open the anti-lost app on your smartphone.
- Select the paired device from the list.
- Tap the "Ring" or "Find" button within the app. The anti-lost device will emit an audible alarm, helping you locate it.

2. Finding Your Phone (Using Device to Find Phone)

If you've misplaced your smartphone:

- Double-press the button on the anti-lost device.
- Your smartphone will ring (even if on silent mode, depending on app settings), helping you locate it.

3. Anti-Lost Alarm (Out of Range Alert)

When the anti-lost device and your smartphone move beyond the effective Bluetooth range (typically 10-20 meters indoors, up to 50 meters outdoors, depending on environment), both the device and your phone will emit an alarm to notify you of the separation. This feature helps prevent items from being left behind or lost.

You can usually customize this alert behavior within the app settings.

4. Location Tracking

The app records the last known location of the anti-lost device before it disconnected from your phone. This allows you to see on a map where your item was last detected, aiding in recovery.

5. Remote Shutter Function

Some anti-lost devices can also function as a remote shutter for your smartphone camera. To use this feature:

- Open your smartphone's camera app.
- Press the button on the anti-lost device once to trigger the camera shutter.

MAINTENANCE

1. Battery Replacement

The anti-lost device uses a CR2032 button cell battery. When the battery is low, the device's performance may degrade, or the app may notify you. To replace the battery:

1. Gently open the device casing using a small tool or fingernail at the designated notch.
2. Remove the old CR2032 battery.
3. Insert a new CR2032 battery with the positive (+) side facing up.
4. Close the device casing securely.

Dispose of old batteries responsibly according to local regulations.

2. Cleaning

Wipe the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Avoid exposing the device to water or excessive moisture.

TROUBLESHOOTING

- **Device not connecting/pairing:**

- Ensure Bluetooth is enabled on your phone.
- Check if the device battery is charged or correctly installed.
- Restart the app and try pairing again.
- Try restarting your phone.
- Ensure the device is within Bluetooth range of your phone.

- **Alarm not sounding:**

- Check the volume settings on your phone and within the app.
- Ensure the device is still paired and connected.
- Verify that the anti-lost alarm feature is enabled in the app settings.

- **Inaccurate location:**

- The device uses Bluetooth for proximity and your phone's GPS for location. Ensure your phone's location services are enabled.
- Location accuracy can be affected by environmental factors (e.g., indoors, dense urban areas).

- **Short battery life:**

- Ensure you are using a fresh, high-quality CR2032 battery.
- Frequent alarms or constant connection attempts can drain the battery faster.

SPECIFICATIONS



Figure 2: Dimensions of the Reland Sun Smart Portable Anti-Lost Device. The device measures approximately 1.97 inches in length and 1.18 inches in width.

Feature	Detail
Model Number	708310950779
Connectivity	Bluetooth (version not specified, typically 4.0 or higher)
Battery Type	CR2032 Button Cell
Operating Range	Approximately 10-20 meters indoors, up to 50 meters outdoors (line of sight)
Compatibility	iOS and Android devices (requires companion app)
Dimensions	Approx. 1.97 inches (length) x 1.18 inches (width)
Color	Sky Blue

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the product packaging or contact the retailer where the

device was purchased. Keep your proof of purchase for any warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question