

[Manuals.plus](#) /

› [XDOBO](#) /

› XDOBO Gentleman 1992 Bluetooth Speaker User Manual

XDOBO Gentleman 1992

XDOBO Gentleman 1992 Bluetooth Speaker User Manual

Model: Gentleman 1992 | Brand: XDOBO

1. INTRODUCTION

Thank you for choosing the XDOBO Gentleman 1992 Bluetooth Speaker. This portable wireless speaker is designed to deliver high-quality audio with powerful 40W output, Bluetooth 5.0 connectivity, and True Wireless Stereo (TWS) functionality for an immersive sound experience. Its robust design makes it suitable for various environments, including outdoor use.



Image 1.1: The XDOBO Gentleman 1992 Bluetooth Speaker, showcasing its sleek, rectangular design with a dark grey finish and prominent speaker grilles.

2. PRODUCT FEATURES

- **Powerful Audio Output:** Equipped with 40 Watts of maximum speaker output for rich, clear sound.
- **Advanced Bluetooth 5.0:** Ensures stable and efficient wireless connection with your devices.
- **True Wireless Stereo (TWS):** Connect two Gentleman 1992 speakers for a synchronized, immersive stereo sound experience.
- **Portable Design:** Compact dimensions and battery power make it ideal for on-the-go use.
- **Durable Construction:** Designed to withstand various environments, including water exposure.
- **Multiple Connectivity Options:** Supports Bluetooth and USB connections.



Image 2.1: Internal view of the speaker, highlighting the woofer components responsible for powerful sound output.



Image 2.2: The speaker partially submerged in water, demonstrating its water-resistant capabilities.

3. SETUP GUIDE

3.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB charging cable to the speaker's charging port and a compatible USB power adapter (not included). The charging indicator light will show the charging status and turn off when fully charged.

3.2 Bluetooth Pairing

1. Power on the speaker by pressing and holding the Power button until you hear an audible prompt. The Bluetooth indicator light will flash, indicating it's in pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "XDOBO Gentleman 1992" from the list of found devices.
4. Once connected, the Bluetooth indicator light will become solid, and you will hear a confirmation sound.



Image 3.1: A smartphone displaying its Bluetooth settings, ready to pair with the XDOBO Gentleman 1992 speaker.

3.3 True Wireless Stereo (TWS) Pairing

To achieve TWS stereo sound, you need two XDOBO Gentleman 1992 speakers.

1. Ensure both speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the TWS button (refer to button layout in section 4.1) until you hear a prompt. The speaker will enter TWS pairing mode.
3. The primary speaker will automatically search for and connect to the second speaker. Once connected, you will hear a confirmation sound, and the TWS indicator lights on both speakers will become solid.
4. Now, connect your device to the primary speaker via Bluetooth as described in section 3.2. Both speakers will play audio in stereo.

4. OPERATING INSTRUCTIONS

4.1 Button Functions

The XDOBO Gentleman 1992 speaker features intuitive button controls on its top panel. Refer to the diagram below

for button identification (Note: Specific button icons may vary slightly).



Image 4.1: Top view of the speaker, showing the control buttons and indicators.

Button/Indicator	Function
Power Button	Press and hold to Power ON/OFF. Short press to check battery status (if applicable).
Play/Pause Button	Short press to Play/Pause music. Short press to Answer/End calls. Long press to Reject calls.
Volume Up (+)	Short press to increase volume. Long press for next track.
Volume Down (-)	Short press to decrease volume. Long press for previous track.
TWS Button	Press and hold to initiate TWS pairing (see section 3.3).
Bluetooth Indicator	Flashes when in pairing mode, solid when connected.

Button/Indicator	Function
Charging Indicator	Indicates charging status.

4.2 Usage Scenarios

The XDOBO Gentleman 1992 is versatile and can be used in various settings:



Image 4.2: Collage showing various applications of the speaker, including with a TV, MP3/MP4 player, desktop computer, smartphone, during sports activities, and with a laptop.

5. MAINTENANCE

5.1 Cleaning

Wipe the speaker with a soft, dry cloth. Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface or internal components.

5.2 Battery Care

- To prolong battery life, avoid fully discharging the speaker frequently.

- Charge the speaker regularly, even if not in use, to maintain battery health.
- Store the speaker in a cool, dry place away from extreme temperatures.

5.3 Water Resistance

The XDOBO Gentleman 1992 speaker is designed with water resistance. However, it is not fully waterproof for prolonged submersion. Ensure the charging port cover is securely closed before exposing the speaker to water. Do not submerge the speaker for extended periods or expose it to saltwater or other chemicals.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; device Bluetooth off; too far from speaker.	Ensure speaker is in pairing mode (flashing light). Turn device Bluetooth ON. Move device closer to speaker (within 10 meters).
No sound or distorted sound.	Volume too low; speaker not connected; audio source issue.	Increase volume on both speaker and device. Reconnect Bluetooth. Check audio source.
TWS pairing failed.	Speakers too far apart; one speaker already connected to another device.	Ensure speakers are close to each other. Disconnect any existing Bluetooth connections from both speakers before TWS pairing.

7. SPECIFICATIONS

Feature	Detail
Brand	XDOBO
Model	Gentleman 1992
Connectivity Technology	Bluetooth 5.0, USB
Speaker Maximum Output Power	40 Watts
Power Source	Battery
Control Type	Button
Speaker Type	Woofer
Product Dimensions (L x W x H)	18 cm x 12 cm x 7 cm



Image 7.1: Diagram illustrating the dimensions of the XDOBO Gentleman 1992 speaker: 18cm length, 12cm width, and 7cm height.

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact XDOBO customer service through their official website or the retailer from whom you purchased the product. Keep your proof of purchase for warranty claims.

For the latest updates and support resources, visit the official XDOBO website.