

[Manuals.plus](#) /

› [TOPKIND](#) /

› TOPKIND Universal Replacement Remote Control for Hisense Smart TVs User Manual

TOPKIND ERF3J80H

TOPKIND Universal Replacement Remote Control for Hisense Smart TVs

Model: ERF3J80H

PRODUCT OVERVIEW

This TOPKIND replacement remote control is designed for universal compatibility with Hisense 4K UHD Android Smart TVs. It offers a straightforward, plug-and-play experience without the need for complex programming. The remote features an ergonomic design for comfortable handling and includes dedicated shortcut buttons for popular streaming services, enhancing your viewing convenience.

Universal Remote Control For All Hisense Smart TVs



Compatible for :

4K UHD HISENSE ANDROID Smart TV

Image: The TOPKIND universal remote control shown alongside various Hisense Smart TV screens, illustrating its broad compatibility with 4K UHD Android Smart TV models.

SETUP AND BATTERY INSTALLATION

The TOPKIND remote control is designed for immediate use. No programming or pairing is required. Simply install two AAA batteries (not included) to begin operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Simple To Use, Without Any Programming

just insert 2*AAA batteries

⚠ (battery not included)



Image: A visual guide demonstrating the three steps for installing AAA batteries into the remote control: sliding open the cover, inserting batteries with correct polarity, and closing the cover.

OPERATING INSTRUCTIONS

Familiarize yourself with the functions of each button on your TOPKIND remote control for optimal use.



Image: A detailed diagram of the TOPKIND remote control, with labels pointing to each button and describing its specific function, such as power, input, channel, volume, and navigation controls.

- **INPUT:** Changes the TV input source.
- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Used to enter channels or input numbers.
- **Dash Button (-):** Selects a digital sub-channel.
- **CC (Closed Caption):** Turns Closed Captioning on/off and turns Closed Captioning on when mute is active.
- **Navigation (Up/Down/Left/Right) & OK:** Used for menu navigation and confirming selections.
- **Home Button:** Displays the TV's Home screen.
- **FAV (Favorite):** Press to enter your customized input source/app. Press and hold to enter customization settings.
- **Return Button:** Returns to the previous screen or menu.
- **Menu Button:** Displays the TV's Menu.
- **Volume (+/-):** Adjusts the volume level.
- **Channel (CH +/-):** Changes the TV channel.
- **Mute Button:** Mutes and restores sound.

- **Media Control Buttons (Play/Pause, Fast Forward, Rewind, Stop):** Controls media playback.
- **MTS:** Choose the audio language in DTV mode and set MTS for Mono, Stereo, or SAP in ATV mode.
- **APPS:** Provides quick access to all applications.

Dedicated Hotkeys

The remote features six dedicated shortcut buttons for instant access to popular streaming services:

- Netflix
- p.video (Prime Video)
- YouTube
- Disney+
- Tubi
- Peacock



Image: The TOPKIND remote control with its six dedicated hotkeys for Netflix, Prime Video, YouTube, Disney+, Tubi, and Peacock clearly visible and highlighted.

Note: This remote control does not support voice control functions.

COMPATIBILITY

This replacement remote control is compatible with a wide range of Hisense Smart TV models and remote models. If your specific model is not listed, please contact customer support for assistance.

Compatible TV Models:

- 75A6G, 70A6G, 65A6G, 60A6G, 55A6G, 50A6G, 43A6G
- 55U68G, 65U68G, 55U6G, 50U6G, 65U6G, 75U6G
- 50U68G, 75U68G

Compatible Remote Models:

- ERF3A90 (e.g., 65U7G, 75U7G, 55U8G, 65U8G, 75U9DG, PX1-PRO, PX1, 90L5G-90DLTB, 100L5G-DLT100B, 100L5G-CINE100A, 120L5G-CINE120A, 100L9G-CINE100A, 120L9G-CINE120A, 100L9G-DLT100A)
- ERF3J80H (e.g., 32A45FH, 40A45H, 43A4H, 40A4H, 32A4H, 75A6G, 70A6G, 65A6G, 60A6G, 55A6G, 50A6G, 43A6G, 43A68G, 50A68G, 55A68G, 60A68G, 65A68G, 75A68G, 50U68G, 55U68G, 65U68G, 75U68G, 75U6G, 65U6G, 55U6G, 50U6G, 65A6GV, 55A6GV, 50A6GV, 43A6GV)

MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these simple maintenance guidelines:

- **Cleaning:** Gently wipe the remote control with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage, which can cause damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the remote control or exposing it to excessive force, as this can damage internal circuitry. The remote is made of durable ABS material, but proper care is still recommended.

TROUBLESHOOTING

If you encounter issues with your TOPKIND remote control, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Remote is unresponsive or not working.	Batteries are dead or incorrectly inserted.	Replace batteries with new AAA batteries, ensuring correct polarity (+/-).
Remote has short range or intermittent response.	Low battery power; Obstruction between remote and TV; Infrared sensor on TV is blocked.	Replace batteries. Ensure a clear line of sight to the TV's infrared sensor. Remove any obstructions.
Specific buttons are not working.	Button stuck or damaged; Remote malfunction.	Gently press the button multiple times to dislodge any debris. If the issue persists, the remote may be faulty.
Remote does not control TV despite new batteries.	Incompatible TV model; Remote malfunction.	Verify your TV model is listed in the compatibility section. If it is, and troubleshooting steps fail, contact customer support.

SPECIFICATIONS

- **Brand:** TOPKIND
- **Model:** ERF3J80H
- **Product Dimensions:** 7.68 x 1.89 x 0.7 inches (19.5 x 4.8 x 1.8 cm)
- **Item Weight:** 2.82 ounces (80 grams)
- **Batteries Required:** 2 x AAA (not included)
- **Material:** ABS (Acrylonitrile Butadiene Styrene)
- **Color:** Black
- **Special Features:** Universal, Ergonomic, Lightweight, No Programming Required
- **Max Number of Supported Devices:** 3 (for universal functionality, though primarily for Hisense TVs)
- **Compatible Devices:** Television (Hisense Smart TVs)
- **Transmission Distance:** Up to 10 meters (33 feet)
- **Response Time:** Approximately 0.2 seconds





Image: A clear view of the front and back of the TOPKIND replacement remote control, showcasing its ergonomic design and button layout.

OFFICIAL PRODUCT VIDEOS



Video: This video demonstrates the TOPKIND remote control in action, highlighting its key features and ease of use with a Hisense TV. It showcases the quick response and dedicated hotkeys.



Video: An official product video from TOPKIND Store, showing the remote control's functionality and compatibility with Hisense TVs. It emphasizes the simple setup and direct access to streaming apps.

WARRANTY AND SUPPORT

TOPKIND is committed to providing high-quality products and excellent customer service. For any questions, concerns, or assistance with your remote control, please do not hesitate to contact us. We are dedicated to ensuring your satisfaction and are always ready to help.

Please refer to your purchase documentation or the retailer's website for specific warranty details and contact information.

© 2025 TOPKIND. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question