



[Manuals.plus](#) /

› [Owigit](#) /

› [Owigit Stainless Steel Washer Bellow Instruction Manual](#)

Owigit MFW9700SQ1, MFW9800TQ0, MFW9600SQ1, MHWE300VF00, MHWE500VW11, WFW9451XW00, MHWE400WW01

Owigit Stainless Steel Washer Bellow Instruction Manual

Model Compatibility: MFW9700SQ1, MFW9800TQ0, MFW9600SQ1, MHWE300VF00, MHWE500VW11, WFW9451XW00, MHWE400WW01

PRODUCT OVERVIEW

This document provides essential information for the installation, maintenance, and troubleshooting of the Owigit Stainless Steel Washer Bellow. This component is designed as a replacement part for various Maytag and other compatible washing machine models, ensuring a proper seal between the washer tub and the door.



Image: The Owigift Stainless Steel Washer Bellow, shown in its grey, flexible material. This component forms a crucial seal around the washing machine door opening.

SAFETY INFORMATION

Always disconnect power to the washing machine before attempting any installation, maintenance, or repair. Failure to do so may result in electric shock or injury. Wear appropriate personal protective equipment, such as gloves, during

installation.

INSTALLATION GUIDE

This washer bellow is a replacement part. Installation typically involves removing the old bellow and installing the new one. While specific steps may vary by washing machine model, the general procedure is as follows:

- 1. Preparation:** Disconnect the washing machine from its power source and water supply. Move the machine to an area with sufficient space for access.
- 2. Access:** Depending on your washer model, you may need to remove the front panel or top of the washing machine to gain access to the existing bellow. Consult your washing machine's specific service manual for detailed access instructions.
- 3. Remove Old Bellow:** Carefully detach the retaining clamps or springs that hold the old bellow in place, both around the door opening and the washer tub. Gently pull the old bellow away from the machine.
- 4. Clean Area:** Thoroughly clean the areas where the new bellow will be seated, removing any detergent residue, mold, or debris. This ensures a proper seal.
- 5. Install New Bellow:** Position the new Owigift washer bellow, ensuring it is correctly aligned with the tub and door opening. Secure it with the retaining clamps or springs. Ensure the drain holes (if present) are at the bottom.
- 6. Check Fit:** Verify that the bellow is seated correctly and forms a tight seal. Ensure the washing machine door can close and latch without excessive pressure or obstruction. An improper fit can lead to leaks or door latch issues.
- 7. Reassembly & Test:** Reassemble any panels removed. Reconnect power and water supply. Run a short test cycle without laundry to check for leaks and proper operation.

Note: If you are unsure about the compatibility or installation process, it is recommended to contact a qualified technician or the manufacturer for assistance.

OPERATING FUNCTION

The washer bellow, also known as the door boot seal, is a critical component that creates a watertight seal between the washing machine's outer tub and the door opening. Its primary function is to prevent water from leaking out of the machine during wash cycles. It also helps to dampen vibrations and can sometimes include channels for water circulation or drainage.

MAINTENANCE

Regular maintenance of the washer bellow can extend its lifespan and prevent issues such as leaks or mold growth.

- Regular Cleaning:** After each wash cycle, wipe down the inside of the bellow with a clean cloth to remove any trapped water, lint, or detergent residue. This helps prevent mold and mildew buildup.
- Deep Cleaning:** Periodically, perform a deeper clean using a mild detergent solution or a washing machine cleaner. Pay attention to folds and crevices where debris can accumulate.
- Inspection:** Regularly inspect the bellow for any signs of wear, tears, cracks, or punctures. Early detection of damage can prevent significant water leaks.
- Ventilation:** Leave the washing machine door slightly ajar after use to allow air circulation and help dry out the bellow, reducing moisture that can lead to odors and mold.

TROUBLESHOOTING

If you encounter issues after installing the Owigift Washer Bellow, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Water Leaking from Door	<ul style="list-style-type: none"> • Improper installation/seating of the bellow. • Bellow is damaged (tear, puncture). • Debris trapped in the bellow folds. 	<ul style="list-style-type: none"> • Re-check installation to ensure the bellow is properly seated and clamps are secure. • Inspect the bellow for damage; replace if necessary. • Clean the bellow thoroughly, especially the lower folds.
Door Not Latching/Closing Properly	<ul style="list-style-type: none"> • Bellow is not seated correctly, causing obstruction. • Excessive pressure from the bellow against the door. 	<ul style="list-style-type: none"> • Ensure the bellow is fully pushed into its groove and not bulging out. • Verify that the retaining clamps are correctly installed and not causing distortion. • Check for any foreign objects caught between the door and the bellow.
Unpleasant Odor from Washer	<ul style="list-style-type: none"> • Mold or mildew buildup in the bellow. 	<ul style="list-style-type: none"> • Clean the bellow thoroughly with a mold-killing solution. • Ensure proper ventilation by leaving the door ajar after use.

SPECIFICATIONS

Attribute	Value
Brand	Owigift
Material	Alloy Steel, Plastic
Washer Type	Fender
Exterior Finish	Stainless Steel or White
Metal Type	Stainless Steel
Color	Grey
Number of Pieces	1
Grade Rating	Standard
UPC	718997229235
Manufacturer	Owigift
Part Number	1

COMPATIBLE MODELS

This washer bellow is compatible with a wide range of washing machine models, including but not limited to:

- Maytag: MFW9700SQ1, MFW9800TQ0, MFW9600SQ1, MHWE300VF00, MHWE500VW11, WFW9451XW00,

- MHWE400WW01, MHWE300VW00, MHWE300VW13, MHWE500VP00, MFW9600SQ0, MHWE950WW01, MHWE950WW02, MHWE300VW12, MHWE450WW01, MHWE900VJ01, MHWE450WW02, MHWE300VW11
- Whirlpool/Kenmore (and others, based on part numbers): WFW9400SW02, WFW9600TA00, WFW9200SQ00, WFW9200SQ02, GHW9300PW4, WFW9470WW01, WFW9600TW01, WFW9500TC01, WFW9550WW00, WFW9400SU00, WFW9500TW03, WFW9500TW01, GHW9150PW1, WFW9750WW00, WFW9750WW01, WFW9750WW02, WFW9400VE01, GHW9400PW0, WFW9400SZ04, GHW9160PW0, WFW9400SU01, WFW9750WR01, GHW9150PW0, GHW9150PW4, WFW9600TA01, WFW9470WR00, WFW9470WR01, GHW9400PL4, WFW9550WR00, WFW9200SQA11, GHW9400SU0, GHW9100LW2, WFW9700VA01, WFW9400SW01, WFW9200SQA12, WFW9550WL00, GHW9400PW4, WFW9300VU03, GHW9250ML1, WFW9400SW04, GHW9400PL0, WFW9400SW00, WFW9550WW10
 - Part Numbers: 110.47086600, 110.49962603, 110.45091402, 110.46742702, 110.45081401, 110.47781701, 110.47088600, 110.45986401, 110.45986400, 110.42926203, 110.47701800, 110.47787800, 110.47789701, 110.49962602, 110.45986404, 110.47081600, 110.45966404, 110.47089600, 110.45081400, 110.45088404, 110.49962600, 110.47788800, 110.45081404, 110.45872401, 110.45087404, 110.45862401, 110.45996400, 110.47086601, 110.46747801, 110.45862404, 110.49972600, 110.45091404, 110.45872404, 110.47087600, 110.44832202, 110.47789700, 110.49972602, 110.45981400, 110.47791701, 110.42926202, 110.47781700

SUPPORT

For any questions regarding compatibility, installation, or troubleshooting, please contact Owigift customer support. We aim to resolve your inquiries within 24 hours.

(Specific contact information is not provided in the product data.)