

Svan Hibachi Grill Wooden Kids Playset

Svan Hibachi Grill Wooden Kids Playset Instruction Manual

1. INTRODUCTION

Thank you for choosing the Svan Hibachi Grill Wooden Kids Playset. This playset is designed to provide an engaging and imaginative play experience for children, simulating a Japanese hibachi restaurant. It includes a wooden grill table, stools, and a variety of toy food pieces and utensils. Please read this manual carefully before assembly and use to ensure safe and proper operation.



Figure 1.1: The complete Svan Hibachi Grill Wooden Kids Playset with table extended and stools, ready for play.

2. SAFETY GUIDELINES

Your child's safety is paramount. Please observe the following guidelines:

- **Adult Supervision:** Always ensure children are supervised during play.
- **Stool Use:** The included stools are designed as part of the toy playset and are not intended as general furniture. They are not suitable for climbing, shaking, or standing on.
- **Weight Limit:** Each stool has a maximum weight capacity of 110 pounds (50 kg). Exceeding this limit may cause damage or injury.
- **Small Parts:** This playset contains small parts which may pose a choking hazard for children under 3 years of age. Keep these items out of reach of very young children.
- **Assembly:** Adult assembly is required. Ensure all screws and fasteners are securely tightened before allowing children to play. Periodically check for loose parts.
- **Material Safety:** The playset is made of natural wood and non-toxic paint.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present in your package:

- 1 x Hibachi Grill Playset Unit (main table with storage)
- 3 x Stools
- 1 x Chef's Hat
- 1 x Spatula
- 1 x Tongs
- 3 x Place Settings (each with fork, knife, placemat, and plate)
- 1 x Oil Bottle (toy)
- 1 x Steak (toy food)
- 1 x Fish (toy food)
- 1 x Fried Egg (toy food)
- 2 x Break-apart Eggs (toy food)
- 1 x Onion Tower (toy food)
- 3 x Shrimp (toy food)
- 3 x Broccoli (toy food)
- 3 x Mushrooms (toy food)
- 1 x Noodles (toy food)



Figure 3.1: A visual representation of the various play food items, utensils, and accessories included with the playset.

4. ASSEMBLY INSTRUCTIONS

Adult assembly is required. Please follow these general steps carefully. It is recommended to sort all screws and components before starting.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface.

2. **Identify Parts:** Refer to the included assembly diagram (if provided in your package) to identify each wooden piece and hardware. Note that screws may be mixed in one bag; sort them by size and type.
3. **Assemble Main Grill Unit:** Begin by attaching the side panels to the main grill surface and base using the appropriate screws. Ensure all connections are snug but do not overtighten to avoid stripping or cracking the wood.
4. **Install Storage Shelves:** Insert the internal shelves into the designated slots within the main grill unit's storage compartments.
5. **Attach Side Tables:** Secure the foldable side tables to the main unit. These typically attach with hinges or sliding mechanisms.
6. **Assemble Stools:** Attach the legs to the stool seats using the provided hardware. Ensure all legs are firmly attached and stable.
7. **Final Check:** Once assembled, double-check all screws and connections to ensure they are secure. The playset should be stable and free of wobbles.



Figure 4.1: An overhead view illustrating the main components of the playset, including the grill, table accessories, storage, and stools.



Figure 4.2: The playset features four spacious shelves for organizing and storing play food and utensils.

5. OPERATING INSTRUCTIONS (HOW TO PLAY)

The Svan Hibachi Grill Playset encourages imaginative role-play. Here's how children can engage with the set:

- **Chef Role-Play:** Children can wear the chef's hat and use the spatula and tongs to pretend to cook the various toy food items on the hibachi grill surface.
- **Meal Preparation:** Arrange the steak, fish, shrimp, eggs, broccoli, mushrooms, and onion tower on the grill. The break-apart eggs add an interactive element.
- **Serving Guests:** Extend the side tables and set the three place settings with plates, placemats, forks, and knives. Serve the cooked noodles and other food items to pretend guests sitting on the stools.
- **Interactive Dining:** The playset allows for multiple children to play together, fostering social interaction and cooperative play as they take on roles of chef and diners.
- **Storage:** Utilize the four storage compartments beneath the grill to keep all play pieces organized when not in use.



Figure 5.1: A close-up view of the grill area, demonstrating how toy food pieces can be arranged for pretend cooking.



Figure 5.2: The playset with its side tables extended, showing multiple place settings for interactive dining play.

6. MAINTENANCE AND CARE

To ensure the longevity of your Svan Hibachi Grill Playset, follow these care instructions:

- **Cleaning:** Wipe down all wooden surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the wood and paint.
- **Drying:** Ensure all parts are thoroughly dry after cleaning to prevent warping or damage to the wood.
- **Storage:** Store the playset in a dry environment, away from direct sunlight or extreme temperatures, which can cause the wood to crack or fade.
- **Regular Inspection:** Periodically check all screws and connections for tightness. Tighten any loose fasteners to maintain stability and safety.

7. TROUBLESHOOTING

If you encounter any issues with your playset, please refer to the following common solutions:

- **Difficulty with Assembly:** If instructions are unclear or assembly is challenging, carefully re-examine the diagrams and ensure all screws are sorted correctly. Sometimes, a second pair of hands can be helpful.
- **Missing or Damaged Parts:** If any parts are missing or damaged upon arrival, please contact Svan customer support immediately for assistance. Do not attempt to force ill-fitting parts.
- **Unstable Stools or Playset:** Ensure all screws are fully tightened. If instability persists, disassemble and reassemble the affected section, paying close attention to alignment. Avoid overtightening, which can strip screws or crack wood, leading to instability.
- **Screws Breaking or Not Holding:** This can occur from overtightening or using incorrect screws. If a screw breaks or does not hold, contact customer support for replacement hardware. Do not use the playset if structural components are compromised.

8. PRODUCT SPECIFICATIONS

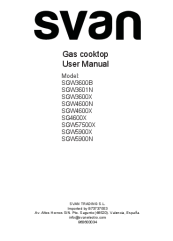
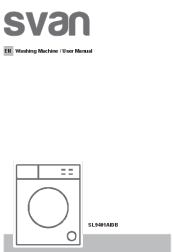

Product Dimensions	38 x 19 x 22 inches (L x W x H)
Item Weight	40.3 pounds
Recommended Age	36 months - 13 years
Material	Natural Wood, Non-toxic Paint
Stool Max Weight	110 pounds

9. WARRANTY AND SUPPORT

Svan is committed to providing quality products. While specific warranty details are not provided in this manual, if you have any questions, concerns, or require assistance with your Hibachi Grill Wooden Kids Playset, please contact Svan customer support through the retailer where the product was purchased or visit the official Svan website for contact information.

Please retain this instruction manual for future reference.

Related Documents - Hibachi Grill Wooden Kids Playset

	<p>Svan Gas Cooktop User Manual</p> <p>User manual for Svan gas cooktops, covering installation, usage, safety, cleaning, and troubleshooting for models like SGW3600B, SGW3601N, and others.</p>
	<p>Svan SL9401AIDB Washing Machine User Manual</p> <p>Comprehensive user manual for the Svan SL9401AIDB washing machine, covering safety instructions, installation, operation, maintenance, and troubleshooting for optimal use.</p>
	<p>Svan SLCS6201C Manual de Usuario: Guía Completa para tu Lavadora de Carga Superior</p> <p>Descubre el manual de usuario completo para la lavadora Svan SLCS6201C. Incluye instrucciones de instalación, operación, seguridad y mantenimiento para tu lavadora de carga superior.</p>

 <p>The image shows the cover of the Svan SL6001DD Washing Machine User Manual. It features the Svan logo at the top left, a small icon of the washing machine in the center, and the model number SL6001DD at the bottom right.</p>	<p>Svan SL6001DD Washing Machine User Manual</p> <p>Comprehensive user manual for the Svan SL6001DD washing machine, covering safety, installation, operation, maintenance, and troubleshooting.</p>
 <p>The image shows the cover of the Svan SF1675500ENF User Manual. It features the Svan logo at the top left, the model number SF1675500ENF, and the text 'USER'S MANUAL' and 'Before operating this unit, please read this manual thoroughly, and retain for future reference'. There is also a small 'English' label at the bottom right.</p>	<p>Svan SF1675500ENF User Manual: Installation, Operation, and Safety Guide</p> <p>Comprehensive user manual for the Svan SF1675500ENF refrigerator. Includes installation instructions, operating guidelines, safety warnings, and troubleshooting tips.</p>
 <p>The image shows the cover of the Svan SR845500F Manual de instrucciones. It features the Svan logo at the top left, the text 'FRIGORÍFICO' and 'SR845500F' in the center, and 'Manual de instrucciones' at the bottom left.</p>	<p>Manual de Instrucciones Frigorífico Svan SR845500F</p> <p>Guía completa de usuario para el frigorífico Svan SR845500F, cubriendo instalación, uso seguro, mantenimiento y consejos de eficiencia energética.</p>