

JakMean J3A

JakMean Electric Automatic Toy Blaster (J3A)

Model: J3A / DS568

INTRODUCTION

This manual provides essential instructions for the safe and effective operation of your JakMean Electric Automatic Toy Blaster. Please read this manual thoroughly before use and retain it for future reference.

SAFETY INFORMATION

WARNING:

- Always keep the toy blaster away from children when not in use.
- Never aim the toy blaster at people's eyes or face when shooting darts.
- Use only the provided or compatible foam darts. Do not modify darts or the blaster.
- Adult supervision is recommended during play.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x JakMean Electric Automatic Toy Blaster
- 100 x Foam Darts (compatible with other brands)
- 1 x 30-Dart Capacity Belt
- 1 x Rechargeable Lithium-ion Battery
- 1 x USB Battery Charger
- 1 x Detachable Scope
- 1 x Detachable Shoulder Stock



Image: The product packaging displaying the toy blaster and its accessories.

SETUP

1. Charge the Battery

Before first use, fully charge the included rechargeable Lithium-ion battery using the provided USB charger. The charger typically has an indicator light that changes color when charging is complete.

Your browser does not support the video tag.

Video: Demonstrates how to charge the battery and attach accessories to the blaster.

2. Assemble the Blaster

Attach the shoulder stock and scope to the blaster. These components slide into designated slots on the blaster body.

1. **Sight Installation:** Slide the scope onto the top rail of the blaster.
2. **Butt Mounting:** Slide the shoulder stock onto the rear of the blaster until it clicks into place.

EASY TO USE



Image: Visual guide for assembling the blaster components.

3. Load Darts into the Belt

Insert the foam darts into the individual links of the 30-dart capacity belt. Ensure the darts are fully seated and facing the correct direction for feeding.

Your browser does not support the video tag.

Video: Demonstrates the process of loading darts into the belt and attaching it to the blaster.

4. Install the Loaded Belt

Once the belt is loaded with darts, feed one end of the belt into the designated opening on the side of the blaster. The automatic feeding mechanism will engage the belt.

5. Insert the Battery

Open the battery compartment, typically located in the handle or front section of the blaster. Connect the charged battery to the blaster's internal connector and carefully place it inside the compartment. Close the compartment securely.

OPERATION

1. Powering On/Off

Locate the power switch, usually near the trigger or on the side of the blaster. Slide it to the 'ON' position to activate the blaster. Slide it to 'OFF' when not in use to conserve battery life and for safety.

2. Shooting Modes

The JakMean Electric Automatic Toy Blaster features an automatic firing mechanism. Simply pull and hold the trigger to engage rapid-fire mode. The automatic belt rotation will continuously feed darts for sustained firing.



Image: Explanation of the blaster's single shot and multiple burst firing capabilities.



Image: Details on the automatic loading and firing mode selection.

3. Shooting Distance

The blaster is capable of rapid firing darts to a distance of 30-50 feet at 50 frames per second (fps), providing an impressive range for outdoor play.



Image: Visual representation of the blaster's effective shooting range.

MAINTENANCE

- **Battery Care:** The rechargeable battery provides 6-7 hours of playtime. Always recharge the battery fully after use to maintain its lifespan. Do not overcharge.
- **Cleaning:** Wipe the blaster with a dry, soft cloth to remove dust or debris. Do not use harsh chemicals or immerse in water.
- **Storage:** Store the blaster in a cool, dry place away from direct sunlight. Remove the battery if storing for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blaster does not fire.	Battery is not charged or not connected properly.	Ensure battery is fully charged and correctly inserted. Check power switch is ON.

Problem	Possible Cause	Solution
Darts are not feeding.	Belt is not installed correctly or darts are jammed.	Re-install the dart belt. Check for any jammed darts and carefully remove them.
Reduced shooting range.	Low battery or worn-out darts.	Recharge the battery. Replace old or damaged darts with new ones.

SPECIFICATIONS

Feature	Detail
Brand	JakMean
Model Number	J3A / DS568
Material Type	Plastic
Color	Bright White
Style	Rifle
Item Weight	2.2 Pounds
Item Dimensions (L x W x H)	17"L x 9"W x 3"H
Battery Type	Rechargeable Lithium-ion
Operation Mode	Automatic
Maximum Range	50 Feet
Special Features	Automatic dart loading, 30-dart capacity
Indoor/Outdoor Usage	Outdoor
Assembly Required	No (minor attachment of accessories)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official JakMean website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question