

[Manuals.plus](#) /

› [DODODUCK](#) /

› Dododuck Corded Big Button Phone (Model TF265) User Manual

DODODUCK TF265

Dododuck Corded Big Button Phone

MODEL: TF265 USER MANUAL

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Dododuck Corded Big Button Phone, Model TF265. Designed for ease of use, this phone features large buttons, an extra loud ringer, adjustable volume, and an SOS emergency button, making it ideal for seniors and individuals with hearing or visual impairments. Please read these instructions carefully to ensure proper functionality and to maximize your phone's features.

What's in the Box

- Dododuck Corded Big Button Phone (Base Unit)
- Handset
- Coiled Handset Cord
- Telephone Line Cord (RJ11C)
- User Manual

Product Overview

The Dododuck Corded Big Button Phone is designed with user convenience in mind. Below are key features and components.



Figure 1: Front view of the Dododuck Corded Big Button Phone, showcasing the large keypad, display, and overall design.

Key Features:

- **Large Number Buttons:** Easy to see and press for accurate dialing.
- **Caller ID:** Displays incoming call information.
- **Extra Loud Ringer:** Adjustable ringer volume to ensure calls are not missed.
- **Adjustable Handset Volume:** Multiple levels for clear conversation.
- **SOS Button:** One-touch emergency dialing.
- **Memory Buttons (M1, M2, MEM):** For quick dialing of frequently used numbers.
- **Speakerphone:** Hands-free communication.
- **Redial/Pause Function:** For convenience.

Components:

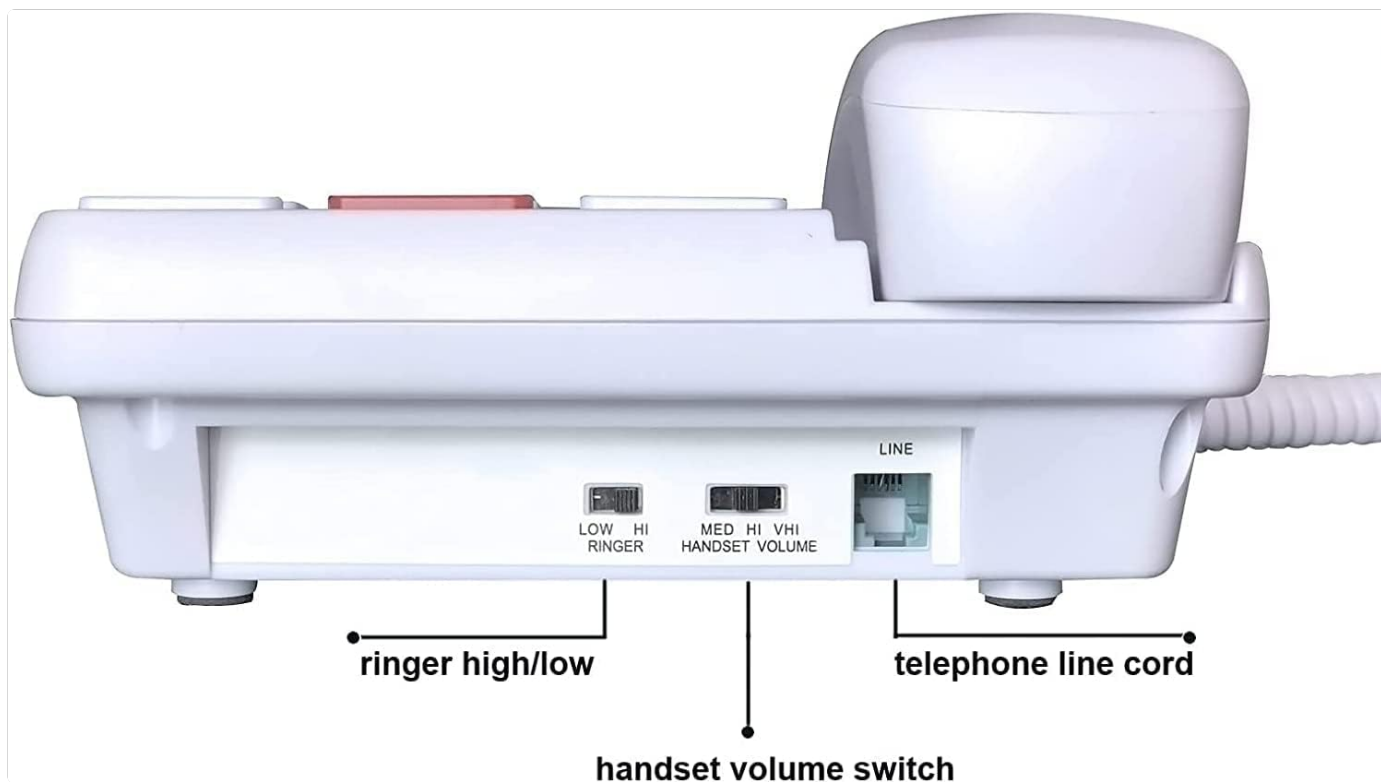


Figure 2: Side view of the phone, indicating the ringer high/low switch and handset volume switch (Med/Hi/VHi) for personalized audio settings. The telephone line cord port is also visible.

HANDSET DESIGN

According to the Laws of Biology the Curved Design is more conducive to Hearing

Easy to Hear

Head Louder

Hear Clearly

Figure 3: The handset is ergonomically designed for comfortable holding and enhanced sound clarity during calls.



Figure 4: The back of the phone features integrated holes for optional wall mounting and rubber feet for stable desk placement.

Setup

Follow these steps to set up your Dododuck Corded Big Button Phone.

1. **Connect the Handset:** Insert one end of the coiled handset cord into the modular jack located on the left side of the phone's base unit. Insert the other end into the modular jack on the handset.
2. **Connect the Telephone Line:** Insert one end of the straight telephone line cord (RJ11C) into the 'LINE' port on the rear side of the phone's base unit. Insert the other end of the telephone line cord into your wall jack.

PLUG AND PLAY

EASY INITIAL SETUP



Figure 5: Illustration of connecting the telephone line cord to the 'LINE' port on the phone's base unit.

Setting the Date and Time:

To ensure Caller ID and other features function correctly, set the date and time:

1. With the handset on-hook (phone not in use), press the **FLASH** key. The LCD will display "SET12345678".
2. Press the number **1** key. The LCD will show "1--DATE--2--CL".
3. Press the number **1** key again.
4. Enter the current two-digit month (MM), two-digit day (DD), and the last two digits of the year (YY). For example, for January 20, 2026, enter 012026.
5. Press the **SPEAKER** key to confirm and save the settings.

Adjusting LCD Brightness:

To adjust the display brightness:

1. With the handset on-hook, press the **FLASH** key. The LCD will display "SET12345678".

2. Press the number **2** key. The LCD will show "LCD con 4" (default level).
3. Use the **DOWN** (▼) or **UP** (▲) keys to adjust the brightness level (5 levels available).
4. Press the **SPEAKER** key to confirm and save the setting.

Operating Instructions

Making a Call:

1. Lift the handset or press the **SPEAKER** key to activate the speakerphone.
2. Dial the desired telephone number using the large keypad. The number will appear on the LCD display.
3. If using the handset, the call will connect automatically. If using speakerphone, the call will connect after dialing.

Receiving a Call:

When the phone rings, lift the handset or press the **SPEAKER** key to answer the call.

Memory Dialing (M1, M2, and MEM Keys):

Your phone supports one-touch dialing for M1, M2, and SOS keys, and two-touch dialing for 10 additional memory locations (0-9).

To Program M1, M2, or SOS Keys:

1. Ensure the handset is on-hook.
2. Enter the telephone number you wish to store (including area code if needed).
3. Press and hold the desired memory key (M1, M2, or SOS) for approximately 5 seconds until a confirmation tone or display change occurs.

To Program MEM Keys (0-9):

1. Ensure the handset is on-hook.
2. Enter the telephone number you wish to store.
3. Press the **MEM** key.
4. Press the desired number key (0-9) where you want to store the number.

To Dial a Stored Memory Number:

1. Lift the handset or press the **SPEAKER** key.
2. For M1, M2, or SOS: Press the corresponding key (M1, M2, or SOS). The number will be dialed automatically, and speakerphone will activate if the handset is not lifted.
3. For MEM (0-9): Press the **MEM** key, then press the number key (0-9) where the number is stored.

Adjusting Volume:

Handset Volume: Use the **HANDSET VOLUME SWITCH** on the side of the phone (refer to Figure 2) to select between MED (Medium), HI (High), and VHI (Very High) levels during a call.

Ringer Volume: Use the **RINGER SWITCH** on the side of the phone (refer to Figure 2) to select between LOW and HI (High) ringer volumes. If the switch is in the LOW position, the ringer LED will still flash for visual notification of incoming calls.

Caller ID:

When an incoming call is received, the caller's number (and name, if available and subscribed to Caller ID service) will be displayed on the LCD screen.

Redial/Pause:

Press the **Redial/P** button to automatically redial the last number called. This button can also be used as a pause key when programming numbers, if required by your telephone system (e.g., for accessing an outside line).

Flash Key:

The **FLASH** key is used to get a new dial tone or to answer a call waiting if you have subscribed to call waiting service.

Maintenance

To ensure the longevity and optimal performance of your phone:

- Clean the phone's surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- Keep the phone away from excessive moisture, heat, and direct sunlight.
- Do not attempt to disassemble or repair the phone yourself. Refer to qualified service personnel for any repairs.

Troubleshooting

If you encounter issues with your phone, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No dial tone	Check that the telephone line cord is securely connected to both the phone and the wall jack. Ensure your telephone service is active.
Cannot hear caller / Caller cannot hear me	Adjust the handset volume switch (MED/HI/VHI). Ensure the handset cord is securely connected. If using speakerphone, ensure it is activated correctly.
Memory numbers are lost	This phone may not retain stored memory numbers if power to the phone line is interrupted. Reprogram essential numbers after any power outage.
Ringer is too quiet or too loud	Adjust the ringer switch (LOW/HI) on the side of the phone.
Caller ID not displaying	Ensure you have subscribed to Caller ID service from your telephone provider. Verify the date and time are set correctly on the phone.
Cannot switch to speakerphone during a call	This model requires speakerphone to be activated at the start of a call. It cannot be switched mid-call.

Specifications

Feature	Detail
Brand	DODODUCK
Model Number	TF265
Telephone Type	Corded
Power Source	Corded Electric (Line Powered)
Dialer Type	Keypad
Caller Identification	Yes

Feature	Detail
Multiline Operation	Single-Line Operation
Item Weight	1.39 pounds
Package Dimensions	8.19 x 7.17 x 3.5 inches
Color	Red

Product Video Overview

Your browser does not support the video tag.

Video 1: This video provides an overview of the Dododuck Big Button Phone, demonstrating its components and basic setup, including how to connect the cords and navigate the user manual.

Warranty and Support

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official DODODUCK website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

