

[Manuals.plus](#) /

› [uehba](#) /

› uehba Universal Replacement Remote Control Instruction Manual for Denon AV Receivers (Models AVR-3801 to AVR-3807)

uehba 730637667726

uehba Universal Replacement Remote Control Instruction Manual

Compatible with Denon AV Receiver Models: AVR-3801, AVR-3802, AVR-3803, AVR-3804, AVR-3805,
AVR-3806, AVR-3807

1. INTRODUCTION

This manual provides instructions for the uehba Universal Replacement Remote Control, designed for seamless operation with various Denon AV Receiver models. This remote is pre-programmed and requires no additional setup for the listed compatible models.



Universal Replacement Remote Control Compatible for Denon AV Receiver :

AVR-3801 AVR-3802 AVR-3803
AVR-3804 AVR-3805 AVR-3806
AVR-3807

Image 1.1: The uehba Universal Replacement Remote Control shown alongside a Denon AV Receiver, highlighting its compatibility with models AVR-3801 through AVR-3807.

2. SETUP

2.1. Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

The image shows the back of a black, elongated remote control. The battery compartment is open, revealing two slots for AAA batteries. The left slot contains a battery with the brand name 'Energizer' and 'AAA' visible. The right slot is empty, showing the internal spring and contact. A black battery cover is placed to the right of the compartment. The remote has a textured grip in the center and two small circular buttons at the top.

**Need 2x AAA batteries
(not included)**

Image 2.1: View of the remote control's rear, illustrating the open battery compartment ready for AAA battery insertion.

Note: Batteries are not included with the remote control. Please use new alkaline batteries for optimal performance.

3. OPERATING INSTRUCTIONS

This remote control is pre-programmed for immediate use with compatible Denon AV Receivers. No additional programming is required. Simply point the remote at your receiver and press the desired function button.



Image 3.1: Detailed front view of the remote control, displaying the layout of all function buttons.

3.1. Basic Functions

- **ON/OFF:** Powers the AV Receiver on or off.

- **Input Selectors (DVD, VCR(iPod), V.AUX, EXT.IN, CD, CD-R/TAPE, AUX, TUNER):** Selects the corresponding audio/video input source.
- **Volume Up/Down (▲/▼):** Adjusts the master volume level.
- **MUTE:** Silences or restores the audio output.
- **Number Buttons (0-9):** Used for direct input selection or tuning.
- **Channel Up/Down (+/-):** Navigates through radio presets or channels.
- **Navigation Pad (MENU/ENTER, ▲/▼/◀/▶):** Used to navigate menus and confirm selections on the receiver's display.

3.2. Advanced Functions

- **D.INPUTS:** Cycles through digital input options.
- **TEST:** Initiates speaker test tone.
- **STATUS:** Displays current status information on the receiver.
- **DIMMER:** Adjusts the brightness of the receiver's display.
- **SETUP:** Accesses the receiver's setup menu.
- **SURROUND PARAMETER:** Adjusts surround sound parameters.
- **CH SEL/NIGHT:** Selects channels or activates night mode.
- **STEREO/TONE:** Switches between stereo mode and tone control.
- **SEARCH:** Initiates search functions.
- **SURROUND:** Cycles through surround sound modes.
- **iPod Controls (PLAY/PAUSE, SKIP, REPEAT, RANDOM):** Controls connected iPod devices.



Image 3.2: A user's hand demonstrating the natural grip and button accessibility of the remote control during operation.

4. MAINTENANCE

4.1. Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface.

4.2. Battery Care

- Replace batteries when the remote's response becomes sluggish or inconsistent.
- Remove batteries if the remote control will not be used for an extended period to prevent leakage and damage.
- Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Check for any obstructions between the remote control and the AV Receiver's infrared sensor.
 - Ensure you are within the effective operating range and pointing the remote directly at the receiver.
- **Certain functions not working:**
 - Verify that your Denon AV Receiver model is listed as compatible.
 - Some advanced functions may vary slightly in behavior depending on the specific receiver model.

6. SPECIFICATIONS

Feature	Detail
Model Number	730637667726
Brand	uehba
Compatibility	Denon AV Receiver AVR-3801, AVR-3802, AVR-3803, AVR-3804, AVR-3805, AVR-3806, AVR-3807
Power Source	2 x AAA Alkaline Batteries (not included)
Dimensions (L x W x H)	8.27 x 1.89 x 0.59 inches (21 x 4.8 x 1.5 cm)
Item Weight	2.57 ounces (72.86 grams)
Special Feature	Pre-setting, no programming required

7. WARRANTY INFORMATION

Specific warranty details for this product are not provided in the available information. Please refer to the retailer or manufacturer's website for any applicable warranty terms and conditions.

8. CUSTOMER SUPPORT

For any questions or assistance regarding your uehba Universal Replacement Remote Control, please contact the seller or refer to the product listing page where you made your purchase. They can provide further support and guidance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09Y48FDG6>

More documents and user manuals: <https://manuals.plus/>