

[Manuals.plus](#) /

> [uehba](#) /

> uehba Universal Replacement Remote Control Instruction Manual for Denon AV Receivers (Models: AVR-484, AVR-1603, AVR-1604, AVR-886S, AVR-1884, AVR-683, AVR-684)

uehba 730637668280

uehba Universal Replacement Remote Control Instruction Manual

Compatible with Denon AV Receiver Models: AVR-484, AVR-1603, AVR-1604, AVR-886S, AVR-1884, AVR-683, AVR-684

1. INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your uehba Universal Replacement Remote Control. This remote is designed to be compatible with various Denon AV Receiver models, offering a direct replacement experience without the need for complex programming.

Compatible Denon AV Receiver Models:

- AVR-484
- AVR-1603
- AVR-1604
- AVR-886S
- AVR-1884
- AVR-683
- AVR-684



Universal Replacement Remote Control Compatible for Denon AV Receiver :

AVR-484 AVR-1603 AVR-1604
AVR-886S AVR-1884 AVR-683
AVR-684

Image 1.1: The uehba Universal Replacement Remote Control shown alongside a list of compatible Denon AV Receiver models.

2. SPECIFICATIONS

Product Dimensions	8.27 x 1.89 x 0.59 inches
Item Weight	2.57 ounces
Model Number	730637668280
Batteries Required	2 x AAA batteries (not included)
Material	ABS

3. SETUP: BATTERY INSTALLATION

The uehba Universal Replacement Remote Control operates on two AAA batteries. Batteries are not included with the remote and must be purchased separately.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Slide the battery cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use with your compatible Denon AV Receiver. No additional programming is required.



**Need 2x AAA batteries
(not included)**



Image 3.1: View of the remote's rear, illustrating the open battery compartment for AAA battery insertion.

4. OPERATING INSTRUCTIONS

This remote control is pre-programmed to function with the specified Denon AV Receiver models. Simply point the remote at your receiver and press the desired function button.



Image 4.1: Front and rear views of the remote control, highlighting the button layout and overall design.

Key Button Functions:

- **OFF/ON:** Power button to turn the AV Receiver on or off.

- **DVD, VCR(iPod), V.AUX, EXT.IN, CD, CD-R/TAPE, AUX, TUNER:** Input selection buttons to switch between different audio/video sources connected to your receiver.
- **Number Buttons (0-9):** Used for direct channel selection or inputting numerical values.
- **PRESETS:** Access stored radio station presets.
- **BAND:** Switches between AM/FM radio bands.
- **D.INPUTS:** Digital input selection.
- **TEST:** Initiates speaker test tone for audio calibration.
- **STATUS:** Displays current receiver status information.
- **DIMMER:** Adjusts the brightness of the receiver's display.
- **SETUP:** Accesses the receiver's main setup menu.
- **SURROUND PARAMETER:** Adjusts surround sound settings.
- **VOLUME (+/-):** Increases or decreases the master volume.
- **Navigation Pad (Up, Down, Left, Right, MEMO/ENTER):** Used to navigate menus and confirm selections.
- **CH.SEL (Channel Select):** Selects audio channels.
- **NIGHT:** Activates night mode for reduced dynamic range.
- **STEREO:** Switches to stereo audio mode.
- **SEARCH:** Initiates search functions within menus or media.
- **TONE:** Accesses tone control settings (bass/treble).
- **MUTE:** Temporarily silences the audio output.
- **SURROUND:** Cycles through various surround sound modes.
- **CHANNEL (+/-):** Changes radio stations or TV channels (if applicable).
- **iPod Controls (Play/Pause, Stop, Skip Forward/Backward, Repeat, Random):** Controls playback for connected iPod devices.



Image 4.2: The remote control in use, demonstrating its functionality with a Denon AV Receiver system.

5. MAINTENANCE

Battery Replacement:

When the remote control's range decreases or it becomes unresponsive, it is time to replace the batteries. Always replace both AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

Cleaning:

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent potential leakage and damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you experience issues with your uehba Universal Replacement Remote Control, please refer to the following common solutions:

- **Remote is unresponsive:**
 - Ensure batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Check for any obstructions between the remote and the AV Receiver's infrared sensor.
 - Ensure you are within the effective operating range and pointing the remote directly at the receiver.
- **Certain buttons do not work:**
 - Verify that the button is relevant to the current input source or mode on your AV Receiver.
 - Clean the remote's surface, especially around the unresponsive button, to ensure no debris is interfering.
- **Remote range is reduced:**
 - This typically indicates low battery power. Replace both AAA batteries.
 - Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the infrared signal.

If these steps do not resolve the issue, please contact customer support for further assistance.

7. WARRANTY AND SUPPORT

For any questions, technical support, or warranty inquiries regarding your uehba Universal Replacement Remote Control, please refer to the contact information provided by your retailer or the manufacturer, uehba. Please retain your proof of purchase for warranty purposes.

You can typically find support contact details on the product packaging or the retailer's website where the item was purchased.

© 2025 uehba. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09Y4DWQ96>

More documents and user manuals: <https://manuals.plus/>