

[Manuals.plus](#) /

› [uehba](#) /

› Universal Replacement Remote Control User Manual

uehba 730637668341

Universal Replacement Remote Control User Manual

Model: 730637668341

INTRODUCTION

This manual provides instructions for the uehba Universal Replacement Remote Control, designed to operate various ONKYO AV Receivers. This remote is pre-programmed and requires no complex setup, offering immediate functionality upon battery installation.

It is compatible with a wide range of ONKYO AV Receiver models, including RC-708M, RC-762M, RC-735M, RC-764M, RC-736M, TX-SR307, TX-SR307S, TX-SR577, HT-S3400, HT-S5100, HT-R667, and many others.

SETUP

Battery Installation

The remote control requires two (2) 1.5V AA Alkaline batteries. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover downwards to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 1: Battery compartment with batteries inserted.

Initial Use

This replacement remote control is pre-programmed for compatible ONKYO AV Receivers. No additional setup or programming is required. Once batteries are installed, the remote is ready for immediate use with your device.

OPERATING INSTRUCTIONS

The remote control features a standard layout for easy navigation and control of your ONKYO AV Receiver. Below is a general guide to common button functions.





Figure 2: Front view of the remote control.

- **ON/STANDBY:** Powers the AV Receiver on or off.
- **DISPLAY:** Toggles display information on the AV Receiver.
- **REMOTE MODE/INPUT SELECTOR (BD/DVD, VCR/DVR, CBL/SAT, GAME, AUX, TUNER, TV/CD, PORT):** Selects the desired input source on the AV Receiver.
- **TONE:** Adjusts tone settings (bass/treble).
- **TUN MODE:** Changes tuner mode.
- **MUTING:** Mutes or unmutes the audio output.
- **VOL +/-:** Adjusts the master volume level.
- **CH +/-:** Changes channels (if applicable to the selected input).
- **GUIDE/TOP MENU:** Accesses the guide or top menu of the connected device.
- **PREV CH/MENU:** Navigates to the previous channel or menu.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used for menu navigation and selection.
- **SETUP:** Accesses the setup menu of the AV Receiver.
- **AUDIO:** Cycles through audio modes or settings.
- **RETURN:** Returns to the previous screen or menu.
- **Playback Controls (Rewind, Play, Fast Forward, Skip Back, Pause, Skip Forward, Stop):** Controls media playback for connected devices.
- **LISTENING MODE (MOVIE/TV, MUSIC, GAME, STEREO):** Selects different audio listening modes optimized for various content types.
- **SEARCH, REPEAT, RANDOM, PLAY MODE:** Functions related to media playback.
- **Numeric Keypad (0-9, +10, D.TUN):** Direct input for channels or tracks.
- **DIMMER:** Adjusts the brightness of the AV Receiver's display.
- **SLEEP:** Sets a sleep timer for the AV Receiver.



Figure 3: Remote control in use.

MAINTENANCE

- **Cleaning:** To clean the remote control, wipe it with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it ceases to function. Always replace both batteries simultaneously with new 1.5V AA Alkaline batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote control is not working.	- Batteries are dead or incorrectly inserted. - Remote is too far from the receiver or obstructed. - Infrared (IR) sensor on receiver is blocked.	- Replace batteries with new AA alkaline batteries, ensuring correct polarity. - Move closer to the receiver and ensure a clear line of sight. - Remove any obstructions in front of the receiver's IR sensor.
Certain buttons do not respond.	- Button may be stuck or dirty. - Function not supported by your specific receiver model.	- Gently press the button multiple times to dislodge any debris. - Refer to your ONKYO AV Receiver's original manual for supported functions.

SPECIFICATIONS

Feature	Detail
Model Number	730637668341
Brand	uehba
Product Dimensions	7.68 x 2.13 x 1.18 inches
Item Weight	3.17 ounces
Batteries Required	2 x 1.5V AA Alkaline Batteries
Special Feature	Pre-setting, no programming required
Color	Black
Max Supported Devices	1 (Specific ONKYO AV Receivers)
Compatible Devices	ONKYO AV Receivers (e.g., RC-708M, RC-762M, TX-SR307, HT-S3400)
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information or technical support regarding your uehba Universal Replacement Remote Control, please contact the manufacturer directly. Details for contacting uehba can typically be found on their official website or through the retailer where the product was purchased.

Please retain your purchase receipt as proof of purchase for any warranty claims.