

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ARSPIC](#) /

› [ARSPIC Electric Gooseneck Kettle AGK003UB User Manual](#)

ARSPIC AGK003UB

ARSPIC Electric Gooseneck Kettle

Model: AGK003UB

Brand: ARSPIC

INTRODUCTION

Thank you for choosing the ARSPIC Electric Gooseneck Kettle. This manual provides essential information for the safe and efficient use of your new kettle. Please read these instructions carefully before first use and keep them for future reference. This kettle is designed for precise temperature control and pouring, ideal for preparing various hot beverages like coffee and tea.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the appliance base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- This kettle features a British Strix thermostat for safety, including automatic shut-off, overheat protection, and boil-dry protection.
- Ensure the lid is securely closed during operation.

PRODUCT OVERVIEW

The ARSPIC Electric Gooseneck Kettle is designed for precision and ease of use. Familiarize yourself with its main components:

- **Gooseneck Spout:** Designed for controlled and precise pouring.
- **Kettle Body:** Made from food-grade SUS 304 stainless steel.
- **Lid:** Removable for easy filling and cleaning.
- **Handle:** Ergonomically designed for a comfortable and balanced grip.
- **Control Panel:** Located on the base, with buttons for temperature selection and keep warm function.
- **Power Base:** Provides power to the kettle and houses the control panel.

Precise Pouring

Steady pour-over flow rate
with gooseneck spout



Image: The ARSPIC Electric Gooseneck Kettle, showcasing its sleek design, gooseneck spout, and integrated control base.

SETUP

Before using your kettle for the first time, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and inspect the kettle for any damage.
2. **Clean:** Wash the inside of the kettle and the lid with warm, soapy water. Rinse thoroughly and wipe

dry. Do not immerse the power base in water.

- 3. Initial Boil:** Fill the kettle with water to the MAX fill line (0.8L). Place it on the power base and boil the water. Discard this first batch of boiled water. Repeat this process 2-3 times to remove any manufacturing residues and ensure pure taste.
- 4. Placement:** Place the power base on a dry, flat, heat-resistant surface. Ensure the power cord is not dangling or touching hot surfaces.

OPERATING INSTRUCTIONS

Filling the Kettle

- Remove the lid and fill the kettle with fresh, cold water.
- Do not fill below the MIN mark or above the MAX mark (0.8 liters). Overfilling may cause boiling water to spill out.
- Replace the lid securely.

Temperature Settings

This kettle offers 5 preset temperature settings for optimal brewing of various beverages:

- **80°C:** Suitable for Green Tea
- **85°C:** Suitable for White Tea
- **90°C:** Good for Coffee
- **95°C:** Suitable for Oolong Tea
- **100°C (Boil):** Suitable for Black Tea and other boiling needs

To select a temperature, place the kettle on the power base and press the desired temperature button. The LED indicator for the selected temperature will illuminate. The kettle will automatically heat the water to the chosen temperature and emit a ready tone when complete.

5 Precise Temperature Presets

Build-in British STRIX thermostat for precise temperature control



80°C-85°C
suitable for green tea

90°C
is good for coffee

95°C
is suitable for oolong tea

100°C
is suitable for black tea

Image: Close-up of the kettle's base, illustrating the 5 temperature preset buttons (80°C, 85°C, 90°C, 95°C, 100°C) and the 'Keep Warm' function.

Quick Heating and Keep Warm Function

The 1000W heating element allows the 0.8-liter kettle to boil water in approximately 4-5 minutes. After reaching the target temperature, you can activate the 'Keep Warm' function by pressing the dedicated button. This function will maintain the water temperature for up to 30 minutes, ensuring hot water is ready when you need it.

Quick Heating & Keep Warm

Boil to target temperature in about 4mins
and keep warm for 60mins



Image: The kettle in operation, showing rapid heating with 1000W power, capable of boiling water in 5 minutes.

Precise Pouring

The elegant tapered gooseneck spout is specifically designed for a steady and precise flow rate, which is crucial for pour-over coffee and delicate teas. The balanced handle provides a firm grip, allowing for controlled, slower pouring to enhance your brewing experience.

Precise Pouring

Steady pour-over flow rate with gooseneck spout



Image: A hand demonstrating the precise pouring capability of the gooseneck kettle into a coffee dripper, highlighting the controlled water flow.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your kettle.

- **Daily Cleaning:** After each use, pour out any remaining water from the kettle. Unplug the kettle from the power outlet.

- **Exterior:** Wipe the exterior of the kettle and the power base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Interior:** For general cleaning, rinse the interior with clean water. For stubborn stains or mineral deposits, use a descaling solution specifically designed for kettles, following the product instructions.
- **Storage:** Ensure the kettle is completely dry before storing. Store it in a dry place away from direct sunlight.
- **Important:** Never immerse the power base, cord, or plug in water or any other liquid.

Premium Stainless Steel

Made with 304 food-grade stainless steel



Image: The interior of the kettle, highlighting the MAX and MIN fill lines and confirming its construction from

TROUBLESHOOTING

If you encounter any issues with your kettle, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Kettle does not heat up.	Not plugged in; power outage; kettle not properly seated on base.	Ensure plug is firmly in outlet; check power supply; reseal kettle on base.
Water does not reach desired temperature.	Incorrect temperature setting selected; mineral buildup.	Verify correct temperature button is pressed; descale the kettle.
Kettle switches off prematurely.	Boil-dry protection activated; kettle lifted from base during operation.	Ensure kettle has sufficient water; do not lift kettle from base until boiling cycle is complete.
Water has an unusual taste.	New kettle residue; mineral deposits.	Perform initial boil cycles as described in Setup; descale the kettle regularly.

If the problem persists, please contact customer support.

SPECIFICATIONS

- **Brand:** ARSPIC
- **Model Number:** AGK003UB
- **Color:** Grey Blue
- **Capacity:** 0.8 Liters
- **Power:** 1000W
- **Material:** Food-grade SUS 304 Stainless Steel
- **Product Dimensions:** 19.5 x 24.9 x 21.2 cm
- **Item Weight:** 1.27 Kilograms
- **Special Features:** Automatic Shut-off, Variable Temperature Control (80°C, 85°C, 90°C, 95°C, 100°C), Keep Warm Function (30 minutes), Boil-Dry Protection, Overheat Protection, Precise Gooseneck Spout.



Image: The kettle's base, highlighting the Strix thermostat for precise temperature control and safety features like boil-dry protection and auto shut-off.

WARRANTY AND SUPPORT

Your ARSPIC Electric Gooseneck Kettle is covered by a manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact ARSPIC customer

service through the retailer where you purchased the product or visit the official ARSPIC website for contact information.

© 2026 ARSPIC. All rights reserved.