



[Manuals.plus](#) /

> [uehba](#) /

> uehba Universal Replacement Remote Control Instruction Manual for Denon AV Receivers

uehba RC-942

uehba Universal Replacement Remote Control Instruction Manual

Compatible with Denon AV Receiver Models: AVR-1801, AVR-1802, AVR-1803, AVR-1403, AVR-1620, AVR-1506, RC-942, RC-917

INTRODUCTION

This manual provides instructions for the uehba universal replacement remote control, designed for use with various Denon AV Receiver models. This remote is pre-programmed and requires no additional setup beyond battery installation, allowing for immediate use with compatible devices.



Universal Replacement Remote Control Compatible for Denon AV Receiver :

AVR-1801 AVR-1802 AVR-1803

AVR-1403 AVR-1620 AVR-1506

RC-942 RC-917

This image displays the uehba universal replacement remote control alongside a Denon AV receiver, illustrating its intended use and compatibility with various Denon models.

SETUP

1. Battery Installation

The remote control requires two (2) AAA alkaline batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards and remove it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Need 2x AAA batteries
(not included)

The back of the uehba remote control is shown with the battery cover removed, illustrating the compartment for two AAA batteries.

2. Initial Use

This remote control is pre-programmed for compatible Denon AV Receivers. Once batteries are installed, it is ready for immediate use. No additional programming or code entry is required.

OPERATING INSTRUCTIONS

The remote control provides access to the primary functions of your Denon AV Receiver. Point the remote directly at your receiver and ensure there are no obstructions between the remote and the receiver's infrared sensor.





A clear front view of the uehba remote control, detailing the arrangement and labeling of all its buttons for various functions.

Key Functions:

- **OFF/ON:** Powers the AV receiver on or off.
- **Input Selectors (DVD, VCR(iPod), V.AUX, EXT.IN, CD, CD-R/TAPE, AUX, TUNER):** Selects the desired audio/video input source.
- **Number Buttons (0-9):** Used for direct input selection, tuning radio frequencies, or selecting presets.
- **PRESETS:** Accesses stored radio station presets.
- **BAND:** Switches between AM and FM radio bands.
- **TUNER:** Activates the tuner function.
- **D.INPUTS:** Cycles through digital input options.
- **TEST:** Initiates speaker test tone.
- **STATUS:** Displays current status information on the receiver's display.
- **DIMMER:** Adjusts the brightness of the receiver's display.
- **SETUP:** Enters the receiver's setup menu.
- **SURROUND PARAMETER:** Adjusts surround sound parameters.
- **VOLUME (+/-):** Increases or decreases the master volume.
- **MENU/ENTER & Navigation Arrows:** Used to navigate menus and confirm selections.
- **CH.SEL (Channel Select):** Selects audio channels.
- **NIGHT:** Activates night mode for reduced dynamic range.
- **STEREO:** Switches to stereo sound mode.
- **SEARCH:** Initiates search functions (e.g., radio station search).
- **TONE:** Adjusts tone controls (bass/treble).
- **MUTE:** Mutes or unmutes the audio output.
- **SURROUND:** Cycles through various surround sound modes.
- **CHANNEL (+/-):** Changes radio stations or channels.
- **iPod Controls (Play/Pause, Skip, Repeat, Random):** Controls connected iPod devices.

Note: While this remote provides core functionality, some advanced or model-specific features of your original Denon remote may not be replicated. For detailed operations specific to your Denon AV Receiver model, please refer to your receiver's original instruction manual.

MAINTENANCE

Battery Replacement:

If the remote control's response becomes sluggish or stops working, replace both AAA batteries with new ones. Always replace both batteries at the same time and ensure correct polarity.

Cleaning:

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

Storage:

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

TROUBLESHOOTING

• Remote not responding:

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new AAA alkaline batteries.
- Ensure there is a clear line of sight between the remote control and the AV receiver's infrared sensor. Remove any obstructions.
- Confirm the remote is pointed directly at the receiver.

• Slow response or intermittent functionality:

- This can sometimes indicate low battery power. Try replacing the batteries.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the receiver's IR sensor.

• Certain functions do not work:

- This remote is designed for primary functions. Some advanced or specific features of your original Denon remote may not be supported.
- Refer to your Denon AV Receiver's original manual for specific functions and their expected behavior.

SPECIFICATIONS

Model Number	RC-942
Product Dimensions	8.27 x 1.89 x 0.79 inches (21 x 4.8 x 2 cm)
Item Weight	2.57 ounces (72.86 grams)
Batteries Required	2 x AAA Alkaline Batteries (not included)
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Denon AV Receivers (AVR-1801, AVR-1802, AVR-1803, AVR-1403, AVR-1620, AVR-1506, RC-942, RC-917)

WARRANTY INFORMATION

No specific warranty information is provided in the product details. For any warranty-related inquiries, please contact the seller directly.

CUSTOMER SUPPORT

If you have any questions, encounter issues, or require further assistance with your uehba universal replacement remote control, please contact the seller or manufacturer through your purchase platform. They will be able to provide specific support and guidance.

© 2026 uehba. All rights reserved.