

[Manuals.plus](#) /

> [DENOKIN](#) /

> DENOKIN Portable Blender (Model B09Y5L7PRG) - Instruction Manual

DENOKIN B09Y5L7PRG

DENOKIN Portable Blender (Model B09Y5L7PRG) - Instruction Manual

1. INTRODUCTION

Thank you for choosing the DENOKIN Portable Blender. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and retain it for future reference.



Image: The DENOKIN Portable Blender displayed with fresh fruits, highlighting its use for healthy drinks.

2. PRODUCT OVERVIEW

2.1 Key Features

- **Large Capacity:** 450ml (16oz) vessel, ideal for single servings of juices, shakes, and smoothies.
- **Powerful Blending:** Equipped with an 18000 RPM 7.4V motor and durable 6-blade stainless steel design for efficient blending of fruits and ice.

- **Simple & Safe Operation:** Features a magnetic induction switch for safety, ensuring operation only when the jar is correctly connected. Double-click the power button to start, preventing accidental activation.
- **Long-lasting Battery:** Built-in 2*2000mAh rechargeable battery provides 20-25 cups per charge. USB charging port allows convenient charging via power bank, computer, or other USB sources. Four LED power indicators show remaining battery capacity.
- **Durable & Safe Materials:** Made from BPA-free, food-grade material with a thickened design and non-slip stripe gap texture for secure handling.

2.2 Components

The DENOKIN Portable Blender consists of three main parts:

1. **Blender Base:** Contains the motor, battery, control button, and charging port.
2. **Blending Jar:** The 450ml capacity vessel where ingredients are placed.
3. **Lid:** Secures the jar and features a flip-top opening for drinking and a lanyard for portability.



Image: Two portable blenders demonstrating the 16oz capacity, ideal for personal use.



Six Sharp Stainless Steel Blades

Upgraded 18,000PRM Powerful Motor

Image: An internal view highlighting the upgraded 18,000 RPM powerful motor and six sharp stainless steel blades.

3. SAFETY INSTRUCTIONS

- Ensure the blending jar is securely attached and aligned with the power button before operation. The magnetic induction switch prevents blending if not properly assembled.
- Do not submerge the blender base in water, as it contains electrical components.
- Do not sterilize any parts with hot water above 60°C (140°F) or in a microwave oven, as high temperatures may cause deformation.
- The blender will not operate while charging.
- Avoid continuous blending for more than 3 minutes. If continuous blending is needed, take a 30-second break after every 3 minutes to prevent motor overheating.
- Keep out of reach of children.
- Always cut fruits and vegetables into small pieces (approximately 2cm cubes) before blending to prevent blades from getting stuck.
- Do not use the blender with dry or sticky ingredients without sufficient liquid.

Magnetic Safety Lock Design



Please align the **red arrow** on the sticker with the power button and then quickly double-click the power button to start it up.

The **red arrow** on the sticker on the cup is not aligned with the power button, double clicking the power button will not start.

Image: Magnetic Safety Lock Design. The blender will only operate when the red arrow on the cup is aligned with the power button.

4. SETUP

- Initial Charge:** Fully charge the blender for 4-5 hours before first use. The 4 LED indicators will show charging progress.
- Assembly:** Ensure the blending jar is securely twisted onto the base, aligning the arrow on the jar with the power button on the base.

DENOKIN | A8 Portable Blender

Enjoy homemade fresh and nutritious drinks anytime, anywhere



Image: Features including a visual battery indicator, clear scale line for measurements, and a waterproof rubber plug for the Type-C charging port.

5. OPERATING INSTRUCTIONS

1. **Prepare Ingredients:** Cut fruits and vegetables into small pieces (approx. 2cm cubes). For frozen fruits or ice, ensure pieces are small and add liquid in a 1:1 ratio.
2. **Add Ingredients:** Fill the jar with liquid (water, milk, yogurt) first, then add your solid ingredients. Do not exceed 60-80% of the cup's capacity (450ml max).
3. **Secure Lid:** Twist the lid onto the jar until it is tightly sealed.
4. **Start Blending:** Double-click the power button to start blending. The blender will run for 30 seconds automatically.
5. **Optimize Blending:** For best results, gently shake the blender during operation to ensure all ingredients are fully blended and prevent sticking.
6. **Pulse Mode:** To use pulse mode, double-click and hold the power button.
7. **Enjoy:** Once blending is complete, open the flip-top lid and drink directly from the jar, or remove the base and attach the included bottom cap for on-the-go convenience.

1. Cut fruit or vegetables into 2cm cubes before adding them.



2. Fill the jar to about 60% with fruit or vegetables.



3. Fill up to 80% of the cup with water or milk



4. Shaking blender to prevent blades getting stuck in larger ingredients.



Image: A step-by-step guide showing how to prepare ingredients, fill the jar, and blend.

Video: Official DENOKIN demonstration of the portable blender in action, making shakes and smoothies.

Video: A short demonstration of the DENOKIN portable blender's convenience for on-the-go use.

6. CLEANING AND MAINTENANCE

1. **Disassembly:** Twist off the blending jar from the base.
2. **Cleaning the Jar and Lid:** Wash the blending jar and lid with warm water and mild soap. Rinse thoroughly. These parts are not dishwasher safe.
3. **Cleaning the Base:** Wipe the blender base with a damp cloth. Do not submerge the base in water or rinse it under running water to avoid damaging electrical components.
4. **Charging Port:** Ensure the waterproof rubber plug is securely closed over the USB charging port when not charging or cleaning to prevent water damage.
5. **Storage:** Store the blender in a clean, dry place when not in use.

7. TROUBLESHOOTING

- **Blender Not Starting:**

- Ensure the blending jar is correctly aligned with the base, activating the magnetic induction switch.
- Check battery level using the LED indicators. Recharge if necessary.
- Ensure the power button is double-clicked to start.

- **Ingredients Not Blending Properly:**

- Cut ingredients into smaller pieces (2cm cubes).
- Add sufficient liquid to cover the blades and ensure ingredients are not too dry or sticky.
- Gently shake the blender during operation to help ingredients circulate.

- **Blender Stops During Operation:**

- This may indicate overheating. Allow the blender to cool down for 30 seconds before resuming.
- Check for overloading. Reduce the amount of ingredients if necessary.

- **Charging Issues:**

- Ensure the USB cable is properly connected to both the blender and a power source.
- The blender will not operate while charging.

8. SPECIFICATIONS

Feature	Detail
Brand	DENOKIN
Model	B09Y5L7PRG
Capacity	450 Milliliters (16oz)
Product Dimensions	3.3"D x 3.3"W x 9.5"H
Item Weight	1 Pound
Material	Stainless Steel (Blades), BPA-Free Food-Grade Plastic (Jar)
Blade Material	Stainless Steel
Motor Speed	18000 RPM
Voltage	7.4 Volts
Wattage	150 Watts
Battery	2*2000mAh Rechargeable
Charging Port	USB Type-C
Special Feature	Auto Shut Off, Magnetic Induction Switch
Dishwasher Safe	No



Image: The compact dimensions of the portable blender, measuring 8cm in diameter and 24cm in height.

9. WARRANTY AND SUPPORT

The DENOKIN Portable Blender comes with a **12 Months Warranty**. For warranty claims, technical support, or any product-related inquiries, please contact DENOKIN customer service through the retailer's platform or the contact information provided in your product packaging.