



[Manuals.plus](#) /

› [Tamagotchi](#) /

› Tamagotchi Original - Sprinkles (Updated Logo) Instruction Manual

## Tamagotchi 42942

# Tamagotchi Original - Sprinkles (Updated Logo) Instruction Manual

Model: 42942 | Brand: Tamagotchi

## INTRODUCTION

---

The Tamagotchi Original - Sprinkles (Updated Logo) is a digital pet that brings back the classic virtual pet experience from 1997. This device features original programming, allowing you to feed, clean, care for, and even discipline your digital companion. Your interaction and care determine the adult form your Tamagotchi will evolve into. It includes a CR2032 battery and comes with a chain for portability.



Image: Front view of the Tamagotchi Original - Sprinkles (Updated Logo) device.

## SAFETY INFORMATION

---

**WARNING: CHOKING HAZARD** - Small parts. Not for children under 3 years. The device contains a CR2032 button or coin cell battery. If swallowed, it can cause severe injury or death. Seek immediate medical attention if a battery is swallowed.

## WHAT'S IN THE BOX

---

- 1 x Tamagotchi Original - Sprinkles (Updated Logo) device
- 1 x CR2032 battery (pre-installed)
- 1 x Chain attachment

# TaMaGoTchi<sup>®</sup> MD

THE ORIGINAL VIRTUAL REALITY PET  
L'ANIMAL DE COMPAGNIE VIRTUEL ORIGINAL

**BAN  
DAI**<sup>®</sup> MD

**8+**  
Asst.  
#42800

HATCH  
FEED  
GROW

ÉCLOSION  
NOURRIR  
CROISSANCE

GEN1



**⚠ WARNING:** Contains button or coin cell battery. Hazardous if swallowed. See instructions.

**⚠ AVERTISSEMENT :** Contient une pile de type bouton ou pièce. Dangereux si avalé. Voyez les directives.

Image: Front view of the product packaging.

# Tamagotchi<sup>®</sup>

THE ORIGINAL VIRTUAL REALITY PET  
L'ANIMAL DE COMPAGNIE VIRTUEL ORIGINAL

BAN  
DAI<sup>®</sup>

8+  
Asst.  
#42800

Tamagotchi<sup>®</sup>

HATCH  
FEED  
GROW

ÉCLOSION  
NOURRIR  
CROISSANCE

GEN1



**WARNING:** Contains button or coin cell battery. Hazardous if swallowed. See instructions.

**AVERTISSEMENT :** Contient une pile de type bouton ou pièce. Dangereux si avalé. Voyez les directives.

Image: Back view of the product packaging, illustrating various functions and buttons.

1. **Remove from Packaging:** Carefully remove the Tamagotchi device from its packaging.
2. **Battery Activation:** The CR2032 battery is included and pre-installed. To activate, pull out the plastic tab protruding from the side of the device.
3. **Initial Setup:** Once activated, your Tamagotchi egg will appear on the screen. You may need to set the current time and date using the device's buttons.

## OPERATING INSTRUCTIONS

---

Your Tamagotchi will hatch from an egg and grow through various stages (child to adult). The care you provide will influence its development and determine which of the 7 adult characters it becomes.

### Basic Care Functions:

- **Feed:** Provide food and snacks when your Tamagotchi is hungry.
- **Clean Up:** Clean up after your Tamagotchi when it uses the bathroom.
- **Play:** Engage with your Tamagotchi to keep it happy. This includes the 'Character game' where you guess its next move.
- **Medicine:** Administer medicine if your Tamagotchi becomes sick.
- **Lights:** Turn the lights on/off as needed, especially when your Tamagotchi is sleeping.
- **Health Check:** Monitor your Tamagotchi's health status regularly.
- **Discipline:** Discipline your Tamagotchi if it misbehaves when it is happy, fed, and clean.





Image: Close-up of the Tamagotchi screen displaying a character and interaction icons.

## SPECIFICATIONS

<b>Brand Name</b>	Tamagotchi
<b>Model Number</b>	42942
<b>Item Type Name</b>	Electronic Pet
<b>Color</b>	Sprinkles (Updated Logo)
<b>Material Type</b>	ABS, PC, SI
<b>Item Dimensions (L x W x H)</b>	2.13" x 0.75" x 1.75"
<b>Power Source</b>	Battery Powered
<b>Battery Type</b>	1 x CR2032 (included)
<b>Display Type</b>	LCD

<b>Age Range Description</b>	8+ years
<b>Manufacturer</b>	Bandai Namco Toys & Collectibles America
<b>UPC</b>	045557429423

## MAINTENANCE

---

To ensure the longevity of your Tamagotchi device, keep it clean and dry. Avoid exposing it to extreme temperatures or direct sunlight. If the display becomes dim or unresponsive, the CR2032 battery may need to be replaced. Refer to the battery compartment on the back of the device for replacement instructions.

## TROUBLESHOOTING

---

If your Tamagotchi device experiences issues such as freezing or unresponsiveness, a soft reset may resolve the problem. Locate the reset button (usually a small, recessed button) on the back of the device and press it gently with a pointed object (e.g., a paperclip). This will restart the device without losing your pet's progress if done correctly. Consult the included mini-manual for specific reset procedures.

## WARRANTY AND SUPPORT

---

For warranty information, product support, or to inquire about replacement parts, please refer to the contact details provided on the product packaging or visit the official Tamagotchi website. Keep your proof of purchase for any warranty claims.