



Manuals.plus /

› HOVERSTAR /

› Bluetooth Hoverboard, LED Wheels Chrome Color Self Balance Scooter for Kids, Teenager (Chrome Black) User Manual

HOVERSTAR LBW21

HOVERSTAR Bluetooth Hoverboard User Manual

Model: LBW21 - Chrome Black

INTRODUCTION

Thank you for choosing the HOVERSTAR Bluetooth Hoverboard. This self-balancing scooter is designed for fun and efficient personal transportation. It features LED wheels, a chrome finish, and an integrated Bluetooth speaker for an enhanced riding experience. Please read this manual thoroughly before operating your hoverboard to ensure safe and proper use.

SAFETY GUIDELINES

Your safety is paramount. Always adhere to the following guidelines:

- Always wear appropriate safety gear, including a helmet, knee pads, and elbow pads.
- Ensure the hoverboard is fully charged before each use.
- Do not ride under the influence of alcohol or drugs.
- Avoid riding on uneven surfaces, steep inclines, or near traffic.
- Do not exceed the maximum load capacity of 165 lbs (75 kg).
- Children should always be supervised by an adult while riding.
- Comply with all local laws and regulations regarding hoverboard use.
- Be aware of your surroundings and other pedestrians or vehicles.

SETUP AND INITIAL USE

Unboxing and Inspection

Carefully remove all components from the packaging. Verify that all parts are present and undamaged. The package includes the HOVERSTAR Bluetooth Hoverboard and a charger.

Charging the Hoverboard

Before first use, fully charge the hoverboard. The charging time is approximately 2 to 3 hours.

1. Locate the charging port on the hoverboard.
2. Connect the charger to the hoverboard and then plug it into a standard AC110V/50-60Hz power outlet.
3. The charger light should be **RED** when charging.
4. When the hoverboard is fully charged, the charger light will change to **GREEN**.
5. Disconnect the charger once charging is complete.



Figure 1: The HOVERSTAR Bluetooth Hoverboard in Chrome Black, showcasing its vibrant LED wheels and sleek design.

ENDURANCE TIME

Ride up to 8-9 Miles

Go up to 6-9 MPH



Figure 2: An illustration highlighting the hoverboard's endurance, capable of riding up to 8-9 miles and reaching speeds of 6-9 MPH.



Figure 3: A graphic emphasizing the hoverboard's high-quality battery, designed for longer use time, better quality, and safer operation.

OPERATING INSTRUCTIONS

Riding the Hoverboard

The HOVERSTAR hoverboard features auto-balancing for ease of use. The non-slip footpad provides stability and traction.

- Place the hoverboard on a flat, level surface.
- Step onto one side of the hoverboard with one foot, ensuring the footpad activates.
- Quickly step onto the other side with your second foot, maintaining balance. The hoverboard will auto-balance when you ride on it.
- Lean gently forward to move forward, and lean backward to slow down or reverse.
- To turn, apply slight pressure with the foot on the side you wish to turn towards.
- To dismount, step off one foot at a time, preferably backward.



Figure 4: The hoverboard demonstrating its strong power, capable of adapting to various road conditions, including uneven terrain.



Figure 5: A detailed view of the hoverboard's flashing LED wheels, which enhance visibility and add to the riding experience.



Figure 6: An overhead view illustrating the hoverboard's LED lights and the integrated wireless Bluetooth speaker, allowing for music playback during rides.

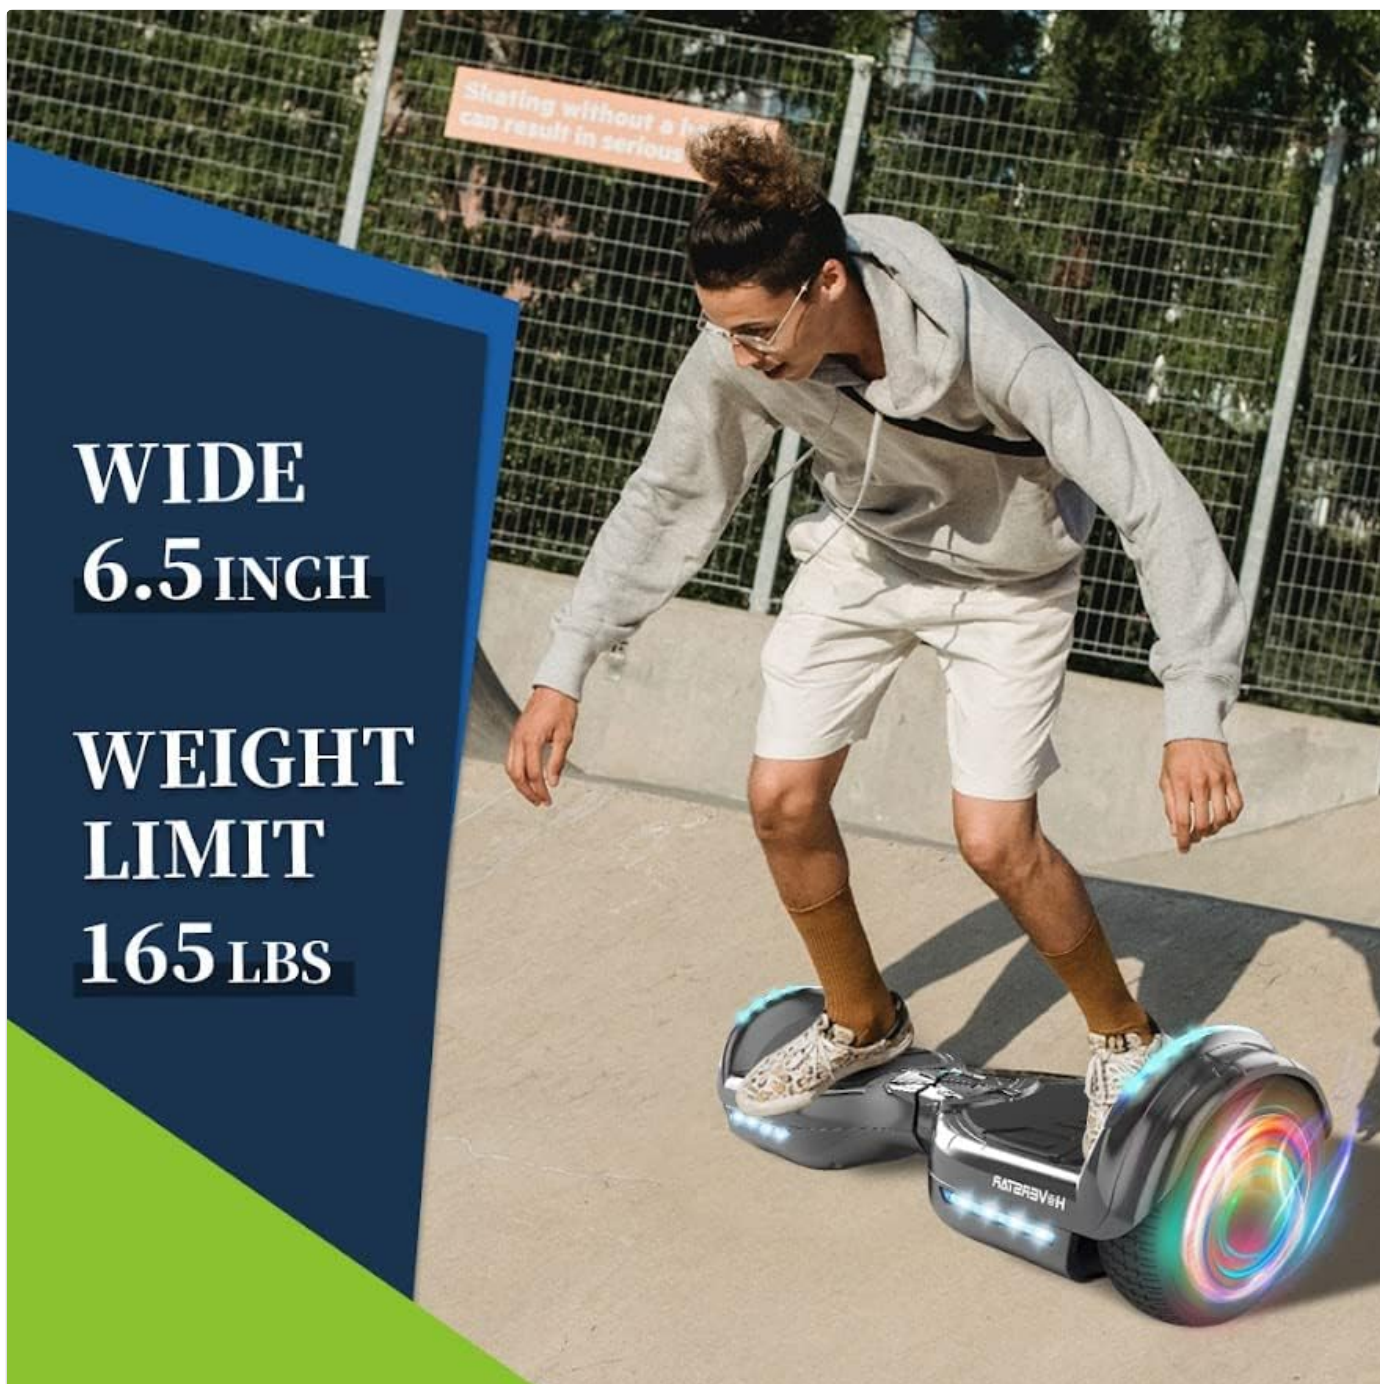


Figure 7: A rider demonstrating the hoverboard's 6.5-inch wheel size and highlighting its maximum weight limit of 165 lbs.

Connecting Bluetooth Speaker

The hoverboard features a built-in Bluetooth speaker for audio playback.

1. Ensure the hoverboard is powered on.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for available Bluetooth devices. The hoverboard will appear as "Bluetooth".
4. Select "Bluetooth" to pair with your device. A confirmation sound will indicate successful pairing.
5. Once connected, you can play music through the hoverboard's speaker. Adjust the volume directly from your mobile device.

Your browser does not support the video tag.

Video 1: This video demonstrates the initial setup, charging process, how to reset the hoverboard, and the steps to connect your mobile device via Bluetooth for music playback. It covers essential functions for new users.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your HOVERSTAR hoverboard.

- **Cleaning:** Use a soft, damp cloth to wipe down the hoverboard. Do not use harsh chemicals or abrasive cleaners. Avoid direct water spray.
- **Storage:** Store the hoverboard in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, charge the battery to about 50% every 2-3 months to maintain battery health.
- **Battery Care:** Always use the original charger provided. Do not overcharge or completely drain the battery.
- **Tire Inspection:** Regularly check the tires for wear and tear. Ensure they are free from punctures or damage.

TROUBLESHOOTING

If you encounter any issues with your hoverboard, try the following solutions:

Problem	Possible Cause	Solution
Beeping and flashing red circle light	Sensor malfunction, imbalance, or internal error.	Perform a reset (see below).
Not balancing when riding	Calibration issue.	Perform a reset (see below).
Cannot turn on	Low battery, power button issue.	Charge the hoverboard. If still unresponsive, perform a reset.
Bluetooth not working	Pairing issue, Bluetooth module error.	Ensure Bluetooth is enabled on your device and hoverboard. Try re-pairing. Perform a reset if issues persist.
Only one wheel works	Motor or sensor issue on one side.	Perform a reset (see below).
Noise during operation	Internal component friction or loose parts.	Ensure all external screws are tight. If noise persists, contact support.
Not charging	Charger malfunction, charging port damage, or battery issue.	Verify charger light status. Ensure charger is properly connected. Contact support if problem persists.

How to Reset the Hoverboard

If you experience balancing issues or other malfunctions, performing a reset can often resolve the problem.

1. Level the hoverboard on a flat surface.
2. Press and hold the power button for 20 seconds until the LED lights flash.
3. Once the LED lights flash, release the power button.
4. Turn off the hoverboard.
5. Turn it on again. The reset is complete.

SPECIFICATIONS

Feature	Detail
Model	LBW21
Color	Chrome Black
Wheel Size	6.5 inch
Motor	250W*2
Charging Time	2 ~ 3 Hours
Max Load	165 lbs (75 kg)
Ground Clearance	1 inch (2.54 cm)
Platform Height	4.5 inch (11.43 cm)
Mudguards	Plastic
Max Speed	9 miles / H (14.5 km/h)
Power Requirements	AC110V/50-60Hz
Product Dimensions	25 x 8.2 x 8.8 inches (63.5 x 20.8 x 22.4 cm)
Item Weight	1.06 pounds (0.48 kg)
Special Features	LED Light, Built-In Bluetooth Speaker

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact HOVERSTAR customer service directly. Keep your purchase receipt as proof of purchase.