

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [FABULETTA](#) /
- › [Fabuletta Air Fryer Toaster Oven Combo User Manual](#)

FABULETTA FAO001

Fabuletta Air Fryer Toaster Oven Combo User Manual

Model: FAO001
Brand: FABULETTA

INTRODUCTION

Welcome to the world of convenient and healthy cooking with your new Fabuletta 10-in-1 Countertop Convection Oven. This versatile appliance combines the functions of an air fryer, toaster, and oven, designed to simplify your meal preparation while delivering delicious results. With its 1800W power and 360° rapid heat circulation technology, you can enjoy faster cooking and up to 85% less oil compared to traditional deep frying. Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep it for future reference.



The Fabuletta Air Fryer Toaster Oven Combo, a versatile kitchen appliance designed for various cooking methods.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials that can catch fire or melt.

 
PRODUCT COMPONENTS AND ACCESSORIES

Your Fabuletta Air Fryer Toaster Oven Combo comes with several essential accessories to enhance your cooking experience:

- **Food Tray:** For baking and collecting drips.
- **Air Fry Basket:** Ideal for air frying and dehydrating.

- **Wire Rack:** For baking pizza, toast, and bread.
- **Crumb Tray:** Collects crumbs and dirt, removable for easy cleaning.
- **Recipe Book:** Includes 14 recipes created by Fabuletta chefs.

Package Included

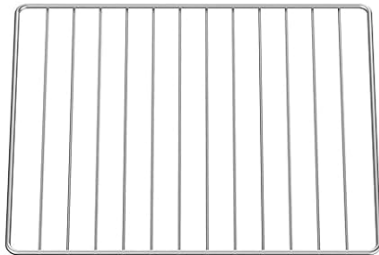


Wire Rack

Bake Pizza, toast and bread
(13.1"X 11.6")



Baking Pan

 Use for baking and collect the drips from meat
(13.3"X 11.6")

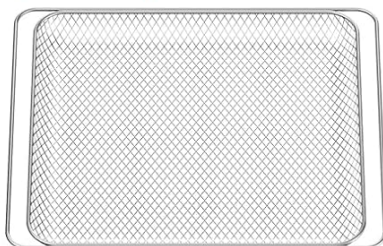

Air Fry Basket

Use for frying and dehydrate
(13.3"X 11.0")



Crumb Tray

Collect crumbs and dirt, Detach to wipe clean
(13.1"X 11.5")



Fabuletta

Air Fryer Toaster Oven



Cook Book

Include 14 recipes created by
Fabuletta chefs

A visual representation of the accessories included with your Fabuletta Air Fryer Toaster Oven.

SETUP

1. **Unpacking:** Carefully remove the appliance and all accessories from the packaging. Retain packaging for future storage or transport if needed.
2. **Initial Cleaning:** Before first use, wipe down the exterior of the oven with a damp cloth. Wash all accessories (food tray, air fry basket, wire rack, crumb tray) with warm, soapy water. Rinse thoroughly and dry completely.


3. **Placement:** Place the oven on a stable, level, heat-resistant surface. Ensure there is adequate clearance (at least 4 inches) on all sides and above the oven for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of your appliance.
5. **First Use Burn-Off:** It is normal for a new appliance to emit a slight odor or smoke during its first use. This is due to protective coatings on the heating elements burning off. To minimize this, operate the oven empty on the "Bake" setting at 400°F (200°C) for approximately 15 minutes. Ensure the area is well-ventilated.

OPERATING INSTRUCTIONS

Your Fabuletta Air Fryer Toaster Oven features an intuitive control panel with touch buttons, a digital display, and a smart control knob for easy operation.

The 10-in-1 Cooking Companion

 10 customizable cooking presets,
makes home cooking easier than ever.

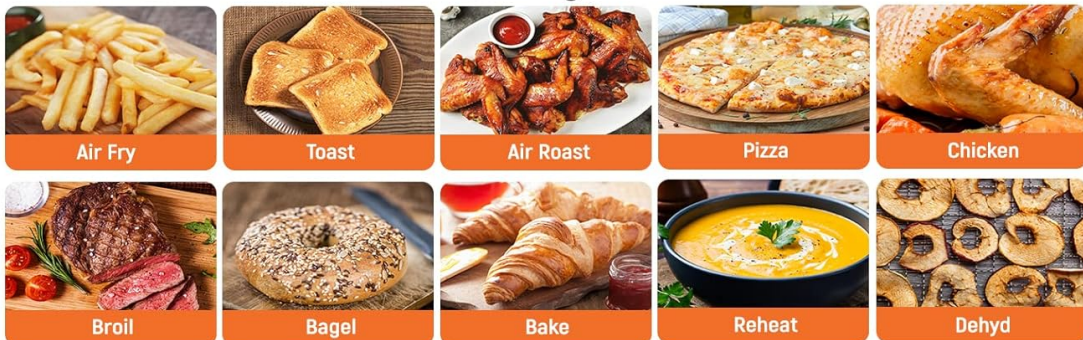

Touch Buttons

Display Area

Smart Control Knob

Adjust the time
Adjust the TEMP
Choose the Cooking Function
Press to Start or Pause

The control panel with its touch buttons, digital display, and smart control knob for selecting functions and adjusting settings.

Control Panel Overview:

- **Power Button:** Turns the oven on/off.
- **TIME Button:** Press to adjust cooking time.
- **TEMP/DARKNESS Button:** Press to adjust temperature or toast darkness level.
- **Digital Display:** Shows time, temperature, and selected function.
- **Smart Control Knob:** Rotate to cycle through cooking functions, adjust time, or adjust temperature. Press to start or pause cooking.



Adjusting settings with the smart control knob, which allows for easy cycling between time, function, and temperature.





10 Preset Functions:

This oven is pre-programmed with 10 versatile cooking functions:

- **Air Fry:** For crispy results with minimal oil (e.g., French fries, chicken wings).

- **Pizza:** Optimized for baking pizzas up to 13 inches.
- **Air Roast:** For roasting meats and vegetables with convection heat.
- **Toast:** Perfect for bread and bagels, with adjustable darkness levels.
- **Bagel:** Specifically designed for toasting bagels.
- **Bake:** Standard baking function for cakes, cookies, and casseroles.
- **Broil:** For grilling and browning food.
- **Dehydrate:** For drying fruits, vegetables, and jerky.
- **Reheat:** For warming up leftovers.
- **Preheat:** To bring the oven to the desired temperature before cooking.



<p>19QT Large Capability</p>	 <p>13" Pizza</p>	 <p>13 pcs Chicken wings</p>	 <p>9 pcs Toast</p>	 <p>9 pcs egg tart</p>
---	--	---	---	---

 
The oven's generous 19QT capacity, capable of accommodating a 13-inch pizza, 9 slices of toast, or multiple chicken wings.

Professional toast function


Prepare the breakfast for your whole families in less than 4 minutes.




7 LEVELS
to choose your

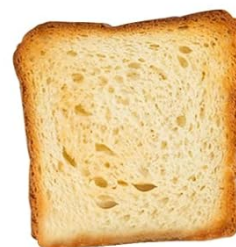

Light

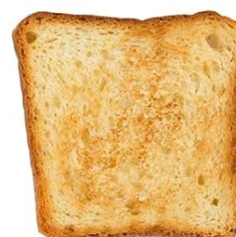 

Medium

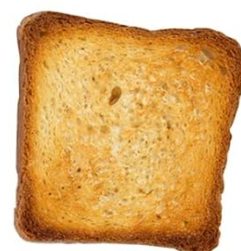 

Dark

The professional toast function, demonstrating its ability to toast up to 9 slices of bread with adjustable darkness levels.

General Operation Steps:

1. **Turn On:** Press the Power button to turn on the oven. The display will light up.
2. **Select Function:** Rotate the Smart Control Knob to cycle through the 10 preset functions. The selected function will be highlighted on the display.
3. **Adjust Time/Temperature:**
 - Press the TIME button, then rotate the knob to adjust the cooking time.
 - Press the TEMP/DARKNESS button, then rotate the knob to adjust the temperature (for cooking functions) or toast darkness level (for Toast/Bagel functions).
4. **Start Cooking:** Once time and temperature are set, press the Smart Control Knob to start the cooking process.
5. **Pause/Cancel:** Press the Smart Control Knob again to pause cooking. Press and hold the Power button to cancel the current operation and turn off the oven.

Quick & Even Cooking

 
With 1800W and turbo hot air circulation enjoy up to 30% faster than a traditional convection oven



The oven's 1800W power and turbo hot air circulation ensure quick and even cooking, up to 30% faster than traditional convection ovens.

Healthy Air Fry

85% Reduced fat,
Enjoy same taste fried food with less fat.

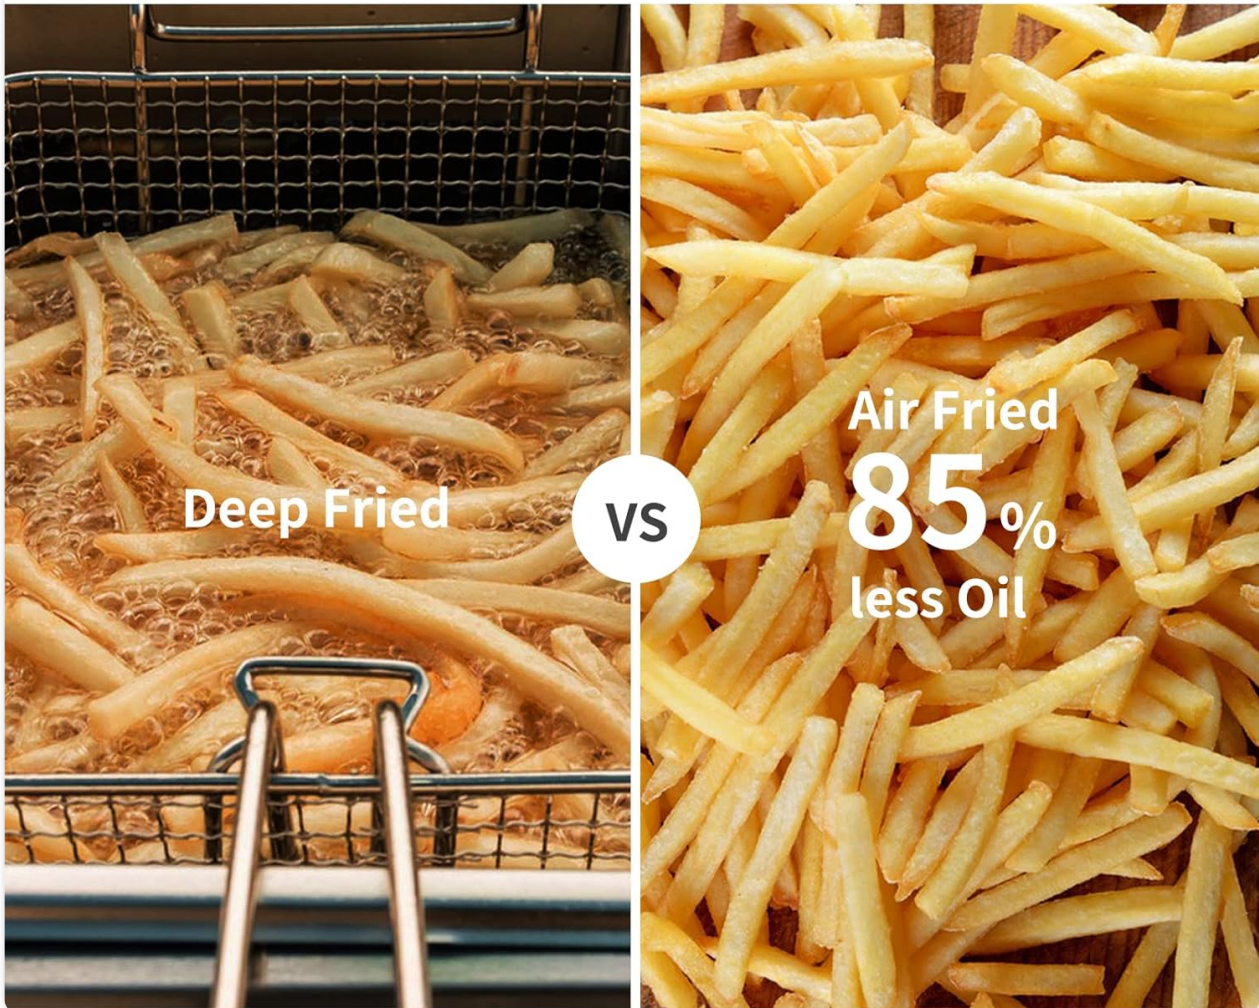

Achieve healthy air-fried results with 85% less oil while maintaining crispy textures.

CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Fabuletta Air Fryer Toaster Oven.

1. **Before Cleaning:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** The removable crumb tray should be emptied and cleaned regularly, ideally after each use, to prevent grease buildup and potential fire hazards. Slide out the tray, discard crumbs, and wash with warm, soapy water. Rinse and dry thoroughly.
3. **Accessories:** The food tray, air fry basket, and wire rack can be washed with warm, soapy water. For stubborn food residue, soak them in warm water before cleaning. Avoid abrasive cleaners or metal scouring pads that could scratch surfaces.
4. **Interior:** Wipe the interior walls of the oven with a damp cloth and mild detergent. For baked-on food, a

non-abrasive cleaning pad can be used. Do not use oven cleaners or aerosol sprays.

5. **Exterior:** Clean the exterior surface with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
6. **Storage:** When not in use, ensure the oven is clean and dry. Store it in a cool, dry place.



The easily removable crumb tray simplifies cleaning and maintenance.

TROUBLESHOOTING

If you encounter any issues with your Fabuletta Air Fryer Toaster Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outlet malfunction; power button not pressed.	Ensure the power cord is securely plugged into a working outlet. Press the power button firmly.
Food is not cooking evenly.	Overcrowding; incorrect temperature/time; food placement.	Avoid overcrowding the basket/tray. Adjust temperature and time as needed. Ensure food is spread in a single layer for air frying. Rotate food halfway through cooking.
Smoke or odor during operation.	First use burn-off; food residue; fatty foods.	Initial smoke is normal (see Setup). Clean the crumb tray and interior regularly. For fatty foods, use the food tray to catch drips.
Display not working or unresponsive controls.	Power interruption; temporary electronic glitch.	Unplug the oven for 5 minutes, then plug it back in. If the issue persists, contact customer service.
Toast is too light or too dark.	Incorrect darkness setting.	Adjust the darkness level using the TEMP/DARKNESS button and Smart Control Knob for desired results.

If the problem persists after trying these solutions, please contact Fabuletta Customer Service for assistance.

SPECIFICATIONS

Feature	Detail
Brand	FABULETTA
Model Number	FAO001
Color	Stainless Steel
Product Dimensions	14.5"D x 17.5"W x 11.9"H
Item Weight	15.67 pounds
Special Feature	Automatic Shut-Off
Control Type	Knob
Door Style	Dropdown Door
Included Components	Crumb Tray, Wire Rack, Food Tray, Air Fry Basket, Recipe Book
Power	1800W
Capacity	Fits 13" Pizza, 9 Slices Toast

WARRANTY AND SUPPORT

Fabuletta stands behind the quality of its products. Your Air Fryer Toaster Oven Combo is covered by a **24-month warranty** from the date of purchase.

This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, unauthorized repair, or commercial use.

For warranty claims, technical support, or any questions regarding your appliance, please contact Fabuletta Customer Service. Have your model number (FAO001) and proof of purchase ready when contacting support.

For more information, visit the official Fabuletta store: [Fabuletta Store on Amazon](#)

