

[Manuals.plus](#) /

> [XREXS](#) /

> XREXS Large Digital Wall Clock WiFi Sync, 16.5 in Large Display Wall Clock with Temperature/Date/Week, LED Big Digital Timer Clock with Remote Control, Alarm Clock for Home and Office, Auto-dimming Red WIFI Clock

XREXS W0088R

XREXS Large Digital Wall Clock (Model W0088R) User Manual

This manual provides detailed instructions for the setup, operation, and maintenance of your XREXS Large Digital Wall Clock.

PRODUCT OVERVIEW

The XREXS Large Digital Wall Clock is a versatile and modern timepiece designed for home and office environments. Featuring a 16.5-inch extra-large LED display, it provides clear visibility of time, date, day of the week, and temperature. Its key features include Wi-Fi synchronization for automatic time setting, auto-dimming, and multi-functional capabilities such as an alarm clock and timer, all controllable via an included remote.

Key Features

- **Easy Setup & Internet Time Synchronization:** Automatically sets time via Wi-Fi, eliminating manual adjustments and supporting Daylight Saving Time.
- **Jumbo Display with Auto-Dimming:** 16.5-inch LED screen with large, bold digits for easy reading, featuring automatic brightness adjustment based on ambient light.
- **Accurate Date & Time:** Synchronizes with internet time servers for precise timekeeping, maintaining accuracy even after power outages.
- **Multi-Functional:** Functions as a clock, alarm clock, and digital timer, all easily controlled with the included remote.
- **Wide Application & Mounting Options:** Suitable for various rooms, offering both tabletop placement with a fold-out stand and wall mounting with integrated holes.



Image: The XREXS Large Digital Wall Clock with its remote control and a Wi-Fi router icon, highlighting its connectivity.

SETUP GUIDE

Package Contents

- XREXS Large Digital Wall Clock
- Remote Control
- Power Adapter
- User Manual (this document)
- Mounting Guide (paper template)

Powering On

Connect the provided power adapter to the clock's power input port and plug it into a standard electrical outlet. The clock is designed for corded electric operation and does not require frequent battery changes.

Plug-in Clock



Corded electric only



Image: The XREXS clock displayed on a wall, showing its power cord plugged into a wall outlet.

Mounting Options

Your XREXS clock offers two convenient mounting options:

- **Tabletop Placement:** Utilize the integrated fold-out stand on the back of the clock to place it securely on any flat surface, such as a desk or nightstand.
- **Wall Mounting:** For wall installation, use the two hanging holes located on the back of the clock. A paper mounting guide is included to assist with accurate placement of screws (not included).

Stand On The Table / Desk



Mounting On The Wall



Fold-out Stand



Two Hang Holes



Image: A split image illustrating the clock's versatility, showing it standing on a table with its fold-out stand and mounted on a wall, highlighting the two hanging holes on the back.

Wi-Fi Connection and Time Synchronization

The clock automatically sets its time by connecting to Wi-Fi. Follow these steps for initial setup:

1. Ensure your Wi-Fi network is active and accessible.
2. **Before plugging in the clock**, press and hold both the "Alarm Set" and "Timer" buttons simultaneously.
3. While holding the buttons, plug in the power adapter. You will hear a beep.
4. On your smartphone or tablet, search for a Wi-Fi network named "HGX2128" and connect to it.
5. Open a web browser on your device and navigate to 192.168.88.1.
6. Select "Web-Config".
7. Enter your home Wi-Fi network name (SSID) and password. Configure Daylight Saving Time (DST) settings as needed.
8. Confirm the settings. The clock will display the Wi-Fi icon, indicating a successful connection, and will automatically

synchronize the time.



Image: A visual representation of the XREXS clock connecting to Wi-Fi, with a smartphone and a Wi-Fi router indicating the connection process.

Note: Once connected to Wi-Fi, the clock will automatically update its time, including adjustments for Daylight Saving Time, even after a power outage.

OPERATING INSTRUCTIONS

Display Modes

The clock can display time in 12-hour or 24-hour format, and temperature in Fahrenheit (°F) or Celsius (°C). It also shows the date, month, and day of the week.

Extra Large LED Screen Display

High contrast clear jumbo digits for easy viewing



Image: A detailed view of the XREXS clock's display, illustrating its ability to show time in 12/24-hour format, Daylight Saving Time (DST) indicator, and date/temperature auto-switch.

Brightness Control

The clock features 4 levels of adjustable brightness and an auto-dimming function.

- **Auto-Dimming:** The clock automatically adjusts its brightness based on ambient light levels, providing comfortable viewing day and night.
- **Manual Brightness:** Use the remote control to manually adjust the brightness to your preferred level. You can also turn the display completely off.



Image: The XREXS clock in a bedroom setting, demonstrating its auto-dimming capability by showing the display brightness adjusting between day and night, along with an icon for manual brightness control via remote.

Remote Control Functions

The included remote control allows for easy operation of all clock functions from a distance of up to 32 feet.

Easy to Use

Remote control & Button control



Image: A family on a couch interacting with the XREXS clock using its remote control, illustrating the ease of use and remote distance capability.

Alarm Clock

The clock includes an alarm function with three modes:

- Work Everyday
- Work on Monday to Friday
- Work on Weekend

Set and manage alarms using the remote control.



Image: The XREXS clock displaying its three alarm modes:

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question