



Manuals.plus /

› Whirlpool /

› Whirlpool W11259006 Washer Lid Assembly Instruction Manual

**Whirlpool W11259006**

# Whirlpool W11259006 Washer Lid Assembly Instruction Manual

Model: W11259006

Brand: Whirlpool

## 1. PRODUCT OVERVIEW

---

The Whirlpool W11259006 is a genuine OEM Lid Assembly designed for washers. This lid assembly covers the washer tub opening, ensuring proper operation and safety. It is compatible with various washer models, including certain Maytag appliances.

This part replaces the following numbers: W10714900, W10843976, W11082608, W11094984.



Image 1: Whirlpool W11259006 Washer Lid Assembly. This image displays the complete lid assembly, ready for installation.

## 2. SAFETY INFORMATION

---

Before attempting any repair or replacement, ensure the appliance is disconnected from its power source to prevent electrical shock. Always wear appropriate personal protective equipment, such as gloves and eye protection.

It is recommended to consult the manufacturer's service manual for your specific appliance model to ensure correct part selection and installation procedures. Improper installation can lead to appliance malfunction or personal injury.

### **Warning:**

- Never place items containing gasoline or other flammable liquids in the washer.
- Do not dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.

## 3. INSTALLATION INSTRUCTIONS

---

This section outlines the general steps for replacing your washer lid assembly. Specific details may vary by model. A Phillips head screwdriver or a drill with a suitable bit will be required.

1. **Preparation:** Ensure the washer is unplugged from the electrical outlet. Clear the area around the washer lid for easy access.
2. **Remove Old Lid:** Locate the two screws on each side of the existing lid's hinge brackets. Use a screwdriver or drill to carefully remove these screws. Once the screws are removed, lift the old lid assembly off the washer.
3. **Inspect New Lid:** Compare the new Whirlpool W11259006 lid assembly with the old one to ensure they are identical in fit and design.
4. **Install New Lid:** Carefully position the new lid assembly over the washer's hinge brackets. Slide the lid onto the brackets, ensuring the screw holes on the lid align with the corresponding holes on the washer frame.
5. **Secure New Lid:** Insert the four screws (two on each side) into the aligned screw holes. Tighten them securely, but do not overtighten, to prevent damage.
6. **Final Check:** Gently open and close the new lid to ensure it operates smoothly and latches correctly. Reconnect the washer to the power source.

## 4. OPERATING INSTRUCTIONS

---

The Whirlpool W11259006 Washer Lid Assembly functions as the primary cover for your washer tub. To operate, simply lift the lid to load or unload laundry. Ensure the lid is fully closed before starting a wash cycle for proper operation and safety interlock engagement.

## 5. MAINTENANCE

---

To maintain the appearance and functionality of your washer lid assembly:

- Clean the lid regularly with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or solvents that could damage the finish or clear viewing panel.
- Periodically check the hinge screws for tightness. If they become loose, gently tighten them to prevent excessive movement or wear.
- Avoid placing heavy objects on the lid or slamming it shut, as this can cause damage to the hinges or the lid itself.

## 6. TROUBLESHOOTING

---

If you encounter issues with your new lid assembly, consider the following:

- **Lid Not Latching/Locking:**
  - Ensure the lid is properly aligned with the washer frame.
  - Check that the hinge screws are securely tightened, allowing the lid to sit flush.
  - Verify that the lid lock mechanism (if applicable to your washer model) is clear of obstructions and functioning correctly.
- **Lid Appears Loose or Wobbly:**
  - Re-check and tighten all four hinge screws.
  - Ensure the lid is fully seated on the hinge brackets.

- **Cracks or Damage:**

- While this replacement part is designed for durability, repeated stress or impact can cause damage. Avoid slamming the lid or placing heavy items on it.

For persistent issues, consult your washer's main service manual or contact a qualified appliance technician.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Whirlpool
Model Number	W11259006
Part Number	W11259006
Item Type Name	Lid Assembly
Material	Multi-Material
Material Type	Multi-Material
Color	Black
Exterior Finish	Black Finish
Finish Types	glossy
Item Dimensions (L x W x H)	1 x 1 x 1 inches (Note: These dimensions might refer to packaging or a component, not the full lid.)
Number of Pieces	1
Included Components	Single Whirlpool W11259006 Washer Lid Assembly

## 8. WARRANTY AND SUPPORT

**Warranty Description:** Not Applicable. Please refer to your original appliance warranty or the retailer's return policy for details regarding this replacement part.

For further assistance or inquiries regarding the Whirlpool W11259006 Washer Lid Assembly, please contact Whirlpool customer support or visit the official Whirlpool website.