

[Manuals.plus](#) /

› [ghd](#) /

› ghd Unplugged Styler — 1" Cordless Flat Iron Hair Straightener, Professional Travel Straightening Iron with Heat-Resistant Case, USB-C Charging for 20-Minutes of Use White User Manual

ghd 99350070411

ghd Unplugged Styler

USER MANUAL

1. Introduction

The ghd Unplugged Styler is a cordless, portable flat iron designed for quick touch-ups and styling on the go. Its compact size and USB-C charging capability make it an ideal travel companion, offering up to 20 minutes of continuous styling performance.



**GOOD HAIR
HANDBAG
HERO**

Image 1.1: The ghd Unplugged Styler is designed for portability, fitting easily into a handbag for styling anytime, anywhere.

2. Safety Information

- Do not use this appliance near water or in damp environments.
- Keep out of reach of children.
- The plates become very hot during use. Avoid direct contact with skin.
- Always allow the styler to cool completely before storing, especially in its heat-resistant case.
- Use only the provided USB-C cable and power adapter for charging.
- Do not attempt to disassemble or repair the styler. Refer to qualified service personnel.

3. Package Contents

Verify that all items are present in your ghd Unplugged Styler package:

- ghd Unplugged Styler (White)
- Heat-Resistant Case
- USB-C Charging Cable
- Power Adapter

4. Product Overview

Familiarize yourself with the key components of your ghd Unplugged Styler:



Image 4.1: The ghd Unplugged Styler, showcasing its sleek design and ceramic plates.

- **Ceramic Plates:** Smooth, snag-free plates for effortless styling.
- **Power Button:** Located on the top surface for turning the styler on and off.
- **Battery Indicator Lights:** Display the current battery level and charging status.
- **USB-C Port:** For convenient charging.

ghd unplugged

**SMALL IN SIZE,
BIG ON STYLE.**



Image 4.2: Detail of the power button and LED indicator lights on the styler.

5. Setup and Charging

Before first use, ensure your ghd Unplugged Styler is fully charged.

1. Connect the provided USB-C charging cable to the styler's USB-C port.
2. Plug the other end of the cable into the power adapter, then into a wall outlet.
3. The battery indicator lights will illuminate to show charging progress. A full charge typically takes approximately 2.5 hours.
4. Once fully charged, all indicator lights will be solid. Disconnect the styler from the charger.

The styler provides up to 20 minutes of cordless styling time per full charge.



CORDLESS
ON THE GO



USB-C
CHARGING



HEAT UP
TIME

Image 5.1: The styler features convenient USB-C charging and a rapid 45-second heat-up time.

6. Operating Instructions

1. **Power On:** Press and hold the power button until the styler turns on and the indicator lights illuminate.
2. **Heating:** The styler will automatically heat to its optimal styling temperature of 365°F (185°C) in approximately 45 seconds. The indicator lights will flash during heating and become solid when ready.
3. **Styling:** Once ready, begin styling your hair. The ghd Unplugged Styler maintains a consistent temperature for effective and safer styling.
4. **Automatic Shut-off:** For safety and battery conservation, the styler will automatically shut off after 3 minutes of inactivity.
5. **Power Off:** Press and hold the power button again to turn off the styler.



Image 6.1: The styler is pre-set to 365°F, the scientifically proven optimal temperature for styling without extreme heat damage.

7. Styling Tips

- Ensure hair is clean, dry, and detangled before styling.
- For best results, apply a heat protectant spray to your hair.
- Work with small sections of hair for thorough and even styling.
- Glide the styler smoothly from roots to ends. The optimal temperature ensures efficient straightening with a single pass.
- The rounded barrel allows for versatile styling, including creating waves and curls.



Image 7.1: A user styling their hair with the ghd Unplugged Styler.



Image 7.2: The styler's plates glide smoothly through hair, providing a sleek finish.

8. Maintenance and Care

- Always ensure the styler is turned off and completely cool before cleaning.
- Wipe the ceramic plates and the body of the styler with a soft, damp cloth. Do not use abrasive cleaners or harsh chemicals.
- Store the styler in its heat-resistant case when not in use, especially when traveling, to protect the plates and unit.
- Do not wrap the charging cable tightly around the styler, as this can damage the cable.

9. Troubleshooting

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Styler does not turn on.	Battery is depleted.	Charge the styler fully using the provided USB-C cable and adapter.
Styler does not heat up.	Not powered on correctly; internal issue.	Ensure the power button is pressed and held until indicator lights appear. If issue persists, contact ghd support.
Short battery life.	Partial charge; heavy usage.	Ensure the styler is fully charged before each use. Battery life is approximately 20 minutes of continuous use.
Styler not charging.	Cable or adapter issue; port obstruction.	Check that the USB-C cable and adapter are securely connected. Try a different power outlet. Ensure the USB-C port is clean and free of debris.

10. Specifications

- **Model Number:** 99350070411
- **Product Dimensions:** 10 x 3 x 3 inches
- **Weight:** 2 Pounds
- **Battery:** 1 Lithium Ion battery (included)
- **Charging:** USB-C
- **Optimal Styling Temperature:** 365°F (185°C)
- **Heat-up Time:** Approximately 45 seconds
- **Cordless Use Time:** Up to 20 minutes
- **Automatic Shut-off:** After 3 minutes of inactivity
- **Material:** Ceramic plates

11. Warranty and Support

ghd products are manufactured to high quality standards. For detailed warranty information, product registration, or technical support, please visit the official ghd website or contact their customer service. Keep your proof of purchase for warranty claims.

Website: www.ghdhair.com

© 2024 ghd. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question