

FINTIE Type Cover

FINTIE Type Cover Wireless Bluetooth Keyboard with Trackpad User Manual

Model: Type Cover | Brand: FINTIE

For 13-inch Microsoft Surface Pro 10 / Pro 9 / Pro 8 / Pro X

1. INTRODUCTION

This manual provides instructions for the FINTIE Type Cover Wireless Bluetooth Keyboard with Trackpad. This accessory is designed to enhance the functionality of your 13-inch Microsoft Surface Pro 10, Surface Pro 9 (5G), Surface Pro 8, and Surface Pro X tablets, offering a laptop-like typing experience.

The keyboard features an ultra-thin, portable, and detachable design, incorporating Bluetooth 5.1 connectivity and a built-in rechargeable battery.

FOR 13 Inch Microsoft Surface Pro 11 / Pro 10 / Pro 9 / Pro 8 / Pro X



Image 1.1: FINTIE Type Cover Keyboard with a Microsoft Surface Pro tablet, illustrating its compatibility with various Surface Pro models.

2. PACKAGE CONTENTS

- FINTIE Type Cover Wireless Bluetooth Keyboard with Trackpad
- USB Charging Cable

3. SETUP

3.1 Charging the Keyboard

Before initial use, fully charge the keyboard. This helps in maintaining battery health and ensures optimal performance.

1. Locate the USB charging port on the keyboard.
2. Connect the provided USB charging cable to the keyboard's charging port.
3. Connect the other end of the USB cable to a USB power source (e.g., computer, USB wall adapter).

4. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off, depending on the model.

A full charge provides approximately 240 hours of uninterrupted work time and up to 180 days of standby time.



Image 3.1: Keyboard charging port and anti-slip microfiber surface.

3.2 Bluetooth Pairing

To connect the keyboard to your Microsoft Surface Pro tablet:

1. Ensure the keyboard is charged and powered on. Look for a power switch, usually on the side or top edge of the keyboard.
2. On your Microsoft Surface Pro, go to **Settings > Bluetooth & devices**.
3. Turn on Bluetooth.
4. Put the keyboard into pairing mode. This usually involves pressing a dedicated Bluetooth pairing button or a key combination (e.g., **Fn + C** or a Bluetooth icon key). Refer to the keyboard's specific key layout for the pairing button. The indicator light on the keyboard will typically flash to show it's in pairing mode.

5. On your Surface Pro, select **Add device** > **Bluetooth**.
6. Select "FINTIE Keyboard" or a similar name from the list of available devices.
7. Follow any on-screen prompts to complete the pairing process. Once paired, the indicator light on the keyboard will stop flashing.

The keyboard utilizes Bluetooth 5.1 technology, providing a stable connection up to 33 feet (10 meters).

Bluetooth Wireless Connection

In-built advanced bluetooth chip gurantees fast, no-delay and stable connection.



Note: The valid connection distance is within 33 feet/10m.

Image 3.2: Keyboard attached and detached via Bluetooth connection.

4. OPERATING INSTRUCTIONS

4.1 Typing Experience

The keyboard features slightly spread-out keys and scissor-switch mechanisms, designed for a comfortable and efficient typing experience similar to a traditional laptop keyboard. Each key is built to sustain up to 3 million keypresses.



Image 4.1: Scissor switches and responsive trackpad.

4.2 Trackpad Usage

The built-in two-button trackpad allows for precise navigation and control of your tablet without needing to touch the screen. It functions similarly to a mouse.

- **Single Tap:** Left-click.
- **Two-Finger Tap:** Right-click.
- **Two-Finger Scroll:** Scroll up or down.
- **Pinch to Zoom:** Use two fingers to zoom in or out.

Note: The trackpad may not function optimally if the keyboard is placed on an uneven surface.

4.3 Battery Level Check

To quickly check the current battery level of your keyboard, press the **Fn + X** key combination.

4.4 Dual-Angle Adjustment

The keyboard can be attached to your Surface Pro tablet to provide two different typing angles, allowing you to choose the most comfortable position for your work or viewing needs. The magnetic attachment stripe ensures a secure connection.

Dual-angle Adjustment

Attach to provide two different typing angles to meet your different needs.

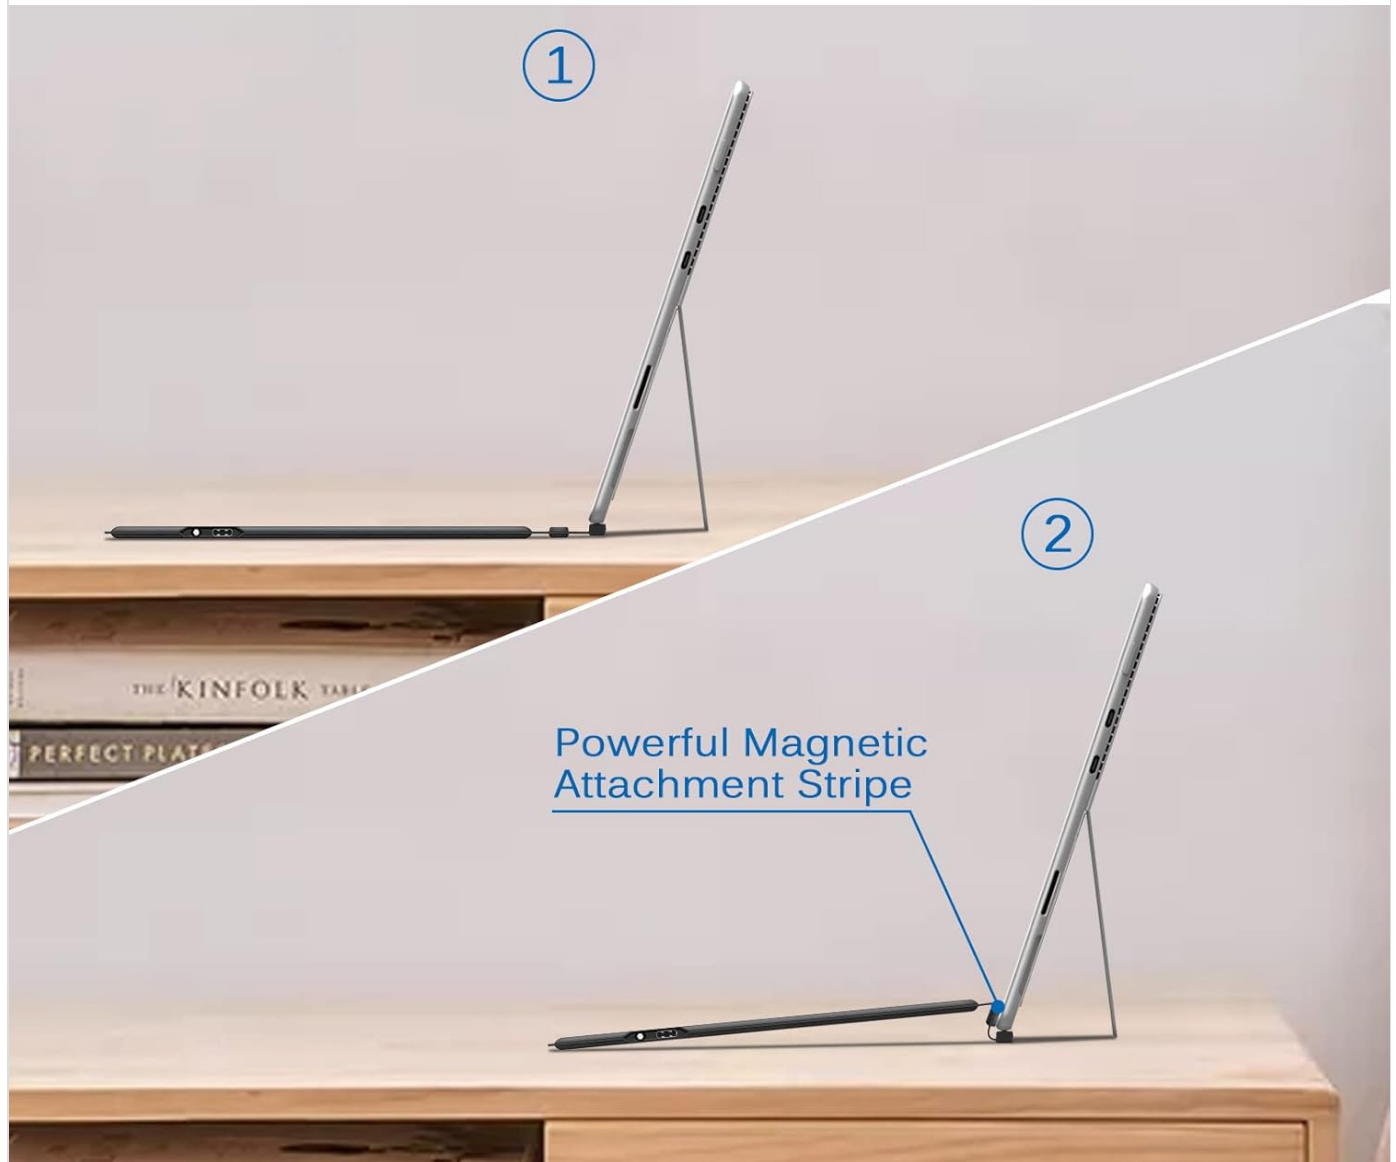


Image 4.2: Dual-angle adjustment with magnetic attachment.

5. MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the keyboard surface. Avoid harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the keyboard in a dry, cool place. Avoid extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, and if storing for an extended period, ensure it has a partial charge.
- **Protection:** The keyboard features an anti-slip microfiber soft surface on the back, offering some protection. However, avoid dropping or subjecting the keyboard to excessive force.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard not connecting via Bluetooth.	<ul style="list-style-type: none"> Keyboard battery is low or dead. Bluetooth is off on the tablet. Keyboard not in pairing mode. Too far from the tablet. Interference from other devices. 	<ul style="list-style-type: none"> Charge the keyboard fully. Ensure Bluetooth is enabled on your Surface Pro. Put the keyboard into pairing mode (refer to Section 3.2). Move the keyboard closer to the tablet (within 33 feet/10m). Turn off other Bluetooth devices temporarily. Forget the device on your tablet and re-pair.
Trackpad not responding or working incorrectly.	<ul style="list-style-type: none"> Keyboard on an uneven surface. Temporary software glitch. Bluetooth connection issue. 	<ul style="list-style-type: none"> Place the keyboard on a flat, stable surface. Turn the keyboard off and on again. Disconnect and re-pair the Bluetooth connection.
Short battery life.	<ul style="list-style-type: none"> Battery not fully charged. Aging battery. 	<ul style="list-style-type: none"> Ensure the keyboard is fully charged before use. If the battery life significantly degrades over time, it may be reaching the end of its lifespan.

7. SPECIFICATIONS

- **Product Dimensions:** 11.4 x 8.82 x 0.22 inches (28.96 x 22.40 x 0.56 cm)
- **Item Weight:** 1.12 pounds (0.51 kg)
- **Brand:** FINTIE
- **Compatible Devices:** Microsoft Surface Pro tablets (13-inch Microsoft Surface Pro 10 / Pro 9 / Pro 8 / Pro X)
- **Connectivity Technology:** Bluetooth 5.1
- **Keyboard Description:** Wireless
- **Special Features:** Ergonomic, Rechargeable, Trackpad
- **Power Source:** Built-in Rechargeable Battery (750mAh)
- **Included Components:** USB Cable
- **Switch Type:** Tactile (Scissor-switch)








Image 7.1: Keyboard dimensions and key features overview.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official FINTIE website. Keep your purchase receipt for warranty claims.

For further assistance, you may contact FINTIE customer service through their official channels.

 <p>Wireless Keyboard with Touchpad For Surface Pro 8 & Surface Pro X User Manual</p>	<p>Fintie Wireless Keyboard with Touchpad User Manual for Surface Pro 8 & Pro X</p> <p>User manual for the Fintie Wireless Keyboard with Touchpad, compatible with Microsoft Surface Pro 8 and Surface Pro X. Includes pairing instructions, specifications, touchpad gestures, troubleshooting, and safety information.</p>
	<p>Fintie Wireless Keyboard User Manual - Setup, Features, and Troubleshooting</p> <p>Comprehensive user manual for the Fintie Wireless Bluetooth Keyboard (Model EB220). Learn about pairing, charging, product overview, keys, troubleshooting, specifications, warranty, and recycling information.</p>
	<p>Fintie Wireless Keyboard User Manual</p> <p>User manual for the Fintie Wireless Keyboard, covering pairing, charging, specifications, troubleshooting, and warranty information.</p>
 <p>Wireless Keyboard for Fire HD 10 with Detachable Case User Manual</p> <p>Bluetooth</p>	<p>Fintie Wireless Keyboard for Fire HD 10 with Detachable Case User Manual</p> <p>User manual for the Fintie Wireless Keyboard for Fire HD 10 with Detachable Case, covering installation, removal, pairing, charging, specifications, and troubleshooting.</p>
<p>Wireless Keyboard User Manual</p>	<p>Fintie Wireless Keyboard User Manual</p> <p>User manual for the Fintie Wireless Keyboard, covering pairing, sleep mode, charging, specifications, keys and functions, troubleshooting, safety tips, and FCC/IC compliance.</p>
	<p>Fintie EB327 Wireless Keyboard User Manual</p> <p>User manual for the Fintie EB327 wireless keyboard, covering pairing, charging, product overview, key functions, touchpad gestures, troubleshooting, and safety information. Includes specifications and contact details.</p>