

OLOV Budhha

OLOV Electric Body Hair Trimmer User Manual

Model: Budhha

1. INTRODUCTION

This user manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your OLOV Electric Body Hair Trimmer. Please read this manual thoroughly before first use and keep it for future reference.

The OLOV Electric Body Hair Trimmer is designed for precise and comfortable hair removal across various body areas. Its advanced features ensure a smooth and irritation-free grooming experience.

2. PRODUCT FEATURES

- **Versatile Grooming:** Designed for body, pubic, groin, and bikini areas, also suitable for other body parts.
- **Skin-Friendly Ceramic Blades:** Features soft ceramic blades with advanced technology to prevent cutting, tugging, or skin irritation.
- **Adjustable Trimming Guards:** Includes 2 adjustable trimming guards for different hair lengths, allowing for customized grooming.
- **Waterproof Design:** Fully waterproof, enabling safe and convenient use in the shower for easy cleanup.
- **Rechargeable & Convenient:** Equipped with a USB recharge dock for easy charging and portability.

3. PACKAGE CONTENTS

Upon unboxing, please ensure all items listed below are present and in good condition:

- OLOV Electric Body Hair Trimmer Unit
- Replaceable Ceramic Blade Heads (Standard and Nose Trimmer)
- 2 Adjustable Trimming Guards
- USB Recharge Dock
- USB Charging Cable
- Cleaning Brush
- User Manual (this document)



Figure 1: Complete package contents of the OLOV Electric Trimmer, including the main unit, charging dock, various attachments, and charging cable.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the trimmer. This typically takes about 5 hours.

1. Connect the USB charging cable to the USB recharge dock.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) or a USB port.
3. Place the OLOV Electric Body Hair Trimmer into the recharge dock. Ensure it is seated correctly.
4. The indicator light on the trimmer will illuminate or blink during charging. It will change or turn off when fully charged.

RRECHAEGEABLE



Recharge dock



USB charging



Figure 2: The OLOV Electric Trimmer placed in its USB recharge dock for charging. The indicator light confirms charging status.

4.2 Attaching/Changing Blade Heads

The trimmer comes with interchangeable blade heads for different grooming needs.

1. To remove a blade head, gently twist and pull it upwards from the main unit.
2. To attach a new blade head, align it with the slot on the main unit and push down until it clicks securely into place.



Figure 3: Illustration of attaching the nose hair trimmer head to the main unit. Ensure a secure click for proper function.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. Press and hold the power button to turn the trimmer ON.
2. Press the power button again to switch between speed settings (if applicable, or to activate a higher speed mode).
3. To turn the trimmer OFF, press and hold the power button until the device powers down.



Figure 4: The OLOV Electric Trimmer main unit, showing the power button for operation.

5.2 Trimming Techniques

- For best results, ensure your skin is clean and dry, or use in the shower as the trimmer is waterproof.
- Hold the trimmer flat against the skin and move it slowly against the direction of hair growth.
- Use the adjustable trimming guards for desired hair length. Attach the guard by sliding it onto the blade head until it clicks.
- For sensitive areas, proceed with caution and use a gentle touch. The ceramic blades are designed to minimize nicks and irritation.

POWERFUL MOTOR

Trim fast and quiet



Figure 5: A close-up view of the ceramic blade heads, highlighting their design for safe and sharp cutting without pulling.

5.3 Waterproof Use

The OLOV Electric Trimmer is fully waterproof, allowing for wet or dry use.

- Using the trimmer in the shower can help wash away trimmed hairs, making the process cleaner.
- Always ensure the charging port cover is securely closed when using the trimmer in wet conditions.



Figure 6: The OLOV Electric Trimmer shown in a wet environment, demonstrating its waterproof capability for convenient use.

6. MAINTENANCE

6.1 Cleaning

Regular cleaning ensures optimal performance and hygiene.

1. After each use, turn off the trimmer and remove the blade head.
2. Use the provided cleaning brush to remove any trapped hairs from the blade and the trimmer body.
3. Rinse the blade head under running water. The main unit can also be rinsed, but ensure the charging port is sealed.
4. Allow all parts to air dry completely before reattaching or storing.

6.2 Storage

Store the trimmer in a cool, dry place away from direct sunlight and out of reach of children.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Low battery.	Charge the trimmer fully.
Trimmer pulls hair or cuts poorly.	Blades are dull or clogged with hair.	Clean the blades thoroughly. Consider replacing blade heads if dullness persists.
Trimmer makes unusual noise.	Hair caught in mechanism or damaged blade.	Clean the trimmer. If noise persists, discontinue use and contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	OLOV
Model Number	Budhha
Power Source	Battery Powered (1 AA battery required)
Blade Material	Ceramic with Titanium Protective Guard
Waterproof Rating	Yes
Product Dimensions	5.91 x 3.94 x 1.97 inches
Item Weight	11.99 ounces
Country of Origin	China

9. SAFETY INFORMATION

- Avoid use on infants.
- Exercise caution when using near water, ensuring the charging port is sealed.
- Follow general cleaning guidelines to maintain the trimmer's performance and safety.

10. LEGAL DISCLAIMER

Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

11. WARRANTY AND SUPPORT

OLOV stands behind all of its products. If for any reason you have an issue with your trimmer, please contact us. We are happy to help.

For customer support, please visit the [OLOV Store on Amazon](#) or refer to the contact information provided in your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question