

[Manuals.plus](#) /

› [ecozy](#) /

› ecozy Sunrise Alarm Clock E80S User Manual

ecozy E80S

ecozy Sunrise Alarm Clock E80S User Manual

Model: E80S

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the ecozy Sunrise Alarm Clock. Retain this manual for future reference.

- Do not expose the device to water or excessive humidity.
- Use only the provided power adapter or a certified 5V USB power source.
- Keep the device away from direct sunlight, heat sources, and open flames.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Ensure the device is placed on a stable, flat surface.

2. PRODUCT OVERVIEW

The ecozy Sunrise Alarm Clock E80S combines a sunrise simulation light, alarm clock, FM radio, and night light functions. It features smart control via a mobile application and voice commands.



Image 2.1: Front view of the ecozy Sunrise Alarm Clock E80S, showing the light dome, digital time display, and an accompanying smartphone displaying the control app.

2.1 Device Components

Familiarize yourself with the various buttons and ports on your ecozy Sunrise Alarm Clock.



Image 2.2: Side and back views of the alarm clock, highlighting the control buttons (ON/OFF, AL1 SET, Sleep Timer, TIME SET, Light +, Light -, RGB, Volume +, Volume -, FM Radio, Music, AL1 Option, AL2 Option) and ports (USB Charging, INPUT 5V).

- **Top Button:** Snooze / Light ON/OFF
- **Side Buttons:**
 - ON/OFF / AL1 SET
 - Sleep Timer / TIME SET
 - Light + / Light -
 - RGB (Color Light)
 - Volume + / Volume -
 - FM Radio
 - Music (Natural Sounds)
 - AL1 Option / AL2 Option
- **Ports:** USB Charging, 5V DC Input

3. SETUP

3.1 Initial Power On

1. Connect the provided USB cable to the 5V DC input port on the back of the alarm clock.
2. Plug the other end of the USB cable into a compatible USB power adapter (not included) and then into a power outlet.
3. The digital display will illuminate, indicating the device is powered on.

3.2 EcozyHome App Installation

1. Download the "EcozyHome" app from the Apple App Store or Google Play Store.
2. Register or log in to your EcozyHome account.

3.3 Wi-Fi Connection and Device Pairing

The ecozy Sunrise Alarm Clock requires a 2.4GHz Wi-Fi network for smart control features.

1. Ensure your smartphone is connected to a 2.4GHz Wi-Fi network.
2. Open the EcozyHome app and tap "Add Device" or the "+" icon.
3. Follow the in-app instructions to put the alarm clock into pairing mode (usually indicated by a flashing Wi-Fi icon on the display).
4. Select your Wi-Fi network and enter the password when prompted in the app.
5. Once connected, the Wi-Fi icon on the alarm clock display will become solid, and the device will appear in your EcozyHome app.

4. OPERATING INSTRUCTIONS

4.1 Setting Time

- **Via App:** The time will automatically synchronize with your smartphone once the device is paired with the EcozyHome app.
- **Manually:** Press and hold the "TIME SET" button. Use the "Light +" and "Light -" buttons to adjust hours and minutes, and press "TIME SET" to confirm each setting.

4.2 Setting Alarms

The ecozy Sunrise Alarm Clock supports up to four independent alarms. Each alarm can be customized with sunrise simulation, sound, and volume.

Sunrise Simulation

A game changer for waking you up gradually and calmly



From dim to bright



Light up in 10-60mins



L0-L16 adjustable volume

Image 4.1: A woman stretching in bed as the ecozy Sunrise Alarm Clock illuminates the room with a warm, gradually brightening light, simulating a natural sunrise.

1. **Via App:** Open the EcozyHome app, select your alarm clock, and navigate to the alarm settings. You can set up to four alarms, specify time, days of the week, sunrise duration, sound type, and volume.
2. **Manually:**
 - Press the "AL1 SET" or "AL2 Option" button to select an alarm.
 - Press and hold the selected alarm button to enter setting mode.
 - Use "Light +" and "Light -" to adjust time, sunrise duration (10-60 minutes), alarm sound (10 natural sounds or FM radio), and volume (16 levels).

- Press the alarm button again to confirm each setting.

3. **Snooze Function:** When an alarm sounds, press the top "Snooze" button to temporarily silence the alarm for 9 minutes. The alarm will sound again after the snooze period.

4.3 Sunset Simulation (Sleep Aid)

The sunset simulation feature gradually dims the light and plays soothing sounds to help you relax and fall asleep.



Image 4.2: A child sleeping in bed with the ecozy Sunrise Alarm Clock on a bedside table, emitting a soft, warm light that is gradually dimming, simulating a sunset.

1. **Via App:** In the EcozyHome app, select the sleep aid function. Set the duration (10-120 minutes) and choose a natural sound or FM radio station to play as the light dims.
2. **Manually:** Press and hold the "Sleep Timer" button. Use "Light +" and "Light -" to set the duration and select a sound. Press "Sleep Timer" to activate.

4.4 Night Light and Atmosphere Light

The alarm clock offers 8 colorful atmosphere light options and 20 levels of brightness adjustment.



Image 4.3: The ecozy Sunrise Alarm Clock showcasing its 8 colorful atmosphere light options, ranging from warm white to various hues like red, orange, blue, green, and purple.

- **To turn on/off:** Press the "Light +" or "Light -" button briefly.
- **To change color:** Press the "RGB" button to cycle through the 8 available colors.
- **To adjust brightness:** Use the "Light +" and "Light -" buttons to increase or decrease the light intensity (20 levels).

4.5 FM Radio

Listen to your favorite FM radio stations (76-108 MHz).

- **To turn on/off:** Press the "FM Radio" button.
- **Auto-scan:** Press and hold the "FM Radio" button to automatically scan and save available stations.
- **Change station:** Use the "Light +" and "Light -" buttons to switch between saved stations or manually tune.
- **Adjust volume:** Use the "Volume +" and "Volume -" buttons.

4.6 App Control

The EcozyHome app provides comprehensive control over all alarm clock functions.

APP Remote Easy Control



4 alarm
clocks



User friendly
interface



Only support
2.4GHz wifi

Image 4.4: A woman comfortably using her smartphone to control the ecozy Sunrise Alarm Clock via the EcozyHome app, demonstrating remote access to settings.

- Set and manage up to four alarms with detailed customization.
- Control sunrise and sunset simulation settings.
- Adjust light color and brightness.
- Manage FM radio stations and natural sounds.
- Update device firmware.

4.7 Voice Control (Amazon Alexa)

Integrate your ecozy Sunrise Alarm Clock with Amazon Alexa for convenient voice commands.

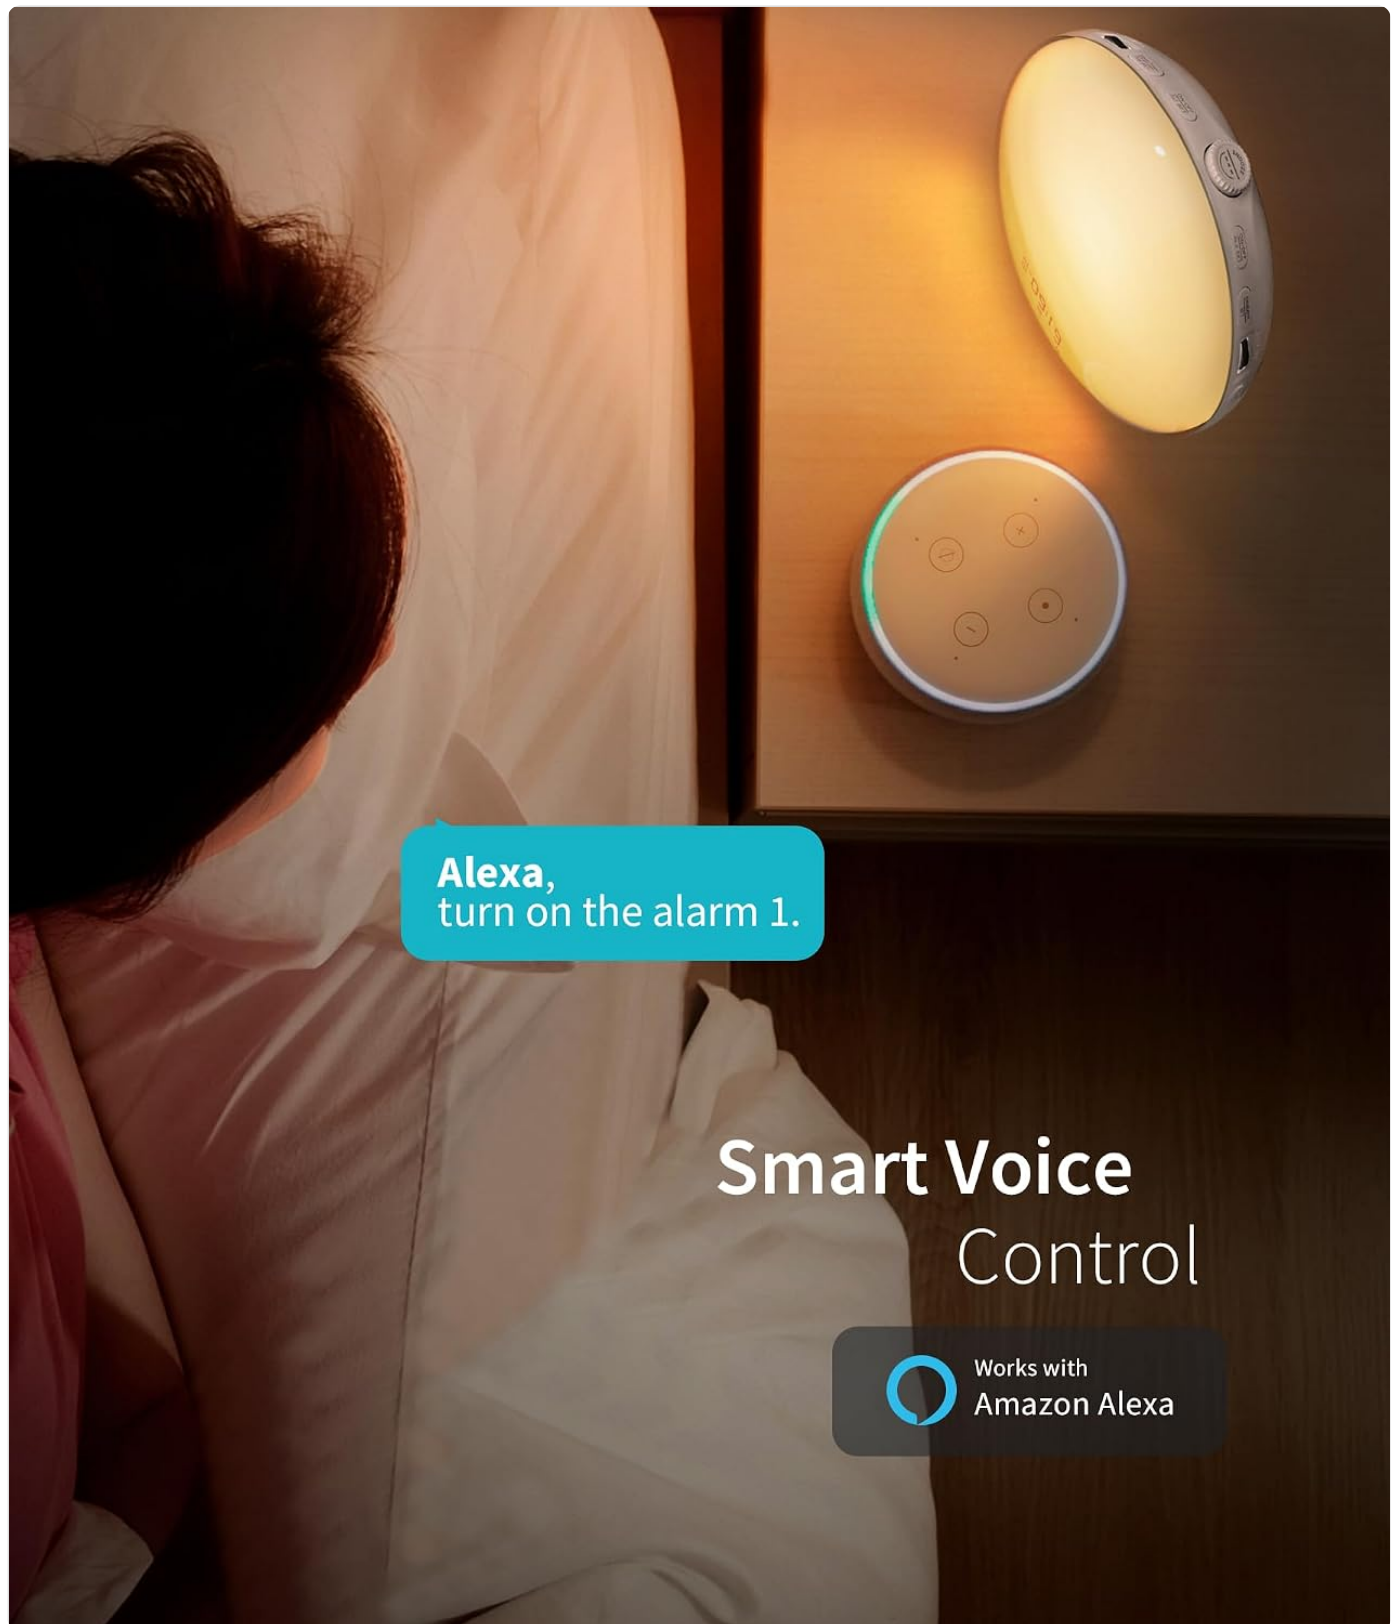


Image 4.5: An overhead view showing the ecozy Sunrise Alarm Clock and an Amazon Echo device on a bedside table, illustrating voice control functionality with Alexa.

1. Ensure your ecozy Sunrise Alarm Clock is connected to the EcozyHome app and your Alexa device is set up.
2. Open the Alexa app, go to "Skills & Games," and search for "EcozyHome."
3. Enable the EcozyHome skill and link your EcozyHome account.
4. Discover devices in the Alexa app. Your alarm clock should appear.
5. You can now use voice commands such as: "Alexa, turn on alarm 1," "Alexa, set the light to red," or "Alexa, turn off the alarm clock."

5. MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth to wipe the surface of the device. Do not use abrasive cleaners or solvents.
- **Storage:** If not in use for an extended period, store the device in a cool, dry place away from direct sunlight.

6. TROUBLESHOOTING

Issue	Possible Solution
Device does not power on.	Ensure the power cable is securely connected and the power outlet is functional. Try a different USB power adapter.
Cannot connect to Wi-Fi.	Confirm your Wi-Fi network is 2.4GHz. Ensure your phone is connected to the same 2.4GHz network during pairing. Restart the alarm clock and your router.
Alarm does not sound or light up.	Check alarm settings in the app or manually to ensure it is enabled and configured correctly. Verify volume levels.
Voice control not working.	Ensure the EcozyHome skill is enabled in your Alexa app and your accounts are linked. Check your internet connection.
FM radio static.	Adjust the position of the device to improve reception. Perform an auto-scan to find stronger signals.

If issues persist, please contact ecozy customer support for further assistance.

7. SPECIFICATIONS

- **Model:** E80S
- **Brand:** ecozy
- **Dimensions:** 16 x 5.99 x 16 cm
- **Weight:** 460 g
- **Material:** Acrylonitrile Butadiene Styrene (ABS), Polycarbonate (PC)
- **Connectivity:** 2.4GHz Wi-Fi
- **Power Input:** DC 5V (USB)
- **FM Radio Frequency:** 76-108 MHz
- **Special Features:** Sunrise/Sunset Simulation, FM Radio, App/Voice Control, 4 Alarms, Snooze, 8 Colors Night Light, 20 Brightness Levels, 10 Natural Sounds.

8. WARRANTY AND SUPPORT

ecozy products are designed for reliability and performance. For warranty information, technical support, or any questions regarding your ecozy Sunrise Alarm Clock E80S, please refer to the official ecozy website or contact their customer service directly.

Manufacturer: ecozy

Place of Business: Shenzhen Junge Yunchuang Technology Co., Ltd. 1204, Unit 3, Building C, Fu Gui Yuan, Fu Gui Road, Fu Hua Community, Xixiang Street, Baoan District, Shenzhen, China

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question