

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Simple Houseware](#) /
- › [Simple Houseware 52-Inch Freestanding Closet Garment Rack Instruction Manual](#)

Simple Houseware BO-07H-K

Simple Houseware 52-Inch Freestanding Closet Garment Rack Instruction Manual

Model: BO-07H-K | Brand: Simple Houseware

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Simple Houseware 52-Inch Freestanding Closet Garment Rack. Please read all instructions carefully before assembly and use to ensure safe and proper functionality. Keep this manual for future reference.



Image: The Simple Houseware 52-Inch Freestanding Closet Garment Rack, black, shown in a bedroom, organized with hanging clothes, hats, bags, and shoes on its two lower shelves.

SAFETY INFORMATION

Please observe the following safety precautions:

- Ensure all parts are present and undamaged before assembly. Do not use if any parts are missing or broken.
- Assemble the unit on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly, as this may damage the components.
- Distribute weight evenly on the hanging rod and shelves to prevent tipping or collapse.
- Do not exceed the maximum weight recommendation of 10 pounds per shelf and for the hanging rod.
- Keep small parts away from children during assembly.
- This product is designed for indoor use only.

PACKAGE CONTENTS

Verify that all components listed below are included in your package. Refer to the detailed parts diagram included with your product for exact identification.

- **Main Frame Components:** Metal poles and connectors forming the primary structure.
- **Hanging Rod:** The top horizontal bar for clothes hangers.
- **Fabric Shelves:** Two polyester fabric shelves for storage.
- **Side Hooks:** Two multi-pronged hooks for accessories.
- **Assembly Hardware:** Screws, bolts, and an Allen wrench for assembly.

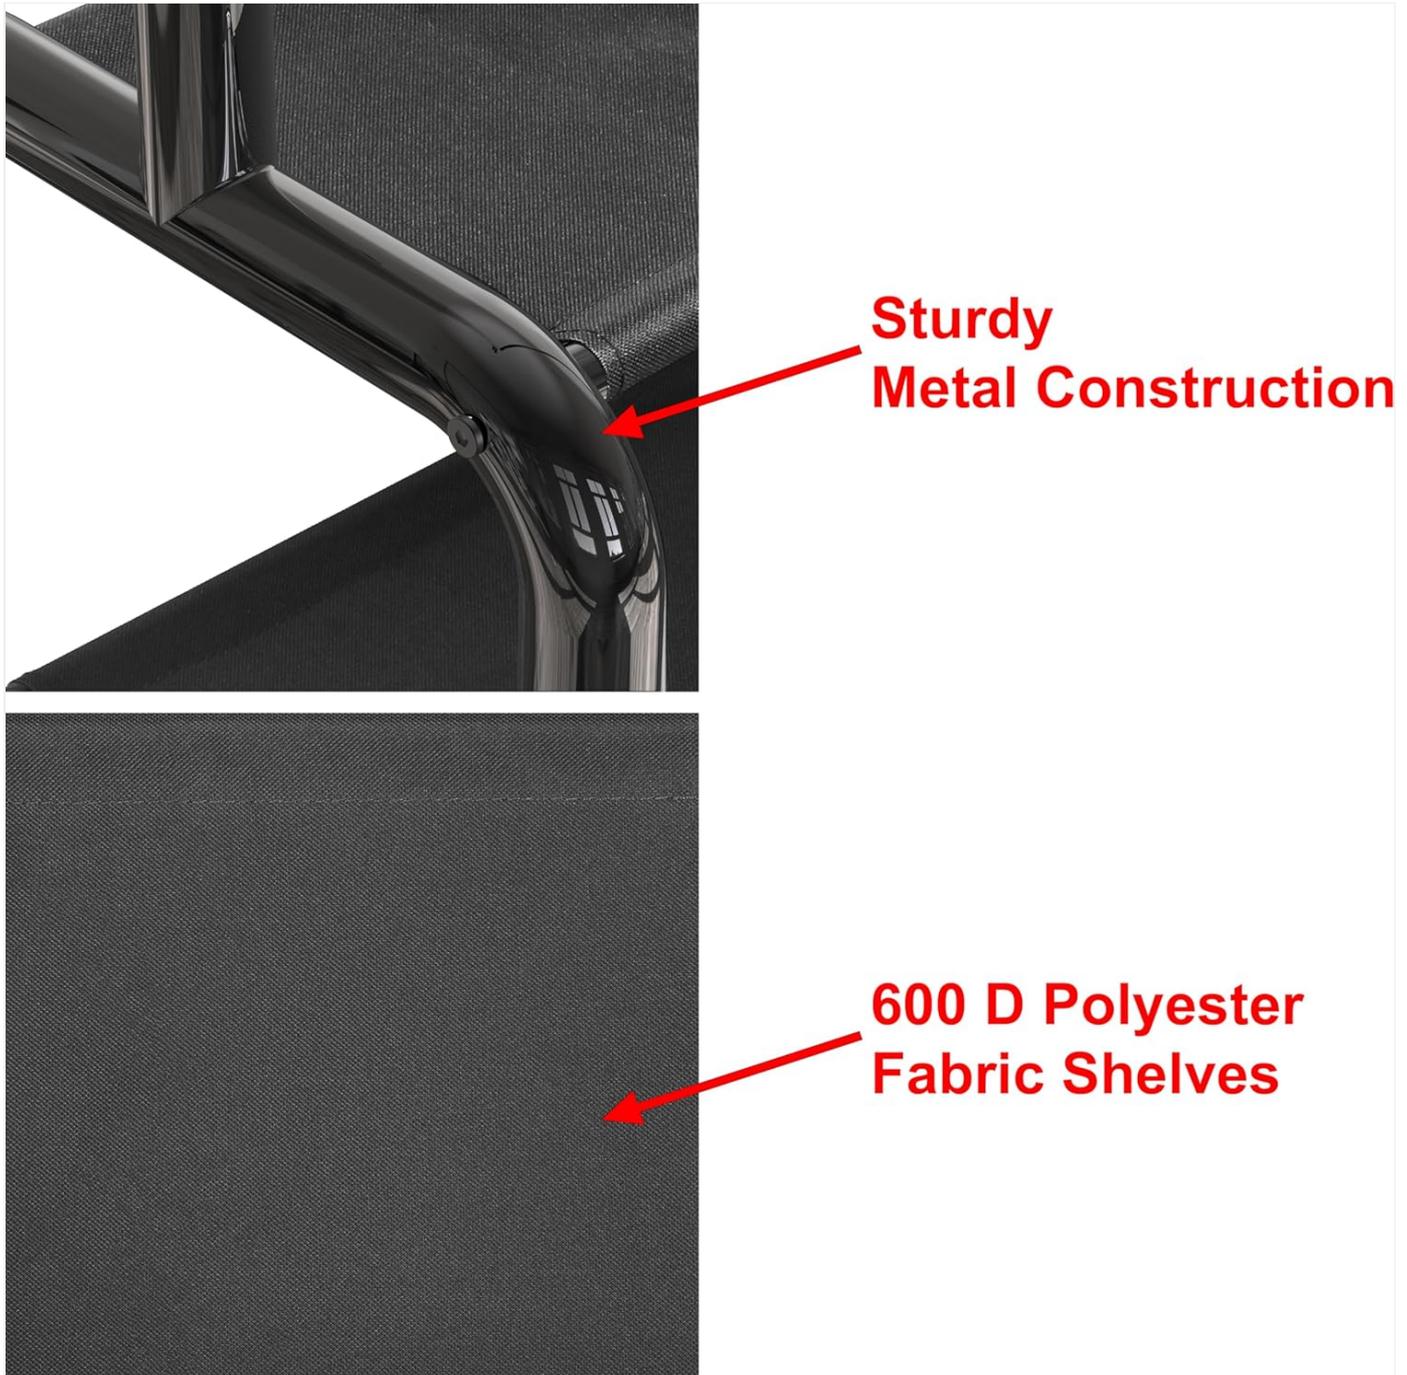


Image: A detailed view highlighting the robust metal frame and the durable 600D polyester fabric used for the shelves.

ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your garment rack:

- Step 1: Assemble the Base Frames.** Connect the vertical support poles to the U-shaped base frames. Secure with the provided hardware using the Allen wrench.
- Step 2: Install Fabric Shelves.** Slide the two fabric shelves onto the designated supports on the vertical poles. Ensure the fabric is taut and sits securely.
- Step 3: Connect Top Horizontal Rod.** Attach the top horizontal rod to the upper ends of the vertical poles. Secure with hardware.
- Step 4: Attach Side Hooks.** Insert the tree-shaped side hooks into the pre-drilled holes on the upper vertical poles. Ensure they are firmly in place.

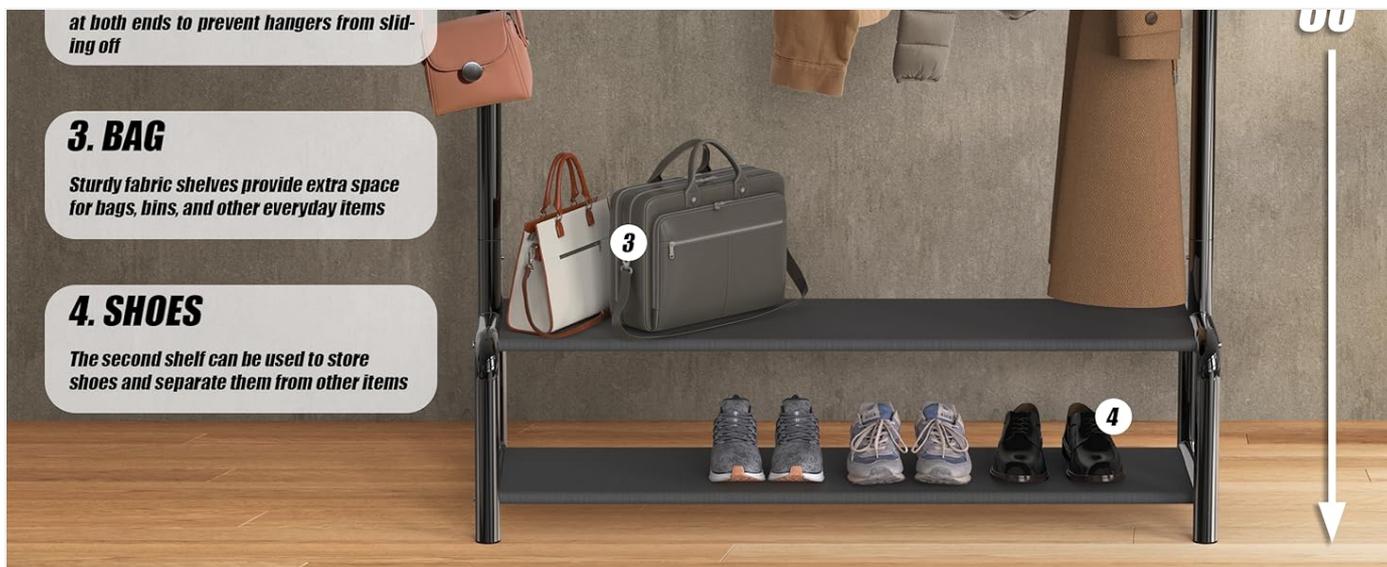


Image: Detailed views highlighting key features: the built-in stoppers on the hanging rod, the multi-pronged side hooks for accessories, and the durable fabric shelves.

OPERATING INSTRUCTIONS

Your Simple Houseware Garment Rack is designed for versatile storage. Here's how to use its features:

- **Hanging Rod:** Use the top horizontal rod to hang garments on hangers. The built-in stoppers at each end prevent hangers from sliding off.
- **Side Hooks:** Utilize the tree-shaped side hooks for hanging hats, bags, scarves, or other accessories.
- **Fabric Shelves:** The two sturdy fabric shelves provide space for folded clothing, shoes, storage bins, or other items. Distribute weight evenly across the shelves.



MAINTENANCE

To ensure the longevity of your garment rack:

- **Cleaning:** Wipe metal parts with a soft, damp cloth. For fabric shelves, spot clean with mild soap and water if necessary. Avoid harsh chemicals.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if needed.
- **Placement:** Avoid placing the rack in direct sunlight or in areas with high humidity to prevent material degradation.

TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rack is wobbly or unstable.	Loose connections or uneven weight distribution.	Ensure all screws are tightened. Redistribute items to balance the load.
Hangers slide off the rod.	Hangers are too wide or stoppers are not properly installed.	Use appropriately sized hangers. Verify stoppers are securely in place.
Fabric shelves sag.	Overloaded shelves or fabric not taut.	Reduce weight on shelves. Ensure fabric is stretched tightly during assembly.

SPECIFICATIONS

Brand: Simple Houseware

Model Number: BO-07H-K

Color: Black

Material: Metal frame, 600D Polyester fabric shelves

Product Dimensions: 13"D x 52"W x 60"H

Installation Type: Free Standing

Special Features: 2 Tier Bottom Shelves, Stylish Design Side Hooks, Hanger Stoppers

Finish Type: Powder Coated

Number of Shelves: 2

Maximum Weight Recommendation: 10 Pounds (per shelf/rod, distribute evenly)

Assembly Required: Yes

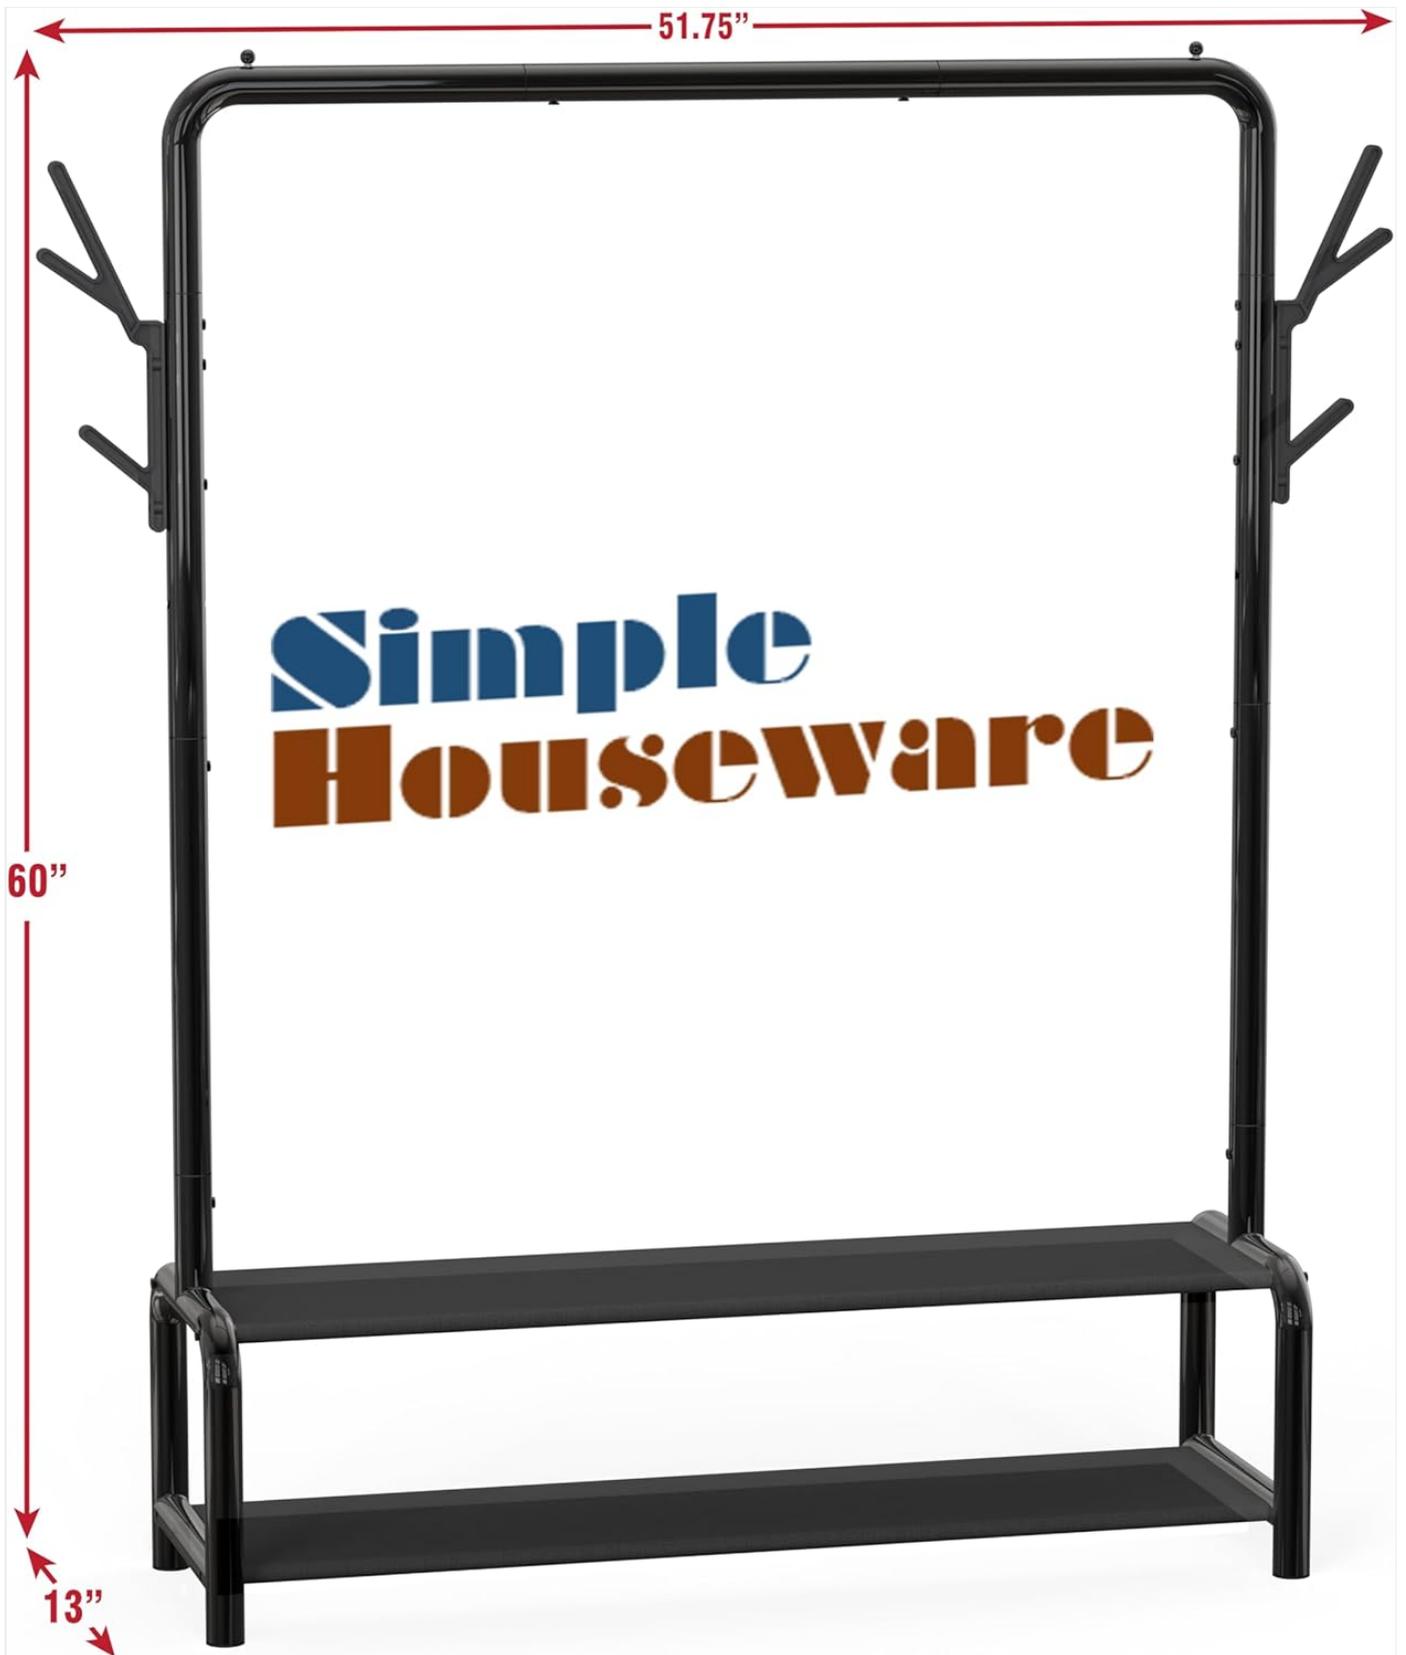


Image: A clear illustration of the garment rack with its key dimensions labeled for easy reference.

