

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Larex](#) /

› [LAREX Baby Swing Infant Swing Electric Toddler Baby Rocker Portable for Newborn Boy Girl User Manual](#)

Larex BB006K

LAREX Baby Swing User Manual

Model: BB006K

INTRODUCTION

Thank you for choosing the LAREX Baby Swing. This electric infant swing is designed to provide a safe, comfortable, and entertaining environment for your newborn or toddler. With multiple sway speeds, built-in melodies, Bluetooth connectivity, and convenient remote control, it offers a versatile solution for soothing and engaging your baby. Please read this manual thoroughly before use to ensure proper operation and safety.



The LAREX Baby Swing, designed for comfort and ease of use.

IMPORTANT SAFETY WARNINGS

FAILURE TO FOLLOW THESE WARNINGS AND THE INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

- **FALL HAZARD:** Children have suffered head injuries falling from product.
- **ALWAYS** use restraints. Adjust to fit snugly.
- **NEVER** lift or carry baby in product.
- **STOP** using product when baby starts trying to sit up or has reached 9KG (approximately 20 lbs), whichever comes first.
- The upright position is only for children who have developed enough upper body control to sit up without tipping forward.

- **ALWAYS** place product on floor. Never use on any elevated surface.
- **SUFFOCATION HAZARD:** Babies have suffocated when seats tipped over on soft surfaces.
- **NEVER** use on a bed, sofa, cushion, or other soft surface.
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

WARNING

FALL HAZARD: Children have suffered head injuries falling from product.

- **ALWAYS** use restraints. Adjust to fit snugly.
- **NEVER** lift or carry baby in product.
- **STOP** using product when baby starts trying to sit up or has reached 9KG.whichever comes first .
- The upright position is only for children who have developed enough upper body control to sit up without tipping forward.
- **ALWAYS** place product on floor. Never use on any elevated.

SUFFOCATION HAZARD: Babies have suffocated when seats tipped over on soft surfaces.

- **NEVER** use on a bed, sofa, cushion, or other soft surface.
 - Stay near and watch baby during use. This product is not safe for sleep or unsupervised use.
- If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet

WHAT'S INCLUDED

Your LAREX Baby Swing package should contain the following components:

- Baby Swing Unit (Base and Seat Assembly)
- Reversible Plush Seat Pad and Pillow
- Remote Control
- Power Adapter
- Mosquito Net with Canopy (optional attachment)

SETUP

The LAREX Baby Swing features a compact and detachable design for easy assembly and transport.

1. **Unpack Components:** Carefully remove all components from the packaging.
2. **Assemble Base and Seat:** The swing is designed for one-step assembly. Align the seat with the base and ensure it clicks securely into place.
3. **Unlock Swing Function:** Before using the swing function, locate the button on the swing mechanism and push it up to unlock. This allows the swing to move freely.
4. **Attach Seat Pad:** Place the reversible plush seat pad and pillow into the seat, ensuring the harness straps are threaded through the appropriate openings.
5. **Connect Power:** Plug the power adapter into the swing and then into a standard electrical outlet. The plug-in option helps save on batteries.
6. **Optional Mosquito Net:** If desired, attach the mosquito net with canopy to protect your baby from bites.

Easy Storage&Transport

Compact and detachable design fits anywhere in your home



This product is not for sleep or unsupervised use.

The swing's compact and detachable design allows for easy setup and storage.

5 Swing Speeds



Timer Settings:
8/15/30 min



! Push the button up to unlock before using the swing.

Up to Unlock
Down to Lock



This product is not for sleep or unsupervised use.

Remember to push the button up to unlock the swing function before use.

OPERATING INSTRUCTIONS

The LAREX Baby Swing offers intuitive controls via its touch panel and included remote control.

Powering On/Off

- Press the **Power Button** on the touch panel or remote control to turn the swing on or off.

Adjusting Swing Speeds

The swing features 5 gentle side-to-side sway speeds to suit your baby's preference.

- Use the **Speed Adjustment Buttons** (marked with '+' and '-') on the touch panel or remote to increase or decrease the swing speed.

Setting the Timer

You can set a timer for the swing to operate for a specific duration.

- Press the **Timer Button** to cycle through the available settings: 8, 15, or 30 minutes.

Music and Bluetooth

Keep your baby entertained with 10 built-in melodies or connect your own device via Bluetooth.

- Press the **Music Button** to play the built-in melodies.
- Use the **Next Melody Button** to skip to the next tune.
- Adjust the volume using the **Volume Buttons** (marked with '+' and '-').
- To use Bluetooth, ensure Bluetooth is enabled on your device and select the LAREX swing from the available devices.



The touch panel and remote control provide convenient operation.

Give Mom's Arms a Rest

0-6
MONTHS

UP TO 20
POUNDS



This product is not for sleep or unsupervised use.

The swing helps entertain your baby and gives parents a moment of rest.

MAINTENANCE

Cleaning

The seat pad and pillow are designed for easy cleaning.

- The reversible plush seat pad and pillow are machine washable. Refer to the care instructions label on the fabric for specific washing guidelines.
- Wipe down the plastic and metal parts of the swing with a damp cloth and mild soap. Do not immerse the base in water.

Machine Washable Seat Pad&Headrest



This product is not for sleep or unsupervised use.

The seat pad and headrest are machine washable for convenient cleaning.

Storage

The lightweight and detachable design allows for simple storage.

- To store, detach the seat from the base. This makes the unit more compact and easier to fit in any room or closet.
- Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

If you encounter any issues with your LAREX Baby Swing, please refer to the following common solutions:

- **Swing Not Moving:** Ensure the swing function is unlocked by pushing the button up. Check that the power adapter is securely plugged into both the swing and the wall outlet.

- **Music Not Playing/Low Volume:** Verify the music is turned on and the volume is increased using the control panel or remote. Ensure Bluetooth is properly connected if playing from an external device.
- **Remote Control Not Working:** Check the battery in the remote control. Ensure there are no obstructions between the remote and the swing's sensor.
- **Unusual Noises:** Ensure all parts are securely assembled. Check for any foreign objects that might be obstructing the swing mechanism.

If the problem persists after attempting these steps, please contact LAREX customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Product Dimensions	26.5"D x 24.5"W x 28"H (67.3 x 62.2 x 71.1 cm)
Item Model Number	BB006K
Maximum Weight Recommendation	20 Pounds (9.1 kg)
Recommended Age	0-6 Months
Material Type	Aluminum
Care Instructions	Machine Wash (seat pad)
Batteries Required	Yes (1 Lithium Metal battery included for remote)
Is Portable	Yes
Item Weight	8.8 pounds (4 kg)

WARRANTY AND SUPPORT

LAREX is committed to providing high-quality products and excellent customer service. For any questions, concerns, or warranty inquiries regarding your baby swing, please contact LAREX customer support through the retailer's platform or the official LAREX website. Please retain your proof of purchase for warranty validation.