

[Manuals.plus](#) /

› [LUXSURE](#) /

› LUXSURE Key Finder Instruction Manual

LUXSURE KF06F

LUXSURE Key Finder Instruction Manual

Model: KF06F

INTRODUCTION

The LUXSURE Key Finder is a wireless item locator system designed to help you quickly find misplaced items such as keys, remote controls, wallets, and more. Utilizing radiofrequency (RF) technology, it provides a loud beeping sound and a red LED flashlight to guide you to your lost belongings, even through walls and cushions. This manual provides detailed instructions for setting up, operating, and maintaining your key finder.

PACKAGE CONTENTS


- Transmitter (1 unit)
- Receivers (6 units)
- Button Cells (6 units) - *Note: Transmitter requires 2 AAA batteries, not included.*
- Keyrings (6 units)
- Stickers (6 units)
- Pry Opener (1 unit)

PACKAGE INCLUDE

4.2"



3.3"

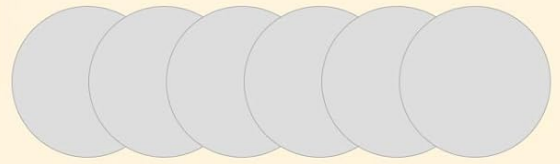

2 AAA Batteries
(Not Include)



Image: All components included in the LUXSURE Key Finder package.

SETUP

1. Transmitter Battery Installation

1. Locate the battery compartment on the back of the transmitter.
2. Open the battery cover.
3. Insert 2 AAA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Close the battery cover securely.

Perfect Gift

No Longer Searching for Keys



Image: Step-by-step guide for installing AAA batteries in the transmitter.

2. Receiver Battery Installation/Replacement

1. Use the provided pry opener to gently open the receiver casing.
2. Insert the button cell battery (CR1616) with the positive side facing outwards.
3. Carefully close the back cover until it clicks securely into place.

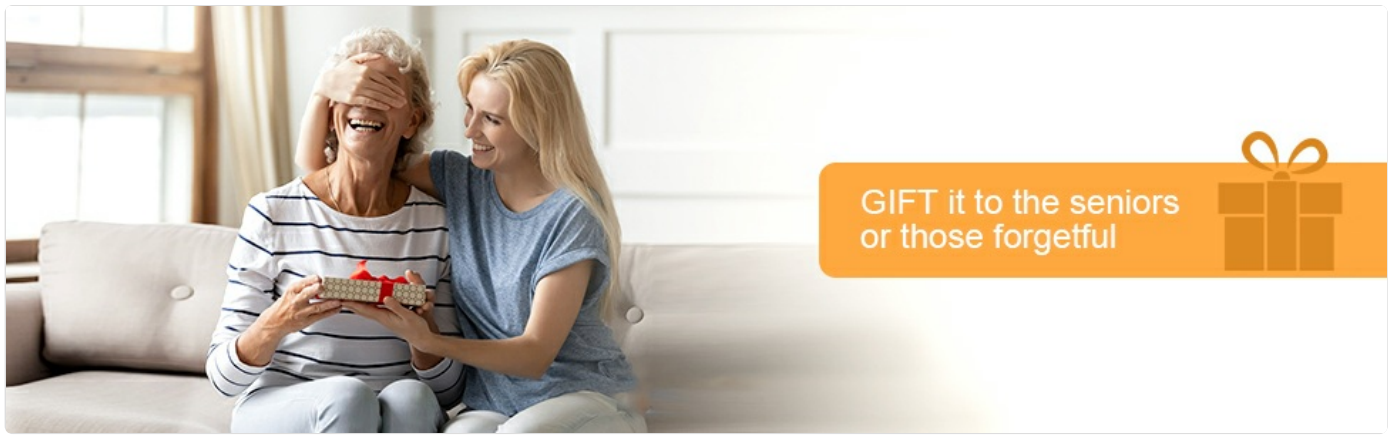


Image: Visual guide for button cell installation/replacement in receiver tags.

3. Attaching Receivers to Items

- **For keys or items with loops:** Attach a keyring through the hole on the receiver, then attach the keyring to your item.
- **For flat surfaces (e.g., remote controls, phones):** Use the provided double-sided stickers to adhere the receiver to the item. Ensure the surface is clean and dry before applying.
- **For wallets or bags:** The thin design of the receiver allows it to be placed inside a wallet or a pocket in a bag.



LOUDER SOUND AND FARTHER DISTANCE

 90 Db

 131 Ft



Image: Examples of attaching receivers to various items.

OPERATING INSTRUCTIONS

Locating a Lost Item

1. Identify the color-coded button on the transmitter that corresponds to the receiver attached to your lost item.
2. Press the corresponding button on the transmitter.
3. The receiver will emit a loud 90dB beeping sound and flash a red LED light, guiding you to its location.
4. The RF signal can penetrate through various obstacles, allowing you to locate items up to 131 feet away in open air.

ONE-CLICK TO FIND




90Db Volume

Indicator light

Image: One-click operation to find your items.



STICKERS

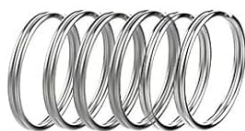

KEYRINGS

Image: Demonstrating the loud sound and far distance capability of the key finder.

Your browser does not support the video tag.

Video: Official product video demonstrating the key finder's functionality and ease of use.

MAINTENANCE

Battery Replacement

Refer to the "Receiver Battery Installation/Replacement" section under Setup for detailed instructions on replacing the button cell batteries in the receivers. Replace batteries when the beeping sound becomes faint or the LED light dims.

Cleaning

Wipe the transmitter and receivers with a soft, dry cloth. Do not use abrasive cleaners or immerse the devices in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Receiver does not beep or flash.	Dead battery in receiver. Out of range. Incorrect button pressed on transmitter.	Replace receiver battery (CR1616). Move closer to the item. Ensure the correct color-coded button is pressed.
Transmitter not working.	Dead AAA batteries. Incorrect battery installation.	Replace AAA batteries. Check battery polarity and re-install.
Short range or weak signal.	Low batteries in transmitter or receiver. Excessive interference from other electronic devices.	Replace batteries in both units. Move away from sources of interference.

SPECIFICATIONS

- **Beeping Volume:** 90dB
- **Transmitter RF Range:** 115 ft (tested in open air), up to 131 ft
- **Receiver Dimensions (H x W x D):** 1.8" x 1.2" x 0.19"
- **Receiver Weight:** 0.14oz / 4g (without battery)
- **Transmitter Size:** 4.0" x 1.7" / 10 cm x 4.3 cm
- **Transmitter Power:** 2 x AAA batteries (not included)
- **Receiver Power:** 1 x CR1616 button cell (included)
- **Connectivity Technology:** RF (Radio Frequency)
- **Model Number:** KF06F
- **Brand:** LUXSURE

WARRANTY AND SUPPORT

For warranty information or technical support, please contact LUXSURE customer service through the retailer where the product was purchased or visit the official LUXSURE website. Please retain your proof of purchase for warranty claims.

LUXSURE Store: [Visit LUXSURE Store on Amazon](#)