

Manuals.plus /
› AKCISOT /
› AKCISOT 10 Inch Silent Non-Ticking Wall Clock Instruction Manual

AKCISOT AKCISOT116

AKCISOT 10 Inch Silent Non-Ticking Wall Clock Instruction Manual

Model: AKCISOT116 | Brand: AKCISOT

1. INTRODUCTION

Thank you for choosing the AKCISOT 10 Inch Silent Non-Ticking Wall Clock. This manual provides essential information for the proper setup, operation, and maintenance of your new clock. Designed for clear readability and quiet performance, this analog wall clock is suitable for various indoor environments.

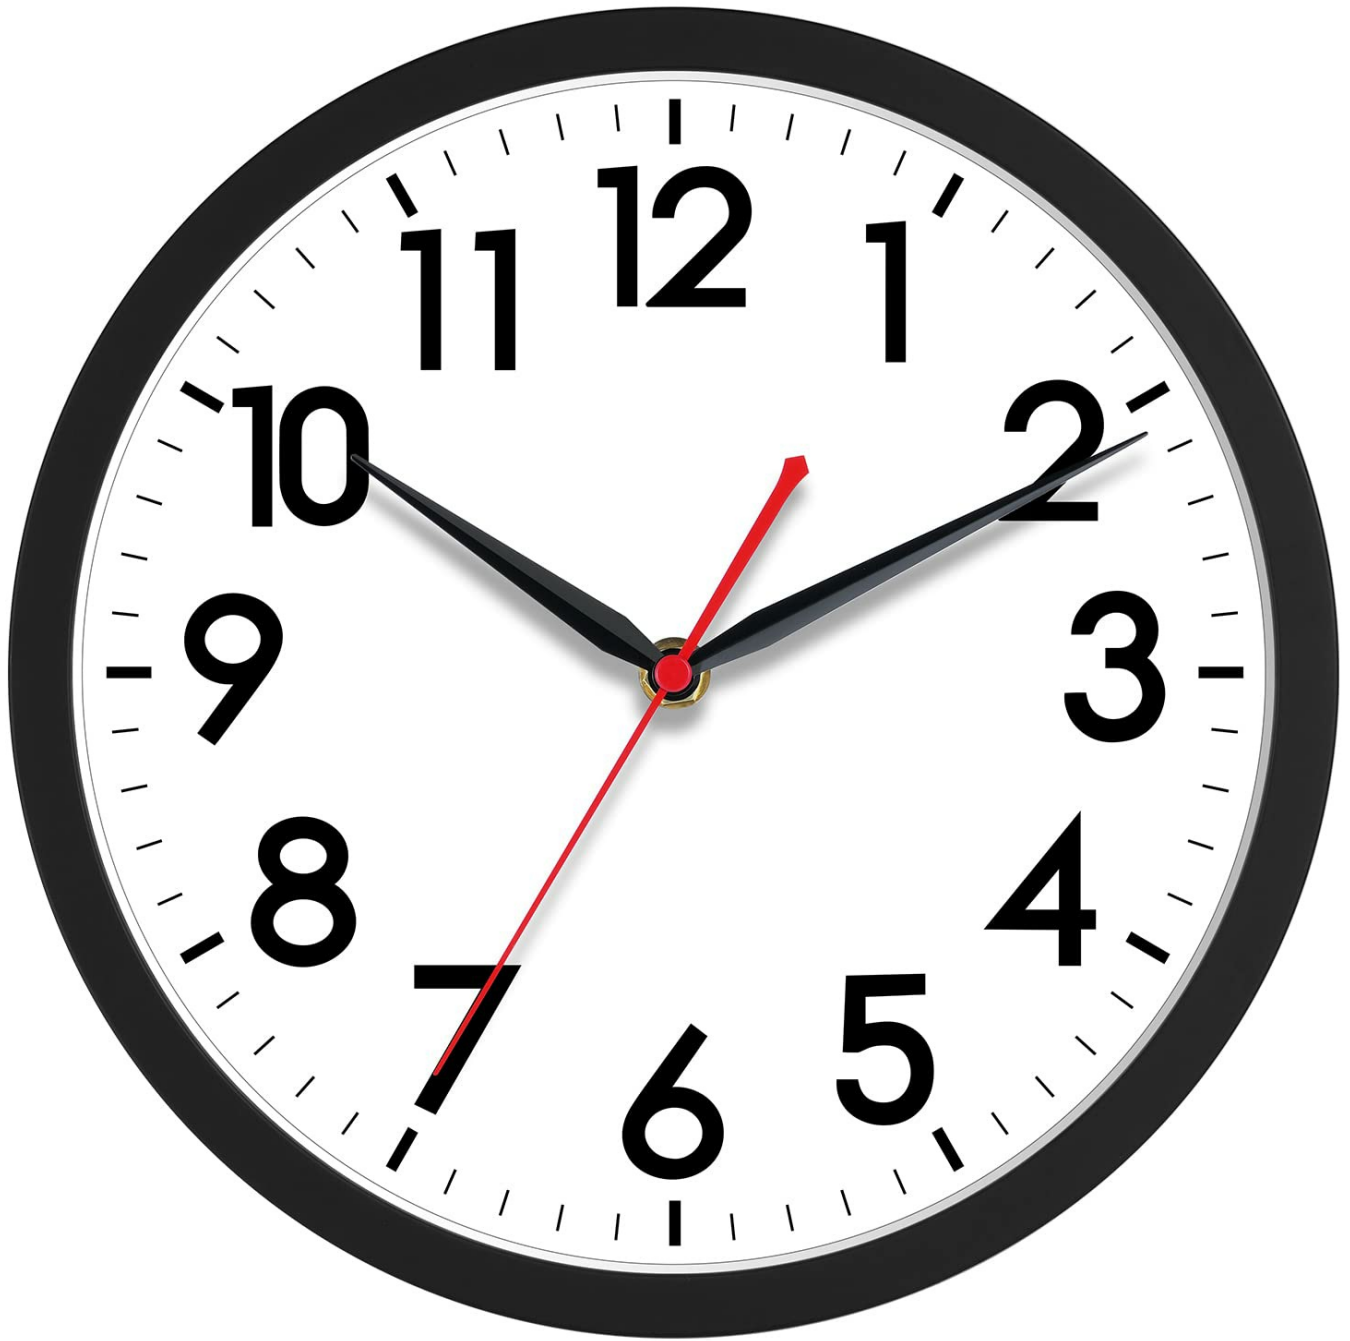


Figure 1: AKCISOT 10 Inch Silent Wall Clock (Black)

2. PRODUCT OVERVIEW

The AKCISOT Wall Clock features a classic design with large, bold numerals for easy visibility. Its silent sweep movement ensures a non-ticking environment, ideal for bedrooms, offices, and other quiet spaces. The clock is battery-operated for convenience and easy installation.

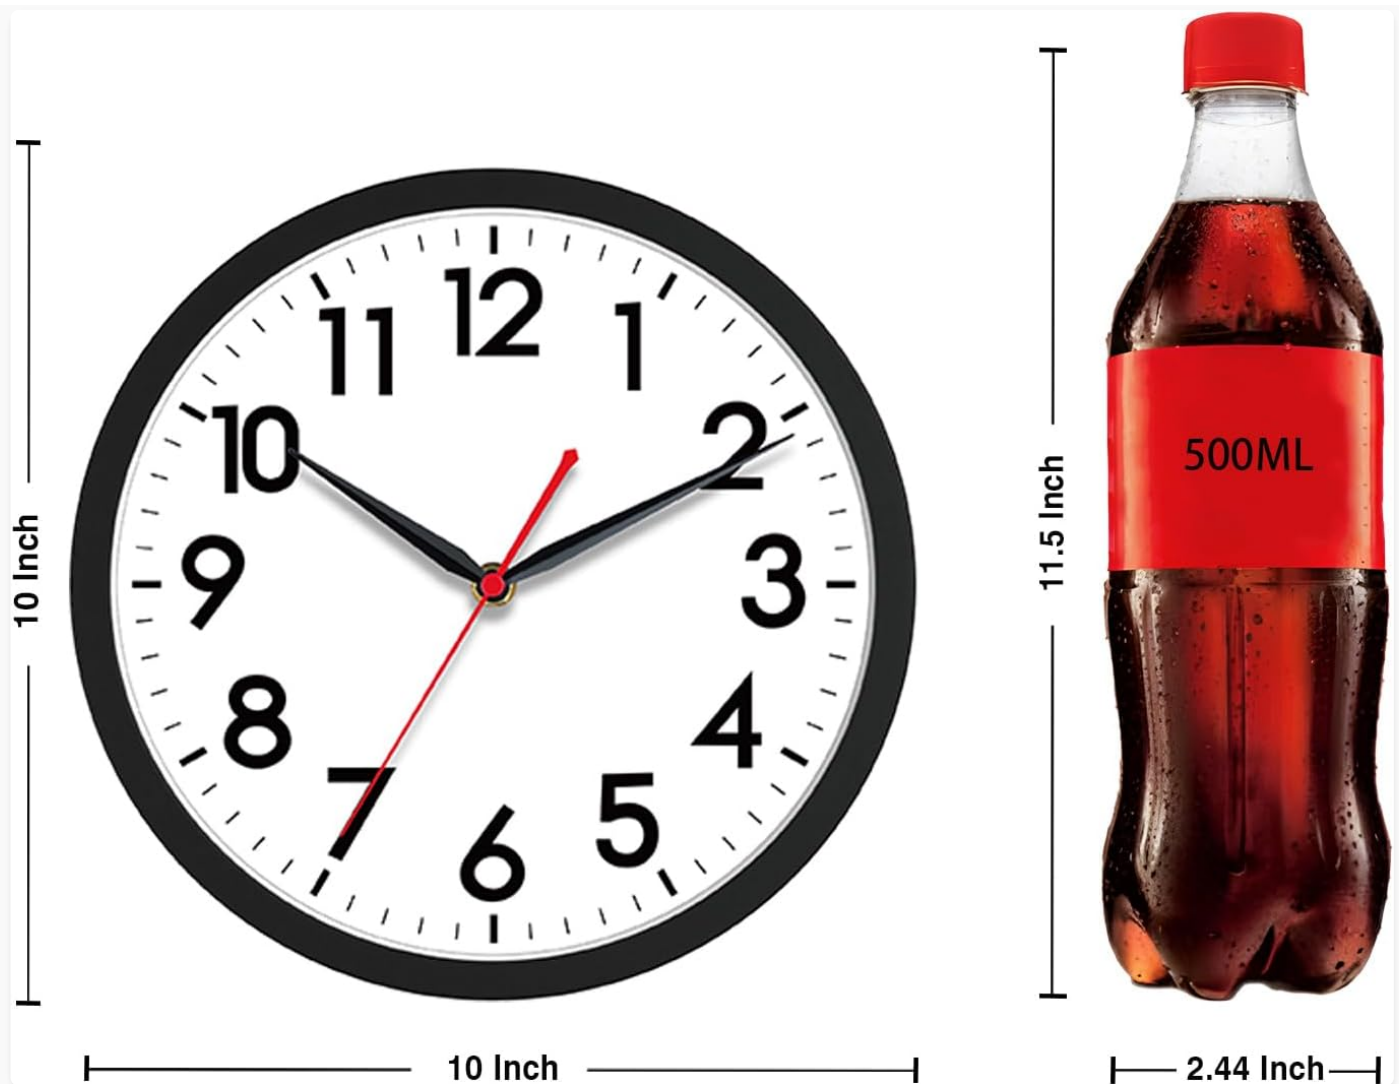


Figure 2: Product dimensions (10 inches diameter) for the AKCISOT Wall Clock.

3. WHAT'S INCLUDED

Upon opening your AKCISOT Wall Clock package, you should find the following items:

- 1 x AKCISOT Wall Clock (10 Inch, Black)
- 2 x Mounting Hooks

What You Get ?



Figure 3: Contents of the AKCISOT Wall Clock package, including the clock and mounting hooks.

4. SPECIFICATIONS

Feature	Detail
Brand	AKCISOT
Model Number	AKCISOT116
Color	Black
Display Type	Analog
Style	Classic
Special Feature	Silent Clock

Product Dimensions	10"W x 1.35"H
Power Source	Battery Powered (1 AA battery required, not included)
Mounting Type	Wall Mount
Watch Movement	Quartz
Material Type	Plastic
Item Weight	0.6 Pounds

5. SETUP AND INSTALLATION

5.1 Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
3. Close the battery compartment cover securely.

5.2 Setting the Time

1. Locate the time setting knob on the back of the clock, usually a small wheel or dial.
2. Gently turn the knob to adjust the hour and minute hands to the correct time.

5.3 Mounting the Clock

1. Choose a suitable location on a wall for your clock.
2. Use one of the provided mounting hooks or a sturdy nail/screw. Insert the hook/nail into the wall at your desired height.
3. Align the keyhole slot on the back of the clock with the hook/nail on the wall and carefully hang the clock. Ensure it is stable and level.



Figure 4: Back of the clock with battery compartment, time setting knob, and keyhole for mounting.

Your browser does not support the video tag.

Video 1: Demonstrates battery installation and silent operation of the AKCISOT Wall Clock.

6. OPERATION

Your AKCISOT Wall Clock is designed for simple and reliable timekeeping. Once the battery is installed and the time is set, the clock will operate continuously. The silent sweep movement ensures that there is no audible ticking sound, providing a peaceful environment.

Your browser does not support the video tag.

Video 2: Highlights the silent, non-ticking operation and clear, bold numbers of the AKCISOT Wall Clock.

7. MAINTENANCE

7.1 Cleaning

To clean your clock, gently wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these may damage the finish or the clock face.

7.2 Battery Replacement

When the clock begins to lose time or stops functioning, it is time to replace the AA battery. Follow the battery installation steps (Section 5.1) to replace the old battery with a new one. Ensure careful handling of the battery compartment's metal tabs to prevent bending or damage, which could affect connectivity.

8. TROUBLESHOOTING

- **Clock Not Running:** Check if the AA battery is inserted correctly with the correct polarity (+/-). Ensure the battery is fresh.
- **Incorrect Time:** Adjust the time using the setting knob on the back of the clock. If the time consistently becomes incorrect, replace the battery.
- **Intermittent Operation:** Ensure the battery is making good contact. Gently check the metal tabs in the battery compartment to ensure they are not bent and are providing a firm connection to the battery.

9. WARRANTY AND SUPPORT

The AKCISOT Wall Clock comes with a **1-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. For warranty claims or technical support, please contact AKCISOT customer service through the retailer where the product was purchased or visit the official AKCISOT brand store on Amazon.

AKCISOT Brand Store: [Visit the AKCISOT Store on Amazon](#)

© 2026 AKCISOT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B09YL92XR9>

More documents and user manuals: <https://manuals.plus/>